

[Manuals.plus](#) /

› [Loolinn](#) /

› Loolinn X26 Mini Drone User Manual

## Loolinn X26 drone

# Loolinn X26 Mini Drone User Manual

Model: X26 Drone

## INTRODUCTION

---

This user manual provides comprehensive instructions for operating and maintaining your Loolinn X26 Mini Drone. Designed for ease of use and safety, this drone features auto anti-collision technology, 360° flip capabilities, and a hand-controlled mode, making it an ideal choice for young pilots. Please read this manual thoroughly before first use to ensure safe and optimal performance.



Image: The Loolinn X26 Mini Drone, showcasing its compact design with propeller guards, alongside its dedicated remote control.

## WHAT'S IN THE BOX

---

Verify that all components are present in the package:

- 1 x Drone for kids
- 1 x Remote Control
- 1 x User Manual
- 4 x Propeller (replacement)
- 2 x Rechargeable Battery
- 2 x Charger
- 1 x Screwdriver

# Two Batteries Included

total 14 minutes flying time



Image: Two rechargeable batteries for the Loolinn X26 Mini Drone, indicating extended flight time.

## SAFETY PRECAUTIONS

---

Adhering to these safety guidelines is crucial for a safe and enjoyable experience:

- Always operate the drone in an open area, free from obstacles and people.
- Ensure all propellers are securely covered by the durable shell to prevent injury to fingers.
- Keep the drone away from water and moisture.
- Do not modify or disassemble the drone or its components.
- Supervise children during operation. Recommended for ages 8 and above.
- Only use the provided chargers and batteries.

# Safe

all propellers are covered with a shell for kids' safety



Image: A close-up view of the Loolinn X26 Mini Drone's propeller guards, highlighting the safety feature designed to protect users.

## SETUP

---

### Charging the Battery

The drone is powered by a rechargeable Lithium-Ion battery. Before first use, fully charge the battery. Connect the provided charger to the battery and a suitable USB power source. The charging time is approximately 73 minutes per battery. Ensure the battery is cool before charging.

### Installing Batteries in Remote Control

The remote control requires four AA batteries (not included). Open the battery compartment on the back of the remote control using the provided screwdriver. Insert the batteries, ensuring correct polarity, then close the compartment.



Image: The rear view of the Loolinn X26 Mini Drone's remote control, showing the battery compartment.

## Drone Assembly

The Loolinn X26 Mini Drone comes largely pre-assembled. Ensure the battery is correctly inserted into the drone's compartment. Verify that all propellers are securely attached and free from obstruction.

## OPERATING INSTRUCTIONS

---

### Powering On/Off

To power on the drone, insert the charged battery and connect it. The drone's lights will illuminate. To power on the remote control, press the power button. To power off, disconnect the battery from the drone and turn off the remote control.

### Pairing the Drone

Place the drone on a flat surface. Power on the drone, then power on the remote control. Push the left joystick up and then pull it down. The drone's lights will stop blinking, indicating successful pairing.

### Basic Flight Controls

The remote control allows for precise flight. The left joystick controls altitude (up/down) and rotation (left/right). The right joystick controls forward/backward and left/right movement. Practice in an open space until comfortable with the controls.



Image: A child using the remote control to fly the Loolinn X26 Mini Drone, demonstrating its ease of use for young users.

## Special Features

- **Auto Anti-Collision Technology:** Built-in infrared sensors automatically detect and avoid obstacles, preventing crashes into walls, furniture, or people. This feature enhances safety and durability.



Image: The Loolinn X26 Mini Drone actively avoiding an obstacle, illustrating its auto anti-collision technology.

- **360° Flip:** Press the designated button on the remote control to perform exciting 360-degree flips, adding an element of thrill to drone flying.



Image: The Loolinn X26 Mini Drone mid-air, executing a 360-degree flip stunt.

- **Hand-Controlled Mode:** The drone can be controlled using hand gestures without the remote control, offering an intuitive and engaging flying experience.



Image: A father and child interacting with the Loolinn X26 Mini Drone, demonstrating the hand-controlled mode.

## MAINTENANCE

- **Battery Care:** To prolong battery life, avoid overcharging and completely draining the batteries. Allow batteries to cool down after use before recharging. Store batteries in a cool, dry place.
- **Propeller Replacement:** If a propeller is damaged or lost, use the provided screwdriver to carefully remove the old propeller and install a new one. Ensure the correct propeller type (A or B) is installed in the corresponding position.
- **Cleaning:** Use a soft, dry cloth to clean the drone. Avoid using water or harsh chemicals, which can damage electronic components.

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                   | Possible Cause                                  | Solution                                                                   |
|-------------------------------------------|-------------------------------------------------|----------------------------------------------------------------------------|
| Drone does not power on.                  | Battery not charged or not connected properly.  | Ensure battery is fully charged and securely connected.                    |
| Drone does not respond to remote control. | Not paired or remote control batteries are low. | Re-pair the drone and remote. Replace remote control batteries.            |
| Drone drifts during flight.               | Not calibrated or minor air currents.           | Calibrate the drone on a flat surface. Adjust trim controls on the remote. |
| Propellers not spinning.                  | Obstruction or damaged propeller.               | Check for obstructions. Replace damaged propellers.                        |

## SPECIFICATIONS

| Feature                 | Detail                                                                                                        |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| Brand                   | Loolinn                                                                                                       |
| Model Name              | X26 Drone                                                                                                     |
| Special Features        | 360° Flip / Speed Adjustment, Auto Anti-Collision Technology, Easy to Fly, Great Gift for Kids, Safe for Kids |
| Age Range (Description) | 8 years and above                                                                                             |
| Color                   | Blue                                                                                                          |
| Connectivity Technology | Remote Control                                                                                                |
| Skill Level             | Beginner                                                                                                      |
| Item Weight             | 2.08 ounces                                                                                                   |
| Battery Capacity        | 380 Milliamp Hours                                                                                            |
| Maximum Range           | 98 Feet                                                                                                       |
| Material                | Metal, Plastic                                                                                                |
| Product Dimensions      | 5.1"L x 5.1"W x 1.5"H                                                                                         |

## WARRANTY AND SUPPORT

Loolinn is committed to providing excellent products and top-notch customer service. We offer:

- **30-Day Full Refund:** A full refund is available within 30 days of purchase.
- **Lifetime Customer Service:** We aim to be a trusted partner to parents and children, offering ongoing support for the lifetime of the product.
- **Quick Reply:** Expect a quick reply to inquiries within 12 hours.

For support, please refer to the contact information provided on the product packaging or the official Loolinn website.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question