



[Manuals.plus](#) /

› [Keurig](#) /

› Keurig K-Slim Single Serve Coffee Maker Instruction Manual

## Keurig K-Slim

# Keurig K-Slim Single Serve Coffee Maker Instruction Manual



Keurig K-Slim Single Serve Coffee Maker in Scarlet Red, brewing coffee into a white mug.

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Keurig K-Slim Single Serve Coffee Maker. The K-Slim coffee maker is designed for convenience and efficiency, offering a compact solution for brewing your favorite K-Cup pods.

## IMPORTANT SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## WHAT'S IN THE BOX

---

Your Keurig K-Slim coffee maker package includes the following components:

- Keurig K-Slim Brewer
- Removable Water Reservoir
- User Guide

# K·Slim®

SINGLE SERVE COFFEE MAKER  
CAFETIÈRE UNE TASSE À LA FOIS



Keurig K-Slim Single Serve Coffee Maker highlighting MultiStream Technology for enhanced flavor extraction.

## SETUP

### Initial Clean

1. Remove all packaging tape and materials from the brewer.
2. Place the brewer on a stable, level surface.
3. Plug the brewer into a grounded outlet.

### Filling the Water Reservoir

1. Remove the water reservoir lid.
2. Fill the reservoir with fresh, clean water up to the MAX fill line.
3. Replace the reservoir lid.

# K·Slim®

SINGLE SERVE COFFEE MAKER  
CAFETIÈRE UNE TASSE À LA FOIS



## MULTIPLE CUP RESERVOIR

holds up to 1.36 L (46 oz)  
of water



## SPACE-SAVING

less than 13 cm  
(5") wide



## RÉSERVOIR POUR TASSES MULTIPLES

peut contenir jusqu'à  
1,36 L (46 oz) d'eau



## ÉCONOMIE D'ESPACE

moins de 13 cm  
(5 po) de largeur



Removable 1.36 L water reservoir of the Keurig K-Slim coffee maker, shown being filled with water.

## First Brew (Cleansing Brew)

Before brewing your first cup, perform a cleansing brew to prepare the machine:

1. Place a large mug on the drip tray.
2. Lift and lower the brewer handle to close the K-Cup pod holder (do not insert a K-Cup pod).
3. Press the power button to turn on the brewer.
4. Select any brew size (e.g., 8oz) and press the brew button.
5. Discard the hot water. The brewer is now ready for use.

## OPERATING INSTRUCTIONS

### Brewing a Beverage

1. Ensure the water reservoir is filled with fresh water.
2. Place a mug on the drip tray.
3. Lift the brewer handle. The K-Cup pod holder will open.
4. Insert a K-Cup pod into the pod holder.
5. Lower the handle completely to close the pod holder.

6. The brew size buttons (8oz, 10oz, 12oz) will illuminate.
7. Select your desired brew size.
8. The brew will begin automatically.
9. Once brewing is complete, lift the handle, remove and discard the used K-Cup pod.

# K-Slim®

SINGLE SERVE COFFEE MAKER  
CAFETIÈRE UNE TASSE À LA FOIS



## MULTISTREAM TECHNOLOGY™

saturates the coffee grounds more evenly\* to extract full flavor and aroma

\*vs. leading national Keurig® K-Classic® coffee maker



## TECHNOLOGIE MULTIJET™

permet une infusion plus uniforme\* pour extraire le goût riche et tous les arômes du café

\*par rapport à la cafetière chef de file nationale Keurig® K-Classic®



Close-up view of the MultiStream Technology showerhead inside the Keurig K-Slim brewer, designed for even coffee ground saturation.

## Cup Sizes

The Keurig K-Slim offers three convenient brew sizes:

- 8 oz (237 ml)
- 10 oz (296 ml)
- 12 oz (355 ml)

# K·Slim®

SINGLE SERVE COFFEE MAKER  
CAFETIÈRE UNE TASSE À LA FOIS

## TRAVEL MUG FRIENDLY

fits a 17.78 cm (7")  
travel mug

---

## CONVIENT AUX TASSES DE VOYAGE

peut accommoder  
une tasse de voyage  
de 17,78 cm (7 po)




Top-down view of the Keurig K-Slim control panel with power button, 'Add Water' indicator, 'Descale' indicator, and brew size options.


### Travel Mug Friendly

The drip tray can be removed to accommodate taller travel mugs, up to 7 inches (17.78 cm) in height.

# K·Slim®

SINGLE SERVE COFFEE MAKER  
CAFETIÈRE UNE TASSE À LA FOIS

 **3 CUP SIZES**  
237, 296,  
and 355 ml  
(8, 10, and 12 oz)

 **3 FORMATS  
DE TASSE**  
237, 296 et 355 ml  
(8, 10 et 12 oz)



Keurig K-Slim coffee maker with its removable drip tray removed to accommodate a tall travel mug.

## CARE AND MAINTENANCE

### Cleaning the Brewer

- **Exterior:** Wipe the exterior with a damp, non-abrasive cloth.
- **Drip Tray:** The drip tray and its cover are removable for easy cleaning. They are top-rack dishwasher safe.
- **Water Reservoir:** The water reservoir can be removed and cleaned with mild soap and water. Rinse thoroughly.
- **K-Cup Pod Holder:** The K-Cup pod holder can be removed for cleaning. Wash with mild soap and water.

### Descaling the Brewer

Over time, calcium deposits (scale) can build up in your coffee maker, affecting performance and flavor. The 'DESCALE' indicator light on the control panel will illuminate when it's time to descale your brewer. Refer to the full descaling instructions in the detailed user manual or on the Keurig website for the complete process, typically involving a descaling solution and several rinse cycles.

## TROUBLESHOOTING

- **Brewer Not Turning On:** Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functional.

- **'Add Water' Light On:** The water reservoir needs to be refilled. Ensure it is properly seated after refilling.
- **Coffee Not Brewing:** Check if a K-Cup pod is properly inserted and the handle is fully lowered. Ensure the water reservoir has sufficient water.
- **Coffee Not Hot Enough:** Ensure the brewer has completed its heating cycle before brewing. Descaling may also improve heating performance.
- **Brew Interrupted:** If the brew stops prematurely, lift and lower the handle, then select the brew size again. If the issue persists, perform a cleansing brew.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Keurig
Model Name	K-Slim
Model Number	062151516717
Color	Scarlet Red
Product Dimensions	18.63"D x 7"W x 14.88"H
Item Weight	7.9 pounds
Water Reservoir Capacity	1.36 L (up to 4 cups)
Brew Sizes	237 ml (8 oz), 296 ml (10 oz), 355 ml (12 oz)
Special Feature	Removable Tank, MultiStream Technology
Coffee Input Type	K-Cup pods
Voltage	112 Volts
Operation Mode	Fully Automatic

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your Keurig K-Slim coffee maker or visit the official Keurig website. The manufacturer's warranty typically covers defects in materials and workmanship under normal household use.