

Kohler K-27416-4-BN

KOHLER Tone Widespread Bathroom Sink Faucet

Model: K-27416-4-BN | Brand: Kohler

1. PRODUCT OVERVIEW

The KOHLER Tone widespread bathroom sink faucet combines clean lines with a soft teardrop base, offering a modern aesthetic. This 3-hole widespread faucet is designed for easy installation and features two lever handles for precise control of hot and cold water. It is engineered to provide efficient water usage while maintaining performance.



Image: The KOHLER Tone widespread bathroom sink faucet, showcasing its design and Vibrant Brushed Nickel finish.

Key Features:

- **Two Lever Handles:** Offers separate control for hot and cold water.
- **Optimal Spout Reach:** Features a 5-15/16" (151 mm) spout reach.
- **Efficient Flow Rate:** Provides a 1.2 gpm (4.5 lpm) maximum flow rate at 60 psi (4.14 bar).
- **Durable Ceramic Disc Valves:** Exceeds industry longevity standards for reliable, leak-free performance.

- **Integrated Clicker Drain:** Includes a clicker drain with tailpiece and overflow for convenient operation.

2. SETUP AND INSTALLATION


This faucet is designed for 3-hole widespread installation. The unit comes preassembled for simplified setup. For detailed step-by-step instructions, please refer to the installation guide included in your product packaging. Ensure all local plumbing codes are followed during installation.



Image: Dimensional diagram of the faucet, indicating faucet height, spout reach, and handle range for installation planning.

What's in the Box:

- Fully assembled faucet.
- Touch-activated pop-up drain.
- Preassembled supply lines.

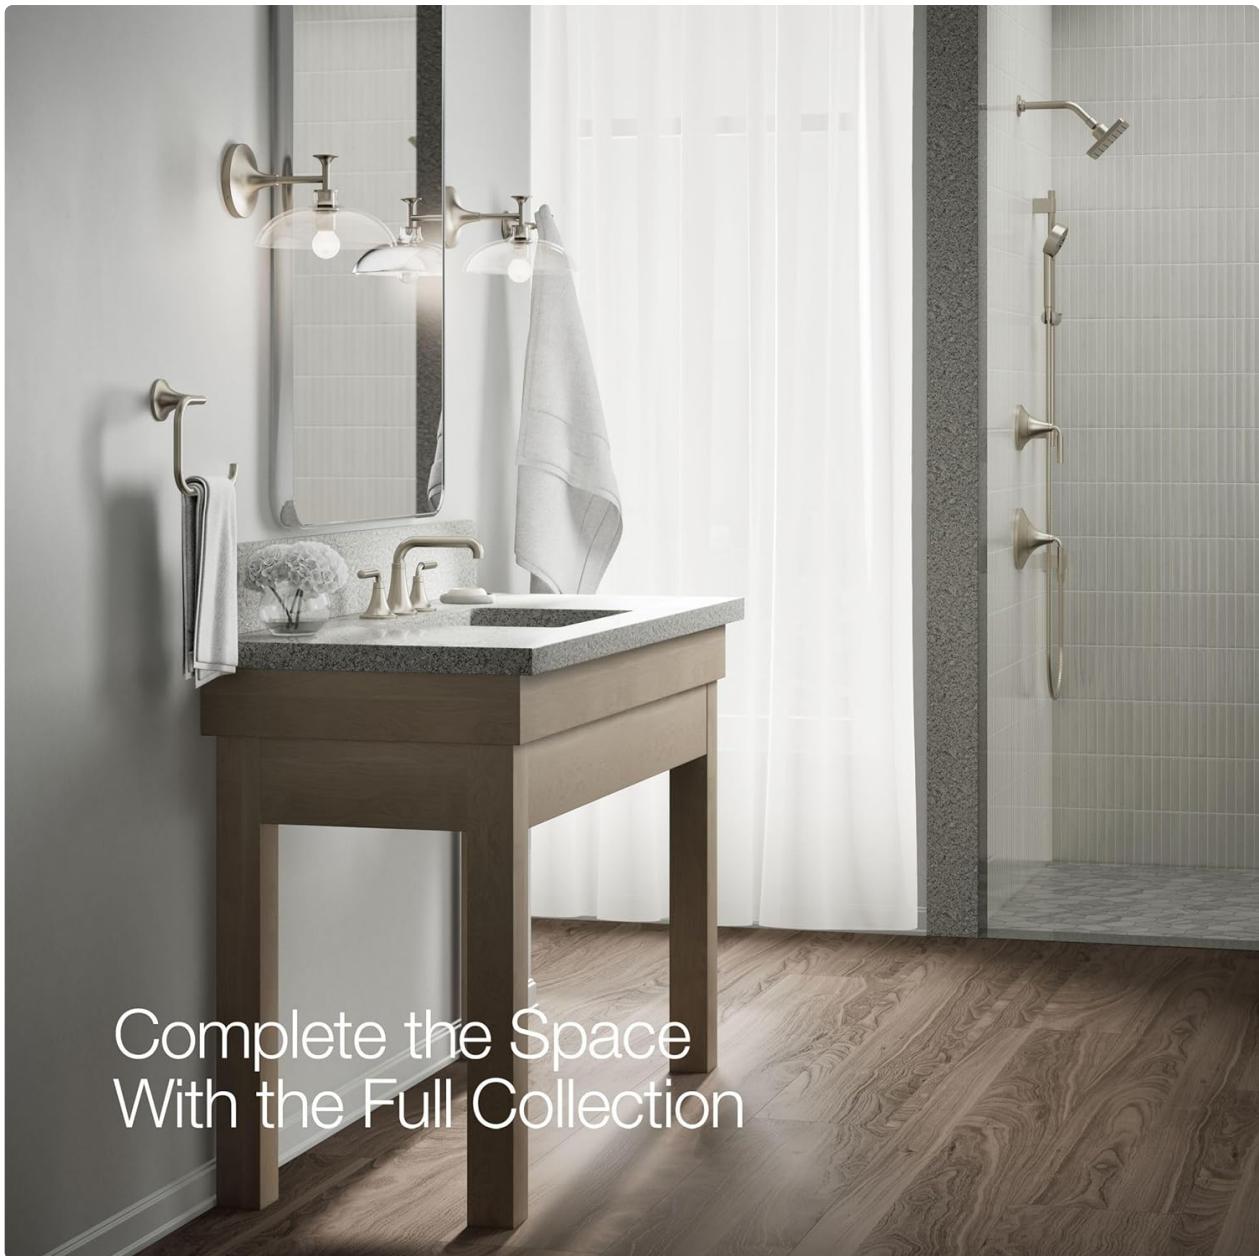

Complete the Space
With the Full Collection

Image: Visual representation of the components included with the faucet, highlighting the faucet body, pop-up drain, and supply lines.

3. OPERATING INSTRUCTIONS

The KOHLER Tone faucet features two lever handles for independent control of water temperature and flow. The left handle typically controls hot water, and the right handle controls cold water. The integrated clicker drain allows for easy opening and closing of the sink drain with a simple press.

Water Flow Control:

- To turn on the water, lift either handle.
- Adjust the water temperature by moving the handles inward (for mixed water) or using them independently.
- To increase flow, lift the handles further. To decrease flow, lower the handles.
- To turn off the water, push the handles down to their original position.

Drain Operation:

- To close the drain, press the top of the clicker drain assembly.

- To open the drain, press the top of the clicker drain assembly again.

Performance Tested to 2x Industry Standard



Image: The KOHLER Tone faucet in operation, demonstrating water flow from the spout.

4. MAINTENANCE AND CARE

Proper care and maintenance will ensure the longevity and appearance of your KOHLER Tone faucet. The Vibrant Brushed Nickel finish features ScratchShield Technology, designed to resist tarnish, corrosion, and scratches.

Cleaning Instructions:

- Clean the faucet regularly with a soft, damp cloth.
- For stubborn spots, use a mild soap and water solution, then rinse thoroughly and dry with a soft cloth.
- **Avoid:** Abrasive cleaners, harsh chemicals, scouring pads, or polishes, as these can damage the finish.
- Wipe away water spots after each use to maintain the finish's luster.

Vibrant® Finishes Feature ScratchShield® Technology

Resist Tarnish, Corrosion, and Scratches



Three Layers of Metal Coating

1. Watts Nickel
2. Brightened Nickel
3. Chrome

Image: An illustration detailing the ScratchShield Technology, showing three layers of metal coating designed to resist tarnish, corrosion, and scratches.

Ceramic Disc Valves:

The faucet is equipped with durable ceramic disc valves, engineered to prevent leaks and ensure long-lasting performance. These valves typically require no maintenance under normal operating conditions.

Durable Ceramic Valves Prevent Leaks



Image: A close-up view of the durable ceramic valve, highlighting its robust construction designed to prevent leaks.

5. TROUBLESHOOTING

If you encounter issues with your KOHLER Tone faucet, review the following common troubleshooting steps. For problems not resolved here, contact Kohler customer service.

Common Issues:

- **Low Water Flow:** Check if the water supply valves under the sink are fully open. Inspect the aerator for mineral buildup and clean if necessary.
- **Leaking Faucet:** Ensure all connections are tight. While ceramic disc valves are designed to be leak-free, persistent leaks may indicate a need for professional inspection or replacement of internal components.
- **Water Temperature Issues:** Verify that both hot and cold water supply lines are connected correctly and that the water heater is functioning properly.
- **Drain Not Sealing:** Check the clicker drain for any obstructions or debris that might prevent a proper seal. Ensure the drain assembly is correctly installed.

6. SPECIFICATIONS

Brand	Kohler
Model Name	Tone
Model Number	K-27416-4-BN
Color	Vibrant Brushed Nickel
Material	Zinc
Mounting Type	Deck Mount
Number of Handles	2
Hole Count	3
Maximum Flow Rate	1.2 Gallons Per Minute
Spout Reach	151 Millimeters (5-15/16")
Product Dimensions	5.94"D x 8"W x 5.56"H
Item Weight	3.95 pounds
Special Feature	Pop Up Drain
Installation Type	Widespread

7. WARRANTY AND SUPPORT

The KOHLER Tone Widespread Bathroom Sink Faucet is backed by a Limited Lifetime Warranty. This warranty covers defects in material and workmanship for as long as the original consumer/purchaser owns their home. For complete warranty details and terms, please refer to the documentation included with your product or visit the official Kohler website.



Exceptional Design.
Consistent Performance.

Image: The official KOHLER Lifetime Limited Warranty badge, signifying product quality and support.

Customer Support:

For technical assistance, replacement parts, or warranty claims, please contact Kohler customer service. You can find contact information on the Kohler website or in your product's packaging.

8. PRODUCT VIDEOS

KOHLER Tone Faucet Overview

Your browser does not support the video tag.

Video: An overview of the KOHLER Tone faucet, showcasing its design and features.

Installation Tips for Widespread Faucets

Your browser does not support the video tag.

Video: General tips and guidance for installing widespread bathroom faucets.

Maintaining Your KOHLER Faucet Finish

Your browser does not support the video tag.

Video: Instructions on how to properly clean and maintain the finish of your KOHLER faucet.

© 2026 Kohler Co. All rights reserved.