



Manuals.plus /

› MICOCIOUS /

› MICOCIOUS Bluetooth Portable Home CD Music Player User Manual

MICOCIOUS KC-909

MICOCIOUS Bluetooth Portable Home CD Music Player

Model: KC-909

INTRODUCTION

Thank you for purchasing the MICOCIOUS Bluetooth Portable Home CD Music Player. This versatile device combines a CD player, FM radio, Bluetooth speaker, and media player for TF cards and USB flash drives. Designed for ease of use and high-quality audio, it offers multiple installation options to suit your space. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.

WHAT'S IN THE BOX

- CD player x 1
- 5 V-1.5 A USB adaptor x 1
- 2.3 m power cord x 1
- Remote control x 1
- Wall-mount kit x 1
- Audio cable x 1
- Desk bracket x 1
- User manual x 1

PRODUCT OVERVIEW: CONTROLS AND PORTS

Familiarize yourself with the various buttons, ports, and indicators on your CD player.

Multifunctional CD Player

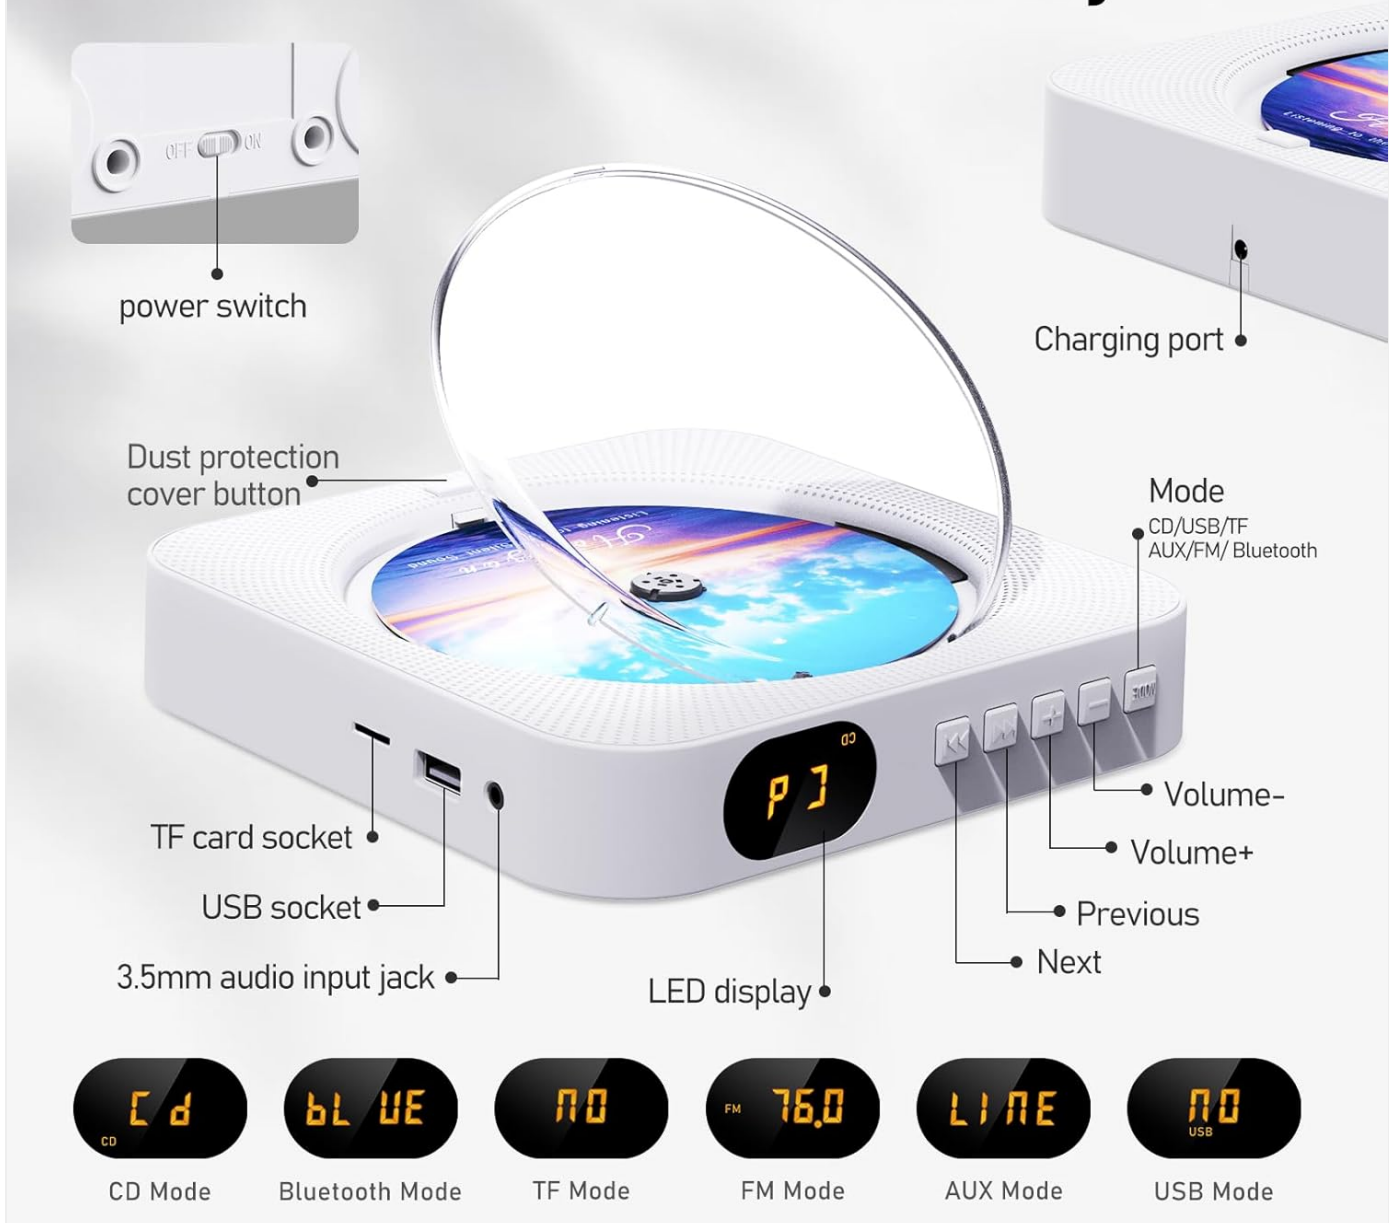


Image: Front and side view of the MICOCIOUS CD Player with labeled components.

- **Power Switch:** Located on the side, to turn the unit ON/OFF.
- **Dust Protection Cover Button:** Press to open the CD cover.
- **TF Card Socket:** Insert a TF (Micro SD) card for music playback.
- **USB Socket:** Insert a USB flash drive for music playback.
- **3.5mm Audio Input Jack (AUX):** Connect external audio devices.
- **LED Display:** Shows current mode, track number, FM frequency, or time.
- **Charging Port:** Connect the power adapter here.
- **Control Buttons:** Includes Volume -, Volume +, Previous, Next, and Mode selection.

The included remote control provides full functionality from a distance.



Image: MICOCIOUS CD Player and its remote control.

SETUP

Power Connection

1. Connect the 2.3m power cord to the 5V-1.5A USB adaptor.
2. Plug the USB adaptor into a standard electrical outlet.
3. Connect the other end of the power cord to the charging port on the CD player.
4. Flip the power switch on the side of the unit to the 'ON' position. The LED display will light up.

Installation Options

Your CD player can be installed in two ways: wall-mounted or placed on a desk using the included bracket.



If you have any problems after receiving the product, please feel free to contact our customer service to solve the problem!



The Ideal Gift For Your Family and friends !

Wanna find a great-sounding and cost-effective gift for anyone on your list? This is it!

Image: Wall mount and bracket installation diagrams.

1. Wall Mount Installation

1. Choose a suitable location on a wall.
2. Use the wall-mount backboard as a template to mark the drilling points.
3. Drill holes and insert wall anchors if necessary.
4. Secure the wall-mount backboard to the wall using the provided screws.
5. Align the CD player with the mounted backboard and slide it down to lock it in place.

2. Desk Bracket Installation

1. Locate the slot on the bottom of the CD player.
2. Align the desk bracket with this slot.
3. Slide the CD player onto the bracket until it clicks securely into place.
4. Place the assembled unit on a flat, stable surface.

Multiple Installation Option

Wireless Remote Control



Image: The CD player shown in both wall-mounted and desk-standing configurations.

OPERATING INSTRUCTIONS

Mode Selection

Press the 'MODE' button on the unit or remote control to cycle through the available modes: CD, Bluetooth, TF Card, FM Radio, AUX, and USB.

Multifunctional Wall-Mountable CD Player



Bluetooth 5.1 FM Radio Stereo Speakers AUX Audio Port TF Playback USB Playback Remote Control A-B Repeat

Image: Visual representation of the six available play modes.

CD Playback

1. Press the dust protection cover button to open the CD compartment.
2. Carefully place a CD (compatible with CD/CD-R/CD-RW/MP3/WMA audio formats) onto the spindle, label side up.
3. Close the CD cover.
4. Select 'CD Mode' using the MODE button. The player will automatically begin reading and playing the CD.
5. Use the Previous/Next buttons to skip tracks and Volume +/- to adjust volume.

Bluetooth Pairing

The player features Bluetooth 5.1 for stable wireless connection.

Bluetooth 5.1


When using Bluetooth to connect to other devices, it is a Bluetooth receiver that can be paired with Bluetooth transmitters such as smartphones, laptops, desktops, and tablets. It is also a Bluetooth transmitter that can connect Bluetooth earphones and speakers.



Desktop PC



Laptop

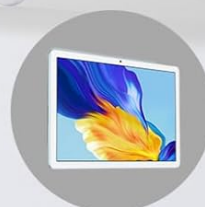

Tablet



Smartphone

Image: Bluetooth 5.1 connectivity with various devices.

1. Select 'Bluetooth Mode' using the MODE button. The LED display will show 'BLUE' and the unit will enter pairing mode.
2. On your mobile phone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select 'KC-909' from the list of devices.
4. Once paired, you can stream audio from your device to the CD player's built-in speakers.

FM Radio Operation

Enjoy your favorite radio stations with the built-in FM tuner (76MHz-108MHz).

Enjoy FM Radio Time

Easy to listen to the sound of the world

76MHz- 108MHz



Image: Enjoying FM Radio.

1. Select 'FM Mode' using the MODE button. The LED display will show the current FM frequency.
2. Press the Previous/Next buttons to manually tune to a station.
3. To auto-scan and save stations, press and hold the 'Play/Pause' button (usually the central button on the unit or remote) for a few seconds. The player will scan and store available stations.
4. Use the Previous/Next buttons to navigate through saved stations.

TF Card / USB Playback

Play music directly from your TF card or USB flash drive.



Image: TF card and USB flash drive insertion points.

1. Insert your TF card into the TF card socket or your USB flash drive into the USB socket.
2. Select 'TF Mode' or 'USB Mode' using the MODE button. The player will automatically detect and play compatible audio files.
3. Use the Previous/Next buttons to skip tracks and Volume +/- to adjust volume.

AUX Mode

Connect external audio sources like MP3 players or computers using the 3.5mm audio input jack.

1. Connect one end of the included audio cable to the 3.5mm AUX input jack on the CD player.
2. Connect the other end to the audio output jack of your external device.
3. Select 'AUX Mode' using the MODE button.
4. Control playback and volume from your external device.

Remote Control Usage

The remote control allows convenient operation from a distance of up to 5 meters.

- **Power Button:** Turns the unit ON/OFF.
- **MODE Button:** Cycles through CD, Bluetooth, TF, FM, AUX, USB modes.
- **Volume +/-:** Adjusts playback volume.
- **Previous/Next:** Skips tracks or tunes FM stations.
- **Play/Pause:** Starts or pauses playback.
- **Number Buttons (0-9):** For direct track selection on CDs or saved FM station selection.
- **Timer Button:** Sets the sleep timer.
- **A-B Repeat:** Repeats a specific section of audio (see below).

Timer Function

Set a timer for the player to automatically stop playing, ideal for falling asleep to music.

Set Timer to Stop Playing



Image: Setting the timer to stop playing.

1. Press the 'Timer' button on the remote control.
2. Each press will cycle through preset timer durations (e.g., 15, 30, 60, 90 minutes, or OFF).
3. Select your desired duration, and the player will automatically power off after that time.

A-B Repeat Function (for Language Learning)

This function allows you to repeat a specific segment of audio, which is useful for language learning or transcribing.

Language Learning for Kids

A-B Repeat Function Allows Children
To Master Words Quickly



Image: Language learning with A-B repeat function.

1. During playback, press the 'A-B' button on the remote control at the desired starting point (Point A).
2. Press the 'A-B' button again at the desired ending point (Point B).
3. The player will continuously repeat the segment between Point A and Point B.
4. Press the 'A-B' button a third time to cancel the repeat function.

MAINTENANCE

- Always power off and unplug the device before cleaning.
- Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the CD compartment clean and free of dust. Use a soft, lint-free cloth to gently wipe the lens if necessary, but avoid touching it directly.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power switch OFF; Outlet malfunction	Ensure power cord is securely connected; Flip power switch ON; Try a different outlet
CD not playing / Skipping	CD dirty or scratched; CD inserted incorrectly; Incorrect mode selected	Clean CD with a soft cloth; Reinsert CD correctly; Select 'CD Mode'
Bluetooth not connecting	Player not in pairing mode; Device Bluetooth OFF; Device too far	Ensure player is in 'Bluetooth Mode'; Enable Bluetooth on your device; Move device closer (within 10m)
Poor FM reception	Weak signal; Interference	Adjust player position; Try auto-scanning for stronger stations
Remote control not working	Batteries low/dead; Obstruction between remote and player	Replace remote batteries; Remove any obstructions; Ensure remote is pointed at the player

SPECIFICATIONS

- **Model:** KC-909
- **Dimensions:** 6.5 x 6.5 x 1.18 inches
- **Weight:** 1.14 pounds
- **Connectivity:** Bluetooth 5.1, AUX, USB, TF Card
- **Supported CD Formats:** CD, CD-R, CD-RW, MP3, WMA
- **FM Radio Frequency:** 76MHz - 108MHz
- **Power Input:** 5V-1.5A
- **Speaker Type:** Built-In Dual Hi-Fi Bluetooth Speakers

WARRANTY AND SUPPORT

MICOCIOUS products are designed and manufactured to the highest quality standards. For any issues or questions regarding your product, please refer to the contact information provided with your purchase or visit the official MICOCIOUS store on Amazon. Please retain your proof of purchase for warranty claims.

