

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Oraolo](#) /
- › [Oraolo Basser Bluetooth Speaker User Manual](#)

Oraolo Oraolo Basser

Oraolo Basser Bluetooth Speaker User Manual

Model: Oraolo Basser

PRODUCT OVERVIEW

The Oraolo Basser Bluetooth Speaker is a portable wireless audio device designed for high-quality sound reproduction with deep bass. It features IPX6 waterproofing, a built-in microphone for calls, and multiple input options including Bluetooth, TF/SD card, AUX-in, and USB. Its durable design and long battery life make it suitable for both indoor and outdoor use.



Figure 1: Oraolo Basser Bluetooth Speaker, showcasing its IPX6 waterproof design with water splashing around it.

Package Contents

- 1 x Oraolo Basser Bluetooth Speaker
- 1 x USB-C Charging Cable
- 1 x 3.5mm Aux-in Cable
- 1 x User Manual

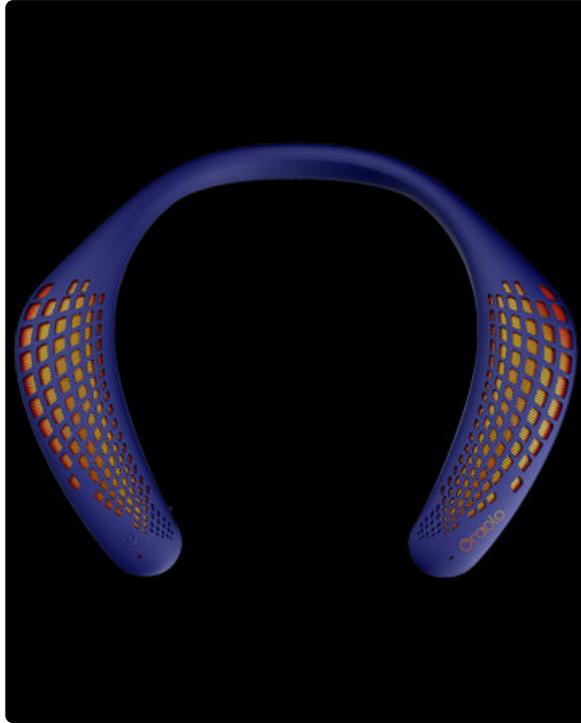


Figure 2: Included accessories: USB-C charging cable, 3.5mm Aux-in cable, and user manual.

Your browser does not support the video tag.

Video 1: An unboxing video for the Oraolo Basser Bluetooth Speaker, showing the speaker and its accessories.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures (above 40°C or direct sunlight) as this may damage the surface and reduce battery life.
- Ensure the port cover is securely closed when using the speaker in wet environments to maintain IPX6 waterproof rating.
- Use only the provided USB-C charging cable for optimal charging and to prevent damage.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep out of reach of children.

PRODUCT FEATURES AND CONTROLS

The Oraolo Basser speaker is equipped with intuitive controls and robust features for an enhanced audio experience.

RICH PUNCHING BASS

Because It's All About That Bass



Figure 3: Top view of the Oraolo Basser speaker, highlighting the control panel on the side.

Control Panel Functions:

Button/Port	Function
M (Mode Switch)	Short press to switch between Wireless (Bluetooth), AUX, USB, and TF Card modes.
Play/Pause (▶▶)	Short press to play/pause music. Long press for 2 seconds to turn the speaker on/off. Short press to answer calls. Long press to reject/end calls. Double click for Wireless Stereo Connection (TWS).
Volume + / Next Track	Short press to increase volume. Long press to go to the next track.
Volume - / Previous Track	Short press to decrease volume. Long press to go to the previous track.

Button/Port	Function
LED Indicator	Indicates power status, charging status, and Bluetooth pairing status.
USB-C Charging Port	For charging the speaker's internal battery.
TF Port	For playing music directly from a TF (MicroSD) card.
USB Socket	For playing music directly from a USB drive.
AUX-in Port	For connecting external audio devices via a 3.5mm audio cable.



Figure 4: Rear view of the speaker, detailing the AUX-in, USB, TF card, and USB-C charging ports, protected by a waterproof cover.

Your browser does not support the video tag.

SETUP AND INITIAL USE

1. Charging the Speaker

Before first use, fully charge the speaker. The red LED indicator will turn on while charging and go off when the battery is fully charged.

- Connect the small USB-C pin of the charging cable to the charging port on the rear side of the speaker.
- Connect the standard USB 2.0 end of the cable to any standard USB port (e.g., computer, USB charger).

2. Power On/Off

- To turn on: Long press the Play/Pause (▶▶) button for 2 seconds.
- To turn off: Long press the Play/Pause (▶▶) button for 2 seconds.

Your browser does not support the video tag.

Video 3: Demonstrates the simple one-click connection process for the speaker, which automatically reconnects to previously paired devices.

3. Bluetooth Pairing (Wireless Mode)

- Turn on the Oraolo Basser speaker. The wireless LED indicator will flash blue, indicating it's ready to pair.
- On your device (smartphone, tablet, laptop), go to Bluetooth settings.
- Select "Oraolo Basser" from the list of available devices.
- Once successfully paired, the power indicator will turn blue and the speaker will make a prompt sound.



Figure 5: The speaker is shown wirelessly connected to a smartphone via Bluetooth, ready for audio playback.

4. True Wireless Stereo (TWS) Mode (Same Model Only)

To achieve true wireless stereo sound, you can pair two Oraolo Basser speakers together.

- Turn on both Oraolo Basser speakers. Ensure they are not connected to any other wireless devices.
- Double-click the Play/Pause (▶▶) button on the first speaker. You will hear a "di" sound, and the speakers will automatically connect.

- After successful connection, the blue LED indicator of one speaker will flash. At this point, the speakers are waiting for a connection from your device.
- Turn on your wireless device's Bluetooth and connect to "Oraolo Basser" speaker.



Figure 6: Two Oraolo Basser speakers are shown paired together, illustrating the True Wireless Stereo (TWS) functionality for a wider soundstage.

5. AUX-in Mode

If your device is not wireless enabled, you can still enjoy music using the Aux-in audio jack.

- Connect the speaker with the provided 3.5mm Aux-in cable to any device with a 3.5mm standard audio jack.
- Once connected, the speaker can be used as a wired speaker.

6. TF Card / USB Drive Playback

The speaker supports direct playback from TF (MicroSD) cards and USB drives.

- Insert a TF card or USB drive containing MP3 audio files into the respective port on the rear of the speaker.
- The speaker will automatically switch to the correct mode and begin playing music.
- Ensure the waterproof cover is closed if not actively using these ports in wet conditions.

OPERATING INSTRUCTIONS

Volume Control

- Short press the **Volume +** button to increase the volume.
- Short press the **Volume -** button to decrease the volume.

Track Navigation

- Long press the **Volume +** button to skip to the next track.
- Long press the **Volume -** button to go to the previous track.

Call Handling (when connected via Bluetooth)

- To answer an incoming call: Short press the Play/Pause (▶▶) button.
- To reject or end a call: Long press the Play/Pause (▶▶) button.

MAINTENANCE

- To ensure proper protection, always long press the Play/Pause (▶▶) button for 2 seconds to turn off the device when not in use.
- Avoid exposing the speaker to high temperatures (above 40 degrees Celsius) or direct sunlight, as this can damage the surface and reduce battery life.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
Cannot pair via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the speaker is in pairing mode (flashing blue LED).◦ Make sure Bluetooth is enabled on your device.◦ Move the speaker closer to your device (within 10 meters).◦ Forget "Oraolo Basser" from your device's Bluetooth list and try pairing again.◦ Ensure no other devices are currently connected to the speaker.
No sound or low volume.	<ul style="list-style-type: none">◦ Increase the volume on both the speaker and your connected device.◦ Ensure the correct input mode (Bluetooth, AUX, TF, USB) is selected.◦ If using AUX, ensure the cable is fully inserted and not damaged.◦ For iPhone users, check Headphone Safety Function in settings and ensure it's shut down for best volume.

Problem	Solution
Music playback from TF card/USB drive not working.	<ul style="list-style-type: none"> ◦ Ensure the audio files are in a supported format (e.g., MP3). ◦ Check if the TF card or USB drive is properly inserted. ◦ Try a different TF card or USB drive.

SPECIFICATIONS

Feature	Detail
Model Name	Oraolo Basser
Speaker Type	Outdoor
Speaker Maximum Output Power	40 Watts
Speaker Driver	3" x 2 (Dual Drivers)
Sensitivity	95±3dB
Product Dimensions	10"D x 6"W x 5"H (262x124x124mm)
Item Weight	3.54 pounds
Wireless Communication Technology	Bluetooth 5.3
Bluetooth Range	10 Meters
Water Resistance Level	IPX6 Waterproof
Battery Life	Up to 24 hours (at 50% volume)
Power Source	Battery Powered
Charging Port	USB-C
Additional Inputs	TF/SD Card, AUX-in, USB
Built-in Microphone	Yes
Handle	Soft Silicone Carry Handle

WARRANTY AND SUPPORT

The Oraolo Basser speaker comes with a limited warranty. This warranty typically covers manufacturing defects but does not apply to appearance items, accessories, or damage caused by leaking batteries, improper installation, misuse, or negligence.

For warranty service or product information, please contact Oraolo customer service. Keep your original dated proof of purchase for your records.

Contact: service@oraoloaudio.com

For additional support, you may refer to the official user manual PDF: [User Manual \(PDF\)](#)