

[Manuals.plus](#) /

› [Nostalgia](#) /

› Nostalgia Popcorn Maker Machine - Instruction Manual

Nostalgia Nostalgia Retro

Nostalgia Popcorn Maker Machine - Instruction Manual

Model: Nostalgia Retro

INTRODUCTION

Welcome to the world of delicious, movie-theater style popcorn at home! This Nostalgia Popcorn Maker Machine is designed to bring the classic cinema experience to your kitchen. With its vintage look and efficient popping system, you'll enjoy fresh popcorn for family movie nights, parties, or just a quick snack.





The Nostalgia Popcorn Maker Machine in Retro Metallic Red, featuring a classic design with a clear popping chamber and storage compartment.

IMPORTANT SAFETY PRECAUTIONS

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed when using electrical appliances. Read all instructions before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- Do not immerse cord, plugs, or any part of the base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- A burn risk can result from misuse of this product.
- Replacement lamp or any other servicing should only be performed by a qualified service person.

PARTS LIST

Your Nostalgia Popcorn Maker Machine includes the following components:

- Main Popcorn Unit with Kettle
- Cart Base with Wheels
- Utility Shelf
- Kernel Catcher Tray
- Storage Compartment
- Kernel Measuring Cup
- Oil Measuring Spoon



The built-in storage compartment, ideal for keeping popcorn kernels, seasoning, and measuring tools organized.

SETUP INSTRUCTIONS

1. Carefully unpack all components from the packaging.
2. Assemble the cart base by attaching the wheels and ensuring all connections are secure.
3. Place the main popcorn unit securely onto the cart base. The unit can also be removed for countertop use.
4. Ensure the kettle is properly seated and the stirring system is functional.
5. Before first use, wipe down all surfaces with a damp cloth and dry thoroughly.



2.5oz POPCORN CART

pop up to 10 cups
per batch! 

easily move it
around! 

13" spoked wheels
& a convenient
pull handle

The popcorn cart's dimensions: 48 inches tall, 24 inches long, and 12.5 inches wide, featuring 13-inch spoked wheels for easy mobility.

OPERATING INSTRUCTIONS

Making Popcorn:

1. Ensure the unit is plugged into a suitable electrical outlet.
2. Turn on the light and heater switch (if available) to preheat the kettle for 3-5 minutes.
3. Add 2.5 ounces of popcorn kernels to the kettle using the provided measuring cup.
4. Add the recommended amount of oil (e.g., 1 tablespoon) to the kettle using the provided measuring spoon.
5. Close the kettle lid.
6. Once popping begins, the built-in stirring system will ensure even popping.
7. When popping slows to 1-2 kernels per second, turn off the unit.
8. Carefully tilt the kettle to release the popped popcorn into the main chamber.
9. Season popcorn to taste.

HAVE A MOVIE NIGHT!



lighted interior
for easy viewing
and bonus room
ambiance!



2.5oz stainless
steel kettle
with built-in
stirring system



The popcorn machine features a lighted interior for easy viewing and a 2.5oz stainless steel kettle with a built-in stirring system.

Countertop Use:

The upper compartment of the popcorn cart can be easily removed from the base for convenient countertop use. Simply lift the main unit off the cart base.



**EASILY
REMOVABLE
TOP**



use it on
your countertop!



measuring spoons
and serving scoop
included!

The top section of the popcorn machine is easily removable, allowing for convenient countertop use. Measuring spoons and a serving scoop are included.

Using Popcorn Kits:

This popcorn popper machine is compatible with all Nostalgia popcorn kits. For best results, use the recommended Theater Hot Air & Kettle Kit, Popcorn Oil, Seasoning Packs, Reusable Popcorn Bowls, and the Pre-Measured Coconut Oil Popcorn Kit.

PERFECT USE FOR ALL NOSTALGIA™ POPCORN KITS!



A selection of Nostalgia popcorn kits, including oil, kernels, and seasoning, designed for perfect use with the popcorn machine.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your popcorn maker.

1. Always unplug the unit and allow it to cool completely before cleaning.
2. Remove the kettle for easy cleaning. Wash the kettle with warm, soapy water and rinse thoroughly. Do not immerse the electrical components of the kettle.
3. Wipe down the interior and exterior surfaces of the main unit with a damp cloth. For stubborn stains, use a mild detergent.
4. The tempered safety glass windows can be cleaned with a glass cleaner.
5. Empty and clean the kernel catcher tray regularly.
6. Do not use abrasive cleaners or scouring pads, as they may scratch surfaces.
7. Ensure all parts are completely dry before reassembling and storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Popcorn not popping or popping poorly.	Not enough oil; Kettle not preheated; Old kernels; Kettle not properly connected.	Ensure correct oil amount; Allow kettle to preheat fully; Use fresh kernels; Check kettle connection.
Machine not turning on.	Not plugged in; Power switch off; Electrical issue.	Check power connection; Ensure power switch is on; Consult a qualified electrician if issue persists.
Excessive unpopped kernels.	Insufficient oil; Kettle not hot enough; Old kernels.	Increase oil slightly; Ensure proper preheating; Use fresh, high-quality kernels.

If you encounter issues not listed here, please contact Nostalgia customer support.

PRODUCT SPECIFICATIONS

Brand: Nostalgia
Model: Nostalgia Retro
Color: Metallic Red
Capacity: 2.5 ounces (kernels), up to 10 cups (popped popcorn)
Material: Glass, Stainless Steel
Product Dimensions: 24"L x 12.5"W x 48"H
Item Weight: 2.5 Ounces (Note: This seems to be the kernel weight, not the machine weight. The product description states "super lightweight" for the machine, but no specific weight is given for the machine itself in the specs. I will use the provided "Item Weight" from specs, but add a note.)
Included Components: Kernel measuring cup, Oil measuring spoon
Is Electric: Yes
UPC: 810061702344

WARRANTY AND SUPPORT

Nostalgia products are built with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Nostalgia website. For customer support, troubleshooting assistance, or to purchase accessories and parts, please visit the [Nostalgia Store on Amazon](#) or their official website.

© 2023 Nostalgia Products LLC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question