

[Manuals.plus](#) /

› [Bell+Howell](#) /

› Bell+Howell Vacutrim Cordless Beard Trimmer User Manual

Bell+Howell 8760

Vacutrim Cordless Beard Trimmer User Manual

Brand: Bell+Howell | Model: 8760

1. INTRODUCTION

Thank you for choosing the Bell+Howell Vacutrim Cordless Beard Trimmer. This rechargeable electric shaver is designed for precise grooming of facial hair, including mustaches, sideburns, and beards. Its innovative built-in vacuum system collects hair clippings as you trim, ensuring a clean and mess-free experience. With 20 precise trim length settings, the Vacutrim offers versatile grooming options for various styles and lengths.

2. WHAT'S IN THE BOX

Upon unboxing your Bell+Howell Vacutrim, please ensure all components are present:

- Vacutrim Cordless Beard Trimmer Unit
- Charging Cable (for laptop charging)
- Home Adapter (for electrical socket charging)
- Cleaning Brush
- Lubricating Oil
- User Manual (this document)
- 2 Comb Attachments



BELL+HOWELL®

VACUTRIM™

RECHARGEABLE TRIMMER

AS SEEN ON
TV



Vacuum **Built-in**

Collects hair clippings
inside trimmer



20 Precise
Trim Length Settings



All in One!

- Washable
- Stainless Steel Blade



3. SETUP

3.1 Initial Charging

Before first use, fully charge your Vacutrim trimmer. The initial charge time is approximately 2.5 hours. A full charge provides up to 90 minutes of run time. The trimmer can be used while it is plugged in and charging.

3.2 Attaching Comb Attachments

The Vacutrim comes with two comb attachments that allow for 20 different trim length settings. To attach a comb, align it with the trimmer head and gently push until it clicks into place. To remove, gently pull the comb attachment away from the trimmer head.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To turn on the Vacutrim, press and hold the power button for approximately 3 seconds. To turn off, press and hold the power button again for 3 seconds.

4.2 Adjusting Trim Length

The Vacutrim features a calibration dial with 20 precise trim length settings. Rotate the dial to select your desired hair length. The comb attachment will adjust accordingly to provide the selected length.

4.3 Using the Built-in Vacuum

The built-in vacuum automatically activates when the trimmer is turned on. It effectively sucks in hair trimmings as you shave, storing them in an internal compartment for later disposal. This feature significantly reduces mess in your sink or grooming area.

Your browser does not support the video tag.

Video 4.1: Overview of the Vacutrim Mens shaver and trimmer in use.

5. MAINTENANCE

5.1 Cleaning the Vacuum Compartment

To maintain optimal performance and hygiene, regularly clean the built-in vacuum compartment. First, ensure the trimmer is turned off. Gently remove the comb attachment and then open the vacuum compartment (refer to the diagram in the included user manual for exact location). Empty the collected hair clippings. Use the provided cleaning brush to remove any remaining hair or debris from the compartment and around the blades.

5.2 Oiling the Blades

For smooth operation and longevity of the blades, it is recommended to oil them at least once a month. With the trimmer turned off, apply a few drops of the provided lubricating oil onto the blades. Turn the trimmer on for about 15-30 seconds to allow the oil to distribute evenly. After oiling, wipe off any excess oil with a soft cloth or tissue.

6. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the trimmer is fully charged. If it still doesn't turn on, try plugging it in and using it while connected to power.
- **Reduced trimming performance:** The blades might be dull or clogged with hair. Clean the blades and vacuum compartment thoroughly. Apply lubricating oil as per maintenance instructions. If performance does not improve, consider replacing the blades (contact customer support for replacement parts).
- **Vacuum not collecting hair effectively:** The vacuum compartment might be full or clogged. Empty and clean the compartment as described in the maintenance section.
- **Overheating:** While designed to prevent overheating, prolonged continuous use or a clogged motor might cause warmth. Turn off the trimmer and allow it to cool down. Ensure all vents are clear of debris.

7. SPECIFICATIONS

Product Dimensions	7.5 x 1.7 x 1.7 inches; 1.01 Pounds
Item Model Number	8760
Batteries	2 AA batteries required (rechargeable)
Item Weight	0.46 Kilograms
Hair Type Compatibility	Beard, Sideburns, Body Hair, Mustache, Goatee
Color	Classic Model - Black

8. SAFETY INFORMATION

- Keep the trimmer away from water sources.
- Do not use on infants or children.
- Be cautious when handling the blades.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified personnel for service.

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Bell+Howell website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reinstall the blade assembly unit on my Bell+Howell Vacutrim, and how do I deactivate the lock symbol?

Based on the Bell+Howell Vacutrim (Model 8760) documentation, here is how to address the blade assembly and the lock symbol:1. Reinstalling the Blade AssemblyWhile the manual does not provide a step-by-step diagram for internal...

[Read full answer](#)