

ELIVED YD3015 Indoor

ELIVED Ceiling TV Mount Instruction Manual

Model: YD3015 Indoor

Brand: ELIVED

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your ELIVED Ceiling TV Mount, Model YD3015 Indoor. Please read this manual thoroughly before beginning installation to ensure correct setup and to prevent damage or injury.

2. SAFETY INFORMATION

WARNING: Failure to read and follow all instructions may result in personal injury, property damage, or voiding of warranty.

- Ensure the mounting surface can safely support the combined weight of the mount and the television.
- Do not mount on drywall alone. Do not use anchors on wood studs or drywall.
- Use appropriate tools and follow all drilling and fastening instructions carefully.
- Keep children and pets away during installation.
- If you have any doubts about the installation process, consult a qualified professional.

3. PACKAGE CONTENTS

The ELIVED Ceiling TV Mount comes with all necessary hardware for installation. Please verify that all components are present before beginning. Refer to the included hardware kit for a detailed list of parts.

4. SPECIFICATIONS

Feature	Detail
Brand	ELIVED

Model	YD3015 Indoor
Compatible TV Sizes	26-65 inches
Max Weight Capacity	99 lbs (45 kg)
VESA Compatibility	Min: 100x100mm (4" x 4"), Max: 400x400mm (16" x 16")
Height Adjustment	6 positions, from 20.3" to 30.2" from ceiling
Swivel Range	360°
Tilt Range	+5° / -15°
Screen Level Adjustment	±3°
Material	Alloy Steel
Mounting Type	Ceiling Mount (Flat and Sloped Ceilings)

5. SETUP AND INSTALLATION

5.1 Compatibility Check


Before installation, ensure your TV meets the following criteria:

- **TV Size:** Between 26 and 65 inches.
- **TV Weight:** Does not exceed 99 lbs (45 kg).
- **VESA Pattern:** Compatible with VESA mounting holes from 100x100mm to 400x400mm. Check the back of your TV for the four mounting holes and measure the horizontal and vertical distances.

Available VESA Patterns



VESA = Horizontal x Vertical

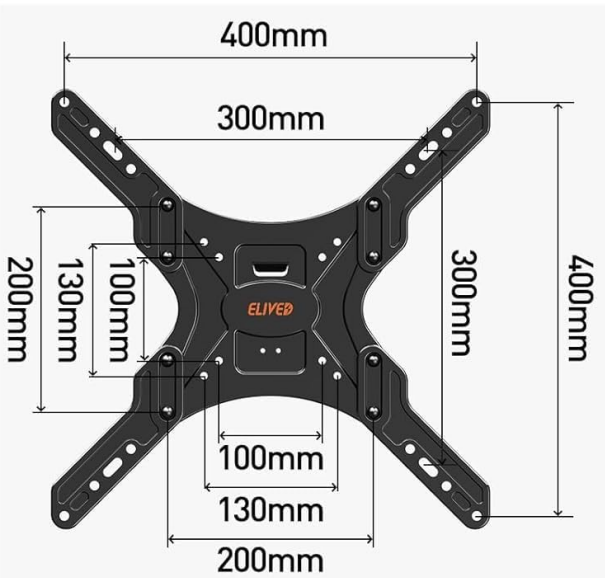

✔ Suitable VESA Patterns	
100 x 100mm	300 x 200mm
130 x 130mm	300 x 300mm
200 x 100mm	400 x 200mm
200 x 200mm	400 x 300mm
200 x 300mm	400 x 400mm
200 x 400mm	

✘ Unsuitable VESA Patterns	
100 x 200mm	150 x 200mm
100 x 300mm	150 x 150mm
100 x 150mm	200 x 150mm
150 x 100mm	300 x 400mm

Image: Available VESA Patterns. This diagram illustrates how to measure your TV's VESA pattern (horizontal x vertical) and provides a table of compatible and incompatible VESA sizes for the mount.

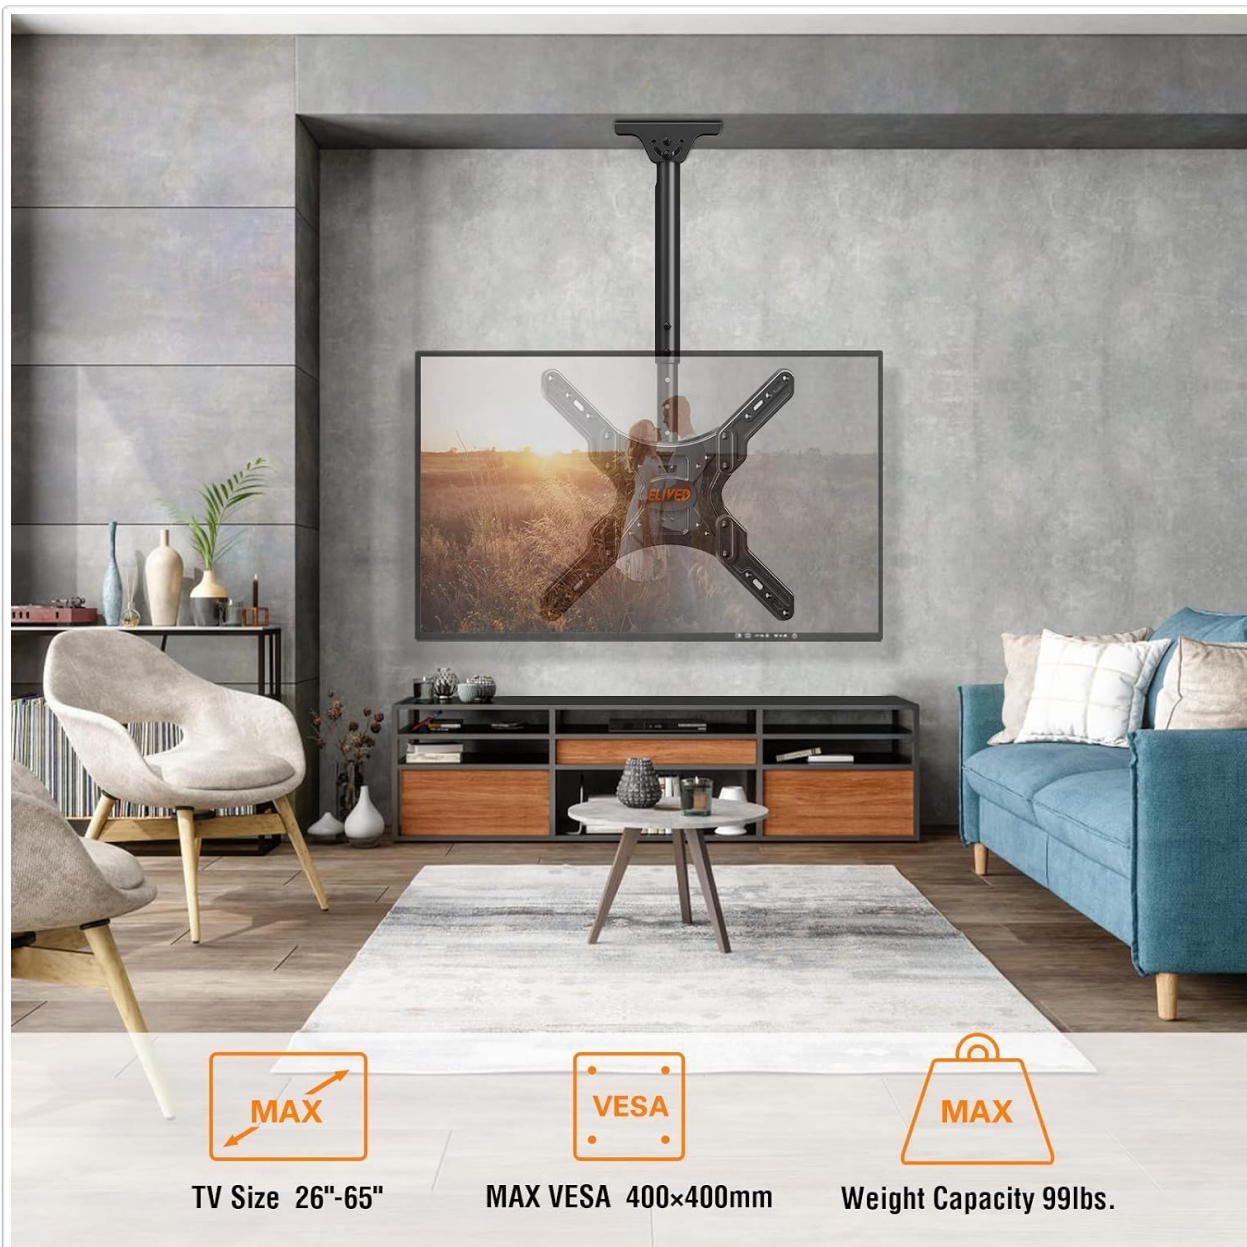 



Image: Max TV Size, VESA, and Weight Capacity. This image visually confirms the mount's compatibility with TV sizes from 26"-65", VESA patterns up to 400x400mm, and a maximum weight capacity of 99 lbs.

5.2 Ceiling Type Compatibility


The ELIVED Ceiling TV Mount is designed for installation on both flat and sloped ceilings. It is compatible with wood studs, concrete walls, and brick walls. **Do not mount on drywall alone.**

Optimize Viewing Experience

 Swivel: 360°

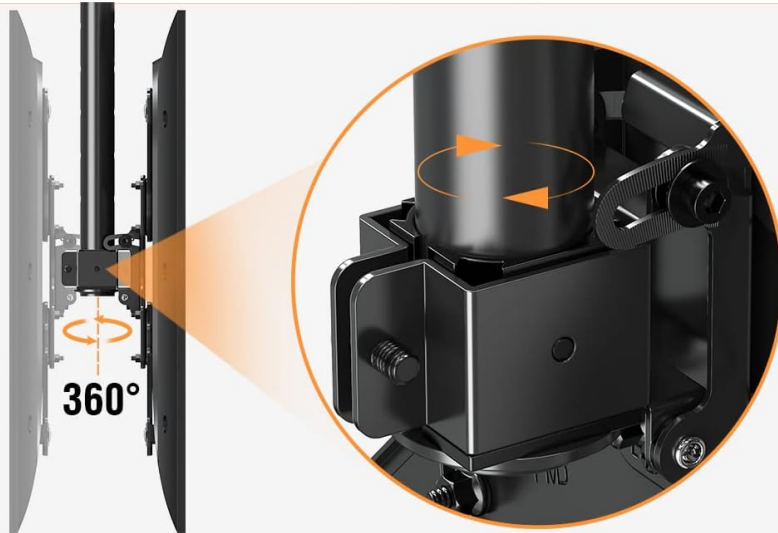

Tilt: +5°/-15°

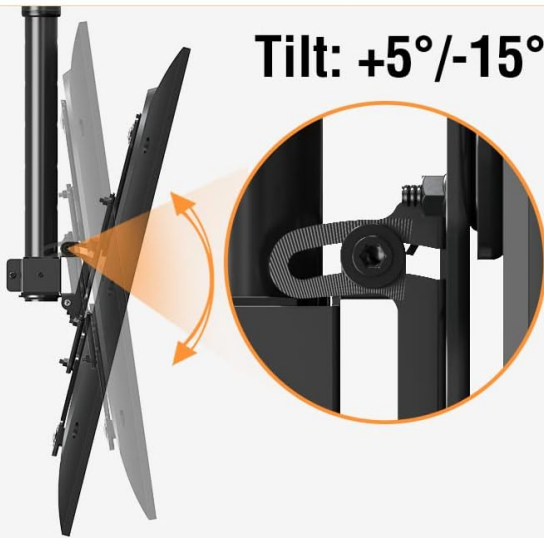

Level: $\pm 3^\circ$



Image: Fit Both Flat and Sloped Ceiling. This image demonstrates the versatility of the mount, showing it can be securely installed on both flat (0° angle) and sloped ceilings (up to $\pm 60^\circ$ angle).

Fit Both Flat and Sloped Ceiling



Image: Diverse Wall Compatibility. This diagram illustrates that the mount is suitable for installation on wood studs, concrete walls, and brick walls. It includes a crucial warning: "Don't mount on drywall alone! Don't use anchors on wood stud or drywall!"

5.3 Installation Steps (General)

While specific steps are detailed in the included manual, the general installation process involves:

1. Locating and marking the desired mounting position on your ceiling.
2. Drilling pilot holes and securely attaching the ceiling plate to the structural support (wood stud, concrete, or brick).
3. Assembling the main pole and attaching it to the ceiling plate.
4. Attaching the TV brackets to the back of your television using the appropriate screws and spacers.
5. Carefully lifting and hanging the TV (with attached brackets) onto the mount.
6. Securing the TV to the mount and making any necessary adjustments.

5.4 Cable Management

The mount features integrated cable management to keep your cables organized and out of sight. Route your TV cables through the central pole of the mount for a clean and tidy appearance.

Cable Management



Image: Cable Management. This diagram shows how to route power and HDMI cables through the central pole of the mount to maintain a neat and organized setup.

6. OPERATING THE MOUNT

The ELIVED Ceiling TV Mount offers full motion capabilities to optimize your viewing experience.

6.1 Height Adjustment

The mount features 6 positions for height adjustment, allowing you to suspend your TV from 20.3 inches up to 30.2 inches from the ceiling. This provides flexibility to achieve the optimal viewing height for your space.

6 Height Adjustment

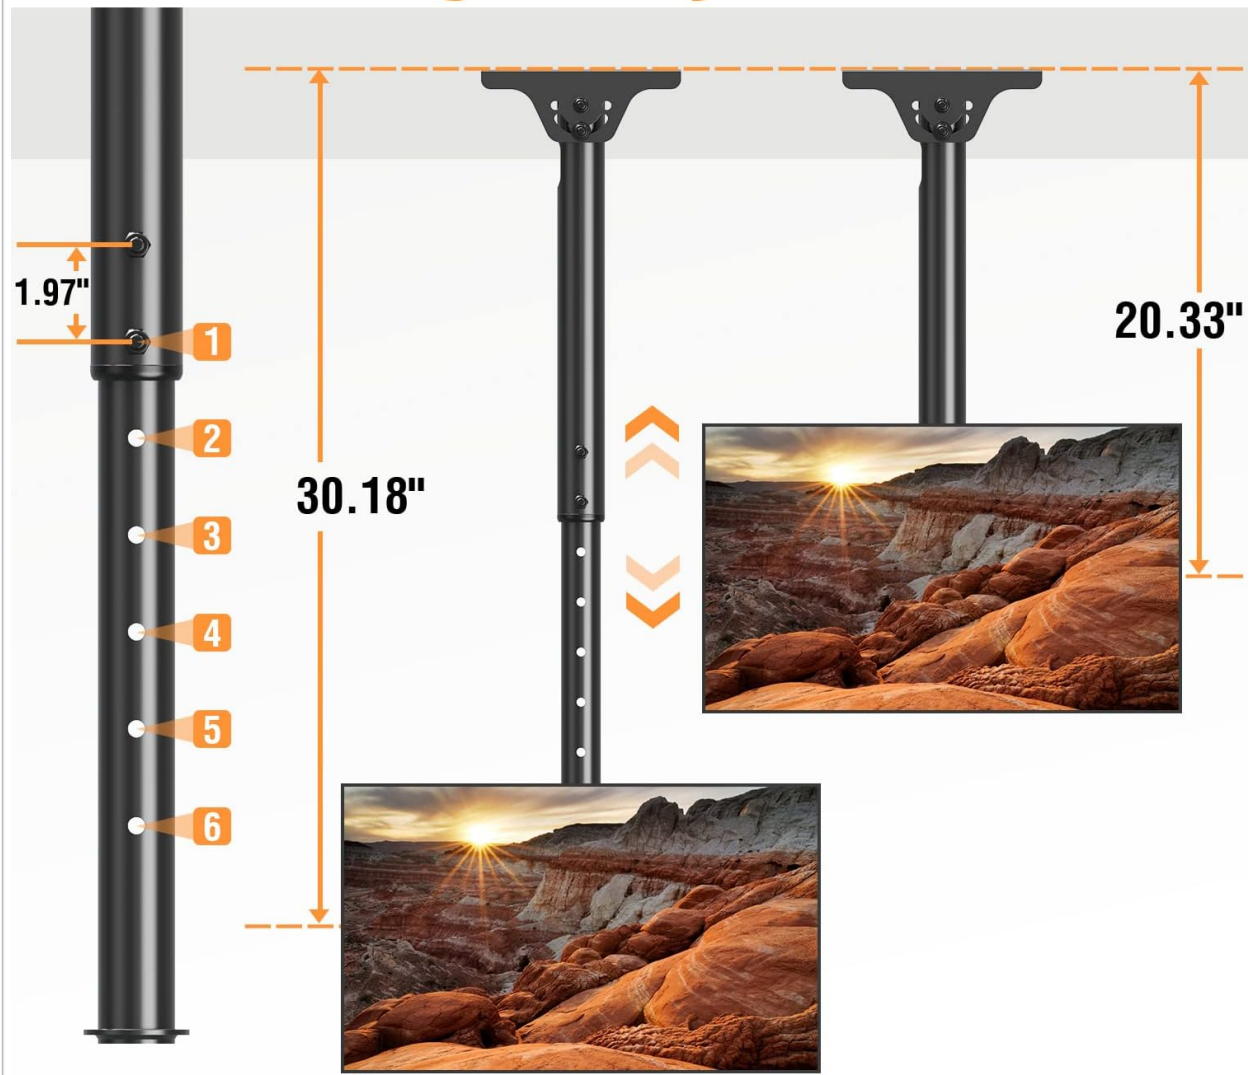


Image: 6 Height Adjustment. This diagram illustrates the six distinct height settings available, allowing the TV to be positioned at various distances from the ceiling, ranging from 20.3 inches to 30.2 inches.

6.2 Swivel, Tilt, and Level Adjustment

Adjust your TV's position for the best viewing angle:

- **Swivel:** The mount allows for a full 360° swivel, enabling you to rotate the TV to face any direction in the room.
- **Tilt:** You can tilt the TV up by 5° or down by 15° to reduce glare and achieve a comfortable viewing angle.
- **Screen Level:** Fine-tune the screen level with a $\pm 3^\circ$ adjustment to ensure your TV is perfectly horizontal after installation.

Diverse Wall Compatibility

Wood Studs



Concrete Wall



Brick Wall



Don't mount on drywall alone!

Don't use anchors on wood stud or drywall!

Image: Optimize Viewing Experience. This diagram highlights the mount's adjustable features: 360° swivel, +5°/-15° tilt, and $\pm 3^\circ$ screen level adjustment, allowing for optimal viewing angles.

Video: ELIVED Ceiling TV Mount Swivel and Tilt YD3015. This video demonstrates the swivel, tilt, level, and height adjustment features of the ELIVED Ceiling TV Mount, showcasing its full motion capabilities.

7. MAINTENANCE

To ensure the longevity and safe operation of your ELIVED Ceiling TV Mount, perform the following maintenance:

- Periodically check all screws and connections to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Inspect the mount for any signs of wear, damage, or corrosion. If any issues are found, contact customer support.

8. TROUBLESHOOTING

If you encounter any issues with your ELIVED Ceiling TV Mount, consider the following common solutions:

- **TV not level:** Use the screen level adjustment feature ($\pm 3^\circ$) to fine-tune the horizontal alignment. Ensure all mounting screws are tightened evenly.
- **Mount feels loose:** Re-check all ceiling and TV attachment screws. Ensure the mounting surface is structurally sound and that appropriate anchors were used for concrete/brick.
- **Difficulty adjusting:** Ensure no cables are snagged or obstructing movement. Check if any locking mechanisms are engaged.
- **Missing parts:** Refer to the package contents list. If parts are missing, contact ELIVED customer support.

For further assistance, please refer to the official user manual PDF or contact ELIVED customer support.

9. WARRANTY AND SUPPORT

The ELIVED Ceiling TV Mount comes with a clear manual and necessary hardware kit for quick installation. For detailed warranty information and customer support, please refer to the official ELIVED website or the user manual PDF provided with your product.

You can also access the User Manual (PDF) online: [ELIVED Ceiling TV Mount User Manual PDF](#)