

[Manuals.plus](#) /

› [EMERIO](#) /

› EMERIO TFN-123006 Tower Fan Instruction Manual

EMERIO TFN-123006

EMERIO TFN-123006 Tower Fan

INSTRUCTION MANUAL

Introduction

Thank you for purchasing the EMERIO TFN-123006 Tower Fan. This manual provides important information regarding the safe use, operation, and maintenance of your new appliance. Please read it thoroughly before first use and keep it for future reference.





Figure 1: Front view of the EMERIO TFN-123006 Tower Fan.

Safety Instructions

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Unplug the fan from the outlet when not in use, before cleaning, or before moving.
- Keep fingers, pencils, or any other objects out of the fan grille when it is operating.
- Do not operate any fan with a damaged cord or plug, or after the fan malfunctions or has been dropped or damaged in any manner.

- Place the fan on a stable, flat surface to prevent it from tipping over.
- Do not use the fan in areas with high humidity, such as bathrooms, or near water.
- This appliance is for indoor use only.

Package Contents

Please check the contents of the box. If any items are missing or damaged, contact your retailer.

- EMERIO TFN-123006 Tower Fan Unit
- User Manual (this document)

Product Overview

Familiarize yourself with the main components and controls of your tower fan.



Figure 2: Top control panel with speed and timer dials.

1. **Speed Control Dial:** Used to select fan speed (0-Off, 1-Low, 2-Medium, 3-High).
2. **Timer Control Dial:** Used to set the automatic shut-off timer (0-Off, up to 120 minutes).
3. **Oscillation Switch:** Located on the top panel, this switch activates or deactivates the fan's oscillation function.
4. **Air Outlet Grille:** Front grille where air is expelled.
5. **Base:** Provides stability for the fan.



Figure 3: Integrated handle for easy portability.

Setup

Follow these steps to set up your tower fan for the first time.

1. **Unpack:** Carefully remove the fan and all packaging materials from the box.
2. **Positioning:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper airflow and oscillation. Do not block the air inlet or outlet.
3. **Power Connection:** Insert the power plug into a standard electrical outlet. Ensure the outlet voltage matches the fan's requirements.

Operating Instructions

Learn how to use the various functions of your EMERIO TFN-123006 Tower Fan.

Turning On/Off and Speed Selection

1. To turn the fan **ON**, rotate the Speed Control Dial clockwise from 'OFF' to your desired speed setting: '1' (Low), '2' (Medium), or '3' (High).
2. To turn the fan **OFF**, rotate the Speed Control Dial counter-clockwise back to 'OFF'.

Oscillation Function

The oscillation function allows the fan to rotate from side to side, distributing air over a wider area.

- To activate oscillation, press the Oscillation Switch located on the top panel. The fan head will begin to rotate horizontally.
- To deactivate oscillation, press the Oscillation Switch again. The fan will stop rotating and remain in a fixed position.





Figure 4: Illustration of the fan's air distribution and oscillation.

Timer Function

The timer function allows you to set the fan to automatically turn off after a specified period, up to 120 minutes.

1. With the fan running, rotate the Timer Control Dial clockwise to set the desired operating time. The timer can be set in 10-minute increments up to 120 minutes.
2. The fan will operate for the set duration and then automatically switch off.
3. To disable the timer, rotate the Timer Control Dial back to 'OFF'.

Maintenance and Cleaning

Regular cleaning will help maintain the performance and extend the life of your fan.

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- For dust accumulation on the grilles, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust.
- Do not allow water to drip into the interior of the fan.
- Store the fan in a cool, dry place when not in use, preferably in its original packaging.

Troubleshooting

If you encounter any issues with your fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Speed dial is set to 'OFF'.	Check if the plug is securely inserted into a working outlet. Rotate the Speed Control Dial to a speed setting (1, 2, or 3).
Weak airflow.	Fan speed is too low. Air inlets/outlets are blocked.	Increase the fan speed using the Speed Control Dial. Ensure there are no obstructions around the fan. Clean grilles if dusty.
Oscillation not working.	Oscillation switch is off.	Press the Oscillation Switch to activate the function.
Fan makes unusual noise.	Fan is not on a level surface. Internal obstruction.	Place the fan on a stable, flat surface. Unplug the fan and check for any foreign objects inside the grilles (do not attempt to disassemble).

If the problem persists after trying these solutions, please contact customer support.

Specifications

Technical details of the EMERIO TFN-123006 Tower Fan.

Feature	Specification
Model Name	TFN-123006
Brand	EMERIO
Color	White
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Wattage	35 watts
Voltage	230 Volts
Special Feature	Oscillating
Number of Power Levels	3
Control Method	Rotary Dials
Item Weight	2 Kilograms (4.4 pounds)
Height	78 cm (approx. 30.7 inches)

Feature	Specification
Timer Function	Up to 120 minutes
Indoor/Outdoor Usage	Indoor
Blade Material	Plastic

Warranty and Support

Your EMERIO TFN-123006 Tower Fan comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact your retailer or the EMERIO customer service department. Contact information can typically be found on the product packaging or the official EMERIO website.

Please have your model number (TFN-123006) and proof of purchase ready when contacting support.