

[Manuals.plus](#) /

> [Kodak](#) /

> KODAK PIXPRO WPZ2 Digital Camera User Manual

Kodak WPZ2-RD

KODAK PIXPRO WPZ2 Digital Camera User Manual

Model: WPZ2-RD | Brand: Kodak

1. INTRODUCTION

The KODAK PIXPRO WPZ2 Digital Camera is engineered for durability and performance in challenging environments. This rugged, waterproof, and dustproof camera is designed to accompany you on all your adventures, whether in, on, or under the water. It features a 16-megapixel BSI CMOS sensor, 4X optical zoom, and the ability to record Full HD 1080P video. With built-in Wi-Fi connectivity, you can easily share your captured moments with friends and family. This manual provides essential information for setting up, operating, and maintaining your WPZ2 camera.



Figure 1: KODAK PIXPRO WP22 Red Digital Camera.

2. WHAT'S IN THE BOX

Your KODAK PIXPRO WP22 package should contain the following items:

- KODAK PIXPRO WP22 Digital Camera (Red)
- Rechargeable Li-Ion Battery
- USB Charging Cable
- AC Adapter (Plug)
- Wrist Strap
- Quick Start Guide
- User Manual (PDF available online)
- Warranty Card



Figure 2: Key features of the KODAK PIXPRO WPZ2.

3. SETUP

3.1. Charging the Battery

Before first use, fully charge the camera's Li-Ion battery. Open the battery/memory card compartment cover on the side of the camera. Insert the battery, ensuring correct orientation. Connect the USB charging cable to the camera's USB port and the other end to the AC adapter. Plug the AC adapter into a wall outlet. The charging indicator light will illuminate during charging and turn off when complete.



LITHIUM BATTERY

Figure 3: Charging the camera's lithium battery.

3.2. Inserting a Memory Card

The camera requires a microSD or microSDHC card (Class 4 or higher, up to 32GB) for storing photos and videos. Open the battery/memory card compartment cover. Insert the memory card into the designated slot until it clicks into place. Ensure the card is inserted correctly to avoid damage. Close the compartment cover securely to maintain waterproof integrity.

Important: Always ensure the battery/memory card compartment is fully sealed before exposing the camera to water or dust.

3.3. Initial Power On and Language Selection

Press and hold the power button located on the top of the camera to turn it on. The LCD screen will display language options. Use the navigation buttons to select your preferred language (e.g., English) and confirm your selection. You may also be prompted to set the date and time.



2,7" LCD SCREEN

Figure 4: The camera's 2.7" LCD screen.

4. OPERATING INSTRUCTIONS

4.1. Basic Photo Capture

To take a photo, ensure the camera is in Photo Mode (usually indicated by a camera icon on the screen). Frame your shot using the LCD screen. Press the shutter button halfway down to focus, then press it fully to capture the image. The camera features a 16-megapixel BSI CMOS sensor for sharp images.

4.2. Video Recording

To record video, switch to Movie Mode using the 'MODE' button. Press the dedicated record button (often marked with a red dot) to start recording. Press it again to stop. The camera supports Full HD 1080P video recording.

Your browser does not support the video tag.

Video 1: Product Overview of the KODAK PIXPRO WPZ2.

4.3. Zoom Function

Use the W (Wide) and T (Telephoto) buttons to adjust the 4X optical zoom. This allows you to get closer to distant subjects without compromising image quality.



4X OPTICAL ZOOM

Figure 5: Illustrating the 4X Optical Zoom capability.

4.4. Shooting Modes

The camera offers various shooting modes to optimize your photos for different scenarios. Press the 'MODE' button to cycle through options such as:

- **Auto Mode:** For general photography, the camera automatically adjusts settings.
- **Program AE Mode:** Provides more control over settings while maintaining automatic exposure.
- **Manual Mode:** Full control over aperture, shutter speed, and ISO.
- **Movie Mode:** Dedicated mode for video recording.
- **Scene Modes:** Includes Portrait, Landscape, Sports, Underwater, and Panorama for specific shooting conditions.



15m/50ft

WATERPROOF

Figure 6: The camera's waterproof capability in action.

PANORAMA



CAPTURE

Figure 7: Example of a panorama captured with the camera.

4.5. Digital Image Stabilization

The WPZ2 features digital image stabilization to help reduce blur caused by camera shake, ensuring clearer photos and smoother videos, especially in challenging conditions.



Figure 8: Digital Image Stabilisation feature.

4.6. Wi-Fi Connectivity

Utilize the built-in Wi-Fi to connect your camera to a compatible iOS or Android device. This allows for easy transfer of photos and videos, remote control of the camera, and instant sharing on social media platforms. Refer to the full user manual for detailed instructions on Wi-Fi setup and app usage.



WiFi



Figure 9: Wi-Fi connectivity feature.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your KODAK PIXPRO WPZ2 camera, especially given its rugged and waterproof design.

- **Cleaning:** After use, especially in saltwater, rinse the camera with fresh water. Wipe it dry with a soft, clean cloth. Do not use harsh chemicals or abrasive materials.
- **Drying:** Ensure all compartments are completely dry before opening them after exposure to water. Water droplets can enter and damage internal components.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. Fully charge the battery before extended storage and periodically recharge it to maintain its health.
- **Lens Care:** Use a lens cleaning cloth or brush to gently remove dust and smudges from the lens. Avoid touching the lens directly with your fingers.

- **Storage:** When not in use, store the camera in a dry, cool environment, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your KODAK PIXPRO WPZ2, try the following basic troubleshooting steps:

- **Camera Not Turning On:** Ensure the battery is fully charged and correctly inserted. Try removing and reinserting the battery.
- **"Memory Full" Error:** This indicates that the memory card is full or not inserted. Insert a new or empty memory card, or transfer existing files to a computer and format the card (this will erase all data).
- **Blurry Images:** Check if the lens is clean. Ensure you are pressing the shutter button halfway to allow the camera to focus before fully pressing it. Check your shooting mode settings.
- **Water Leakage:** If you suspect water has entered the camera, immediately turn it off, open all compartments, remove the battery and memory card, and allow it to air dry completely in a well-ventilated area. Do not attempt to use it until fully dry. Contact customer support if the issue persists.
- **Wi-Fi Connection Issues:** Ensure Wi-Fi is enabled on both the camera and your smart device. Check your device's Wi-Fi settings and ensure you are connecting to the correct camera network.

For more detailed troubleshooting, please refer to the comprehensive User Manual available online.

7. SPECIFICATIONS

Feature	Detail
Brand	Kodak
Model Name	WPZ2
Photo Sensor Resolution	16 MP
Optical Zoom	4 x
Digital Zoom	6 x
Video Resolution	1080p Full HD
Screen Size	2.7 Inches LCD
Waterproof Depth	Up to 15m (49ft)
Shockproof Rating	2m (6ft)
Connectivity Technology	Wi-Fi, USB
Image Stabilization	Digital
Supported File Format	JPEG
Battery Type	Rechargeable Li-Ion

Feature	Detail
SD Card Compatibility	microSD, microSDHC (Class 4+, up to 32GB)
Color	Red

8. WARRANTY AND SUPPORT

The KODAK PIXPRO WPZ2 Digital Camera comes with a **1-year manufacturer's warranty**. For warranty claims, technical support, or additional assistance, please refer to the contact information provided in your product packaging or visit the official KODAK PIXPRO support website.

A comprehensive User Manual is available in PDF format for detailed information on all camera features and functions. You can access it here: [KODAK PIXPRO WPZ2 User Guide \(PDF\)](#).