

XTREME DIGITAL LIFESTYLE ACCESSORIES XBH9-1023-BLK

Xtreme Bluetooth Wireless Headphones Model XBH9-1023-BLK User Manual

IMPORTANT INFORMATION FOR SAFE AND EFFICIENT USE

1. Introduction

Thank you for purchasing the Xtreme Bluetooth Wireless Headphones. These headphones are designed to provide a comfortable and immersive audio experience, allowing you to stream audio wirelessly from Bluetooth-compatible devices up to 33 feet away. They feature built-in audio controls, a microphone for hands-free calls, and support for both auxiliary cable and Micro-SD card playback. Please read this manual carefully to ensure proper use and maintenance of your headphones.

2. Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the headphones to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This will void the warranty.
- Keep the headphones away from water and other liquids. They are not water resistant.
- Clean the headphones with a soft, dry cloth only. Do not use abrasive cleaners.
- Listen at moderate volume levels to prevent hearing damage. Prolonged exposure to loud sounds can cause permanent hearing loss.
- Keep out of reach of children.

3. Package Contents

Please check that all items are present in your package:

- Xtreme Bluetooth Wireless Headphones
- Micro-USB Charging Cable

- 3.5mm Auxiliary Audio Cable

4. Product Overview

Familiarize yourself with the components and controls of your Xtreme Bluetooth Wireless Headphones.



Image 1: Xtreme Bluetooth Wireless Headphones folded for compact storage.



Image 2: Side view of the headphones, highlighting the Micro-USB charging port and 3.5mm auxiliary input.



Image 3: Close-up of the headphone controls, including power, volume, and playback buttons.

The headphones feature an over-ear design with soft ear cushions for comfort. The headband is adjustable, and the earcups can be folded for easy portability. On one earcup, you will find the control buttons, a Micro-USB charging port, a 3.5mm auxiliary input, and a Micro-SD/TF card slot.

5. Setup

5.1 Charging the Headphones

Before first use, fully charge your headphones.

1. Connect the small end of the included Micro-USB charging cable to the Micro-USB port on the headphones.
2. Connect the larger end of the charging cable to a USB port on a computer or a USB wall adapter (not included).
3. The LED indicator light will illuminate to show charging status.
4. Charging typically takes approximately 2 hours. The LED indicator will change or turn off once charging is complete.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off and you hear an audible prompt.

5.3 Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your Bluetooth-enabled device (e.g., smartphone, tablet, computer), go to the Bluetooth settings and ensure Bluetooth is enabled.
4. Search for available devices. The headphones should appear as "Xtreme Headphones" or a similar name.
5. Select the headphones from the list to initiate pairing.
6. Once successfully paired, the LED indicator on the headphones will flash blue slowly, and you will hear a confirmation tone.
7. The headphones will automatically attempt to reconnect to the last paired device when powered on.

6. Operating Instructions

6.1 Basic Controls

The headphones feature multiple built-in controls for convenient operation:

- **Power Button:** Press and hold to power on/off. Short press to play/pause music or answer/end calls.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Press to switch between Bluetooth, FM Radio (if available), and Micro-SD card

modes.

- **Microphone:** For hands-free calls when connected via Bluetooth.

6.2 Auxiliary Mode

Use the 3.5mm auxiliary cable for a wired connection to audio sources without Bluetooth capability or when the headphone battery is depleted.

1. Connect one end of the 3.5mm auxiliary cable to the 3.5mm audio input port on the headphones.
2. Connect the other end of the cable to the audio output jack of your device (e.g., phone, computer, gaming console).
3. The headphones will automatically switch to auxiliary mode. Note that controls on the headphones may be limited in this mode, and audio will be controlled by the connected device.

6.3 Micro-SD Card Playback

The headphones support playback of audio files directly from a Micro-SD (TF) card.

1. Insert a Micro-SD card (with audio files) into the TF card slot on the headphones.
2. If the headphones are in another mode, press the Mode (M) button to switch to Micro-SD card playback mode.
3. Playback will begin automatically. Use the Play/Pause, Volume Up (+), and Volume Down (-) buttons to control playback.

7. Maintenance

7.1 Cleaning and Care

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, sprays, or harsh chemicals.
- Avoid getting moisture into any openings.
- The ear cushions can be gently wiped with a damp cloth and mild soap solution, then dried thoroughly.

7.2 Storage

When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.

8. Troubleshooting

If you encounter issues with your headphones, refer to the following table for common problems and solutions.

Problem	Solution
Headphones will not power on.	Ensure the headphones are fully charged. Connect to a power source using the Micro-USB cable.
Cannot pair with a Bluetooth device.	Ensure headphones are in pairing mode (flashing blue/red). Make sure Bluetooth is enabled on your device and it is within 33 feet. Forget previous pairings on your device and try again.

Problem	Solution
No sound or low volume.	Check volume levels on both the headphones and the connected device. Ensure the headphones are properly paired or the auxiliary cable is fully inserted.
Sound is distorted or cuts out.	Move closer to the Bluetooth device to reduce interference. Ensure there are no obstacles between the headphones and the device. Check for other strong wireless signals nearby.
Micro-SD card not playing.	Ensure the Micro-SD card is inserted correctly and contains compatible audio files. Press the Mode button to switch to Micro-SD mode.

9. Specifications

Technical details for the Xtreme Bluetooth Wireless Headphones Model XBH9-1023-BLK:

Feature	Detail
Model Name	XBH9-1023-BLK
Brand	XTREME DIGITAL LIFESTYLE ACCESSORIES
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Auxiliary)
Wireless Communication	Bluetooth
Bluetooth Range	Up to 33 feet (10 meters)
Headphones Jack	3.5 mm Jack
Charging Time	Approximately 2 Hours
Frequency Range	20 Hz - 20,000 Hz
Earpiece Shape	Over Ear
Form Factor	Over Ear
Special Feature	Foldable Design, Micro-SD Card Slot
Control Type	Media Control Buttons
Water Resistance Level	Not Water Resistant
Material	Plastic, Fabric, Silicone
Color	Black
UPC	805106228484

10. Warranty and Support

10.1 Warranty Information



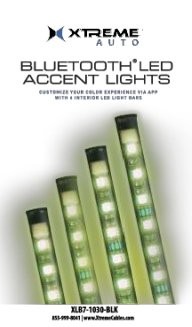
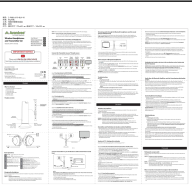

For information regarding the warranty period and terms for your Xtreme Bluetooth Wireless Headphones, please refer to the warranty card included with your purchase or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

10.2 Customer Support

If you require further assistance or have questions not covered in this manual, please contact the manufacturer or your retailer's customer support department. Contact details can typically be found on the product packaging or the brand's official website.

© 2023 XTREME DIGITAL LIFESTYLE ACCESSORIES. All rights reserved.

Related Documents - XBH9-1023-BLK

	<p>Xtreme Lynx True Wireless Earbuds Quick Start Guide</p> <p>A quick start guide for the Xtreme Lynx True Wireless Earbuds, covering setup, charging, pairing, and operation instructions.</p>
	<p>Xtreme Fusion Wireless Magnetic Earbuds: Charging and Operation Guide</p> <p>A concise guide to charging and operating the Xtreme Fusion Wireless Magnetic Earbuds (Model XBH9-1014), covering Bluetooth pairing, music playback, and call management.</p>
	<p>Xtreme Auto XLB7-1030-BLK Bluetooth LED Accent Lights - Installation & Manual</p> <p>Detailed guide for Xtreme Auto XLB7-1030-BLK Bluetooth LED Accent Lights, covering installation, operation, warranty, and safety. Customize your vehicle's interior lighting via the app.</p>
	<p>Avantree HT-6190 Wireless Headphones and Transmitter Set User Manual</p> <p>This user manual provides instructions for setting up and using the Avantree HT-6190 Wireless Headphones and Transmitter Set, including connection guides, troubleshooting, and features.</p>
	<p>Xtreme Power 10,000mAh Magnetic Wireless Charger Power Bank (15W PD USB-C) - User Manual</p> <p>User manual for the Xtreme Power 10,000mAh Magnetic Wireless Charger Power Bank. Details specifications, features, operation, safety guidelines, FCC compliance, and warranty for model XBB8-1026-BLK.</p>

POWER BANK INSTRUCTIONS

Initial charge should be done with the included Micro USB Cable (Charge time will vary by device)

Usage:

1. To charge the power bank, connect the battery via the micro USB to USB cable (included) to your computer, home or car charger. Charging time of the power bank varies between 3 to 4 hours.

2. Use the built-in charging cable to charge your device from the power bank. PLEASE NOTE: To charge a Micro USB device, the Lightning adapter must be facing up. To charge a Lightning device, the Micro USB adapter should be facing up.



3. Press power button to activate power bank and begin charging your device.

• Make sure the power bank is fully charged before charging your device

• LED indicators will illuminate to show battery power

4 LED - 100% charged

3 LED - 75% charged

2 LED - 50% charged

1 LED - 25% charged

[Xtreme Cables Power Bank Instructions - Model XBB8-0135](#)

Instructions for charging and using the Xtreme Cables Power Bank with Model XBB8-0135, including charging times, LED indicators, and important safety precautions.