



Manuals.plus /

› RCECAOSHAN /

› RCECAOSHAN Soleus Air AC Remote Control User Manual (Models FE2-08BA, FE-08BA)

RCECAOSHAN FE2-08BA, FE-08BA, 022061801

RCECAOSHAN Soleus Air AC Remote Control User Manual

Models: FE2-08BA, FE-08BA, 022061801

Setup

Operation

Maintenance

Troubleshooting

Specifications

Warranty & Support

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your RCECAOSHAN replacement remote control for Soleus Air AC units. This remote is designed to be a direct replacement for original Soleus Air AC remote controls, specifically models FE2-08BA and FE-08BA, and requires no programming.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

2. Initial Use

This RCECAOSHAN remote control is a direct replacement and typically requires **no programming**. Once batteries are installed, it should be ready for immediate use with compatible Soleus Air AC models FE2-08BA and FE-08BA.

Compatible with remote control list:



Image: The RCECAOSHAN replacement remote control shown alongside several original Soleus Air remote models, illustrating compatibility. A prominent text overlay states "NO PROGRAMMING NEED!!!" to confirm ease of use.

OPERATION

Familiarize yourself with the buttons and display of your remote control to effectively operate your Soleus Air AC unit.





Image: A detailed view of the RCECAOSHAN remote control, highlighting its LCD screen and the layout of its control buttons. Red circles indicate the 'HEAT' indicator, temperature display, and the 'T-ON' button.

Button Functions:

- **I/O (Power):** Turns the air conditioner ON or OFF.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts fan speed (e.g., Low, Medium, High, Auto).

- **SWING:** Activates or deactivates the louver swing function.
- **SLEEP:** Engages or disengages sleep mode for energy-efficient operation during sleep.
- **+ / - (Temperature/Time Adjustment):** Increases or decreases temperature settings, or adjusts time during timer settings.
- **T-ON (Timer On):** Sets a timer for the unit to turn ON automatically.
- **T-OFF (Timer Off):** Sets a timer for the unit to turn OFF automatically.
- **HOUR:** Used in conjunction with T-ON/T-OFF to set the hour for timer functions.
- **MIN:** Used in conjunction with T-ON/T-OFF to set the minute for timer functions.
- **RESET:** Resets the remote control to factory default settings. (Requires a pointed object like a pen tip to press).
- **C/F:** Toggles the temperature display between Celsius and Fahrenheit.

Display Indicators:

- **Temperature Display:** Shows the set temperature in °F or °C.
- **HEAT / COOL / FAN / DRY / AUTO** Indicates the current operating mode.
- **SPEED (Low, Med, High, Auto):** Indicates the current fan speed setting.
- **CLOCK:** Displays the current time or timer settings.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner.
- **Display is dim or blank:**
 - This usually indicates low battery power. Replace the batteries.
- **Air conditioner not responding to specific functions:**
 - Some advanced functions may vary slightly between different Soleus Air AC models. Refer to your air conditioner's original manual for specific feature compatibility.
 - Try pressing the RESET button on the remote (using a pointed object) to restore default settings.

SPECIFICATIONS

Brand	RCECAOSHAN
Compatible Models	Soleus Air AC FE2-08BA, FE-08BA
Item Model Number	022061801
Compatible Devices	Air Conditioner
Connectivity Technology	Bluetooth (Note: This remote functions as a direct IR replacement for specified AC models.)
Controller Type	Button Control
Special Feature	Ergonomic design
Power Source	2 x AAA Batteries (not included)

WARRANTY & SUPPORT

Warranty Information:

Please refer to the retailer or manufacturer's website for specific warranty details regarding your RCECAOSHAN replacement remote control. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

Customer Support:

For technical assistance or inquiries, please contact the seller or RCECAOSHAN customer support through the platform where the product was purchased. Provide your order number and a detailed description of the issue for prompt assistance.

