

[Manuals.plus](#) /

› [Spin Master](#) /

› Spin Master Purse Pets Bag Instruction Manual

Spin Master 20138763

Spin Master Purse Pets Bag Instruction Manual

Model: 20138763

Brand: Spin Master

INTRODUCTION

The Spin Master Purse Pets Bag is a trendy, interactive companion designed to bring fun and personality to your everyday adventures. This animated bag features multiple game modes, sounds, and reactions, making it a unique accessory for children aged 5 years and up. This manual provides essential information for setting up, operating, and maintaining your Purse Pets Bag.



This image displays the Spin Master Purse Pets Bag, featuring a purple plaid design with a white owl face, large expressive eyes, and pink wings. The packaging highlights '30+ Sounds & Reactions' and a 'Try Me' button.

SAFETY INFORMATION

- For family use only.
- **WARNING: CHOKING HAZARD** - Small parts. Not for children under 3 years.
- Always supervise children during play.
- Do not immerse the product in water.

SETUP

Battery Installation

Your Purse Pets Bag requires 3 AAA batteries, which are included with the product. Follow these steps to install or replace batteries:

1. Locate the battery compartment on the back or bottom of the Purse Pets Bag.

2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Note: For optimal performance, use new, high-quality alkaline batteries.

OPERATING INSTRUCTIONS

The Purse Pets Bag offers various interactive modes and reactions. Familiarize yourself with its features to maximize your play experience.

Game Modes

Your Purse Pets Bag features 3 distinct game modes:

- **Interactions:** Respond to touches, movements, and voice commands.
- **Questions:** Engage in question-and-answer sessions.
- **Songs:** Enjoy various musical tunes and rhythms.

To switch between modes or activate interactions, gently touch or press specific areas on the Purse Pets Bag, such as its forehead or nose, or interact with its eyes. Refer to the packaging or quick-start guide for specific interaction points.

Sounds and Reactions

The Purse Pets Bag is equipped with over 30 unique sounds and reactions. These include:

- Purring and happy sounds.
- Eye blinking and movement.
- Musical melodies.
- Responses to questions.

Experiment with different interactions to discover all the sounds and reactions your Purse Pet can make.