

Fossil FS5938

Fossil Men's Bronson Quartz Stainless Steel Watch

MODEL: FS5938 - USER MANUAL


Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your Fossil Men's Bronson Quartz Stainless Steel Watch, Model FS5938. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.

Setup

1. Unboxing

Your Fossil watch is typically packaged in a distinctive tin case. Carefully remove the watch from its packaging.

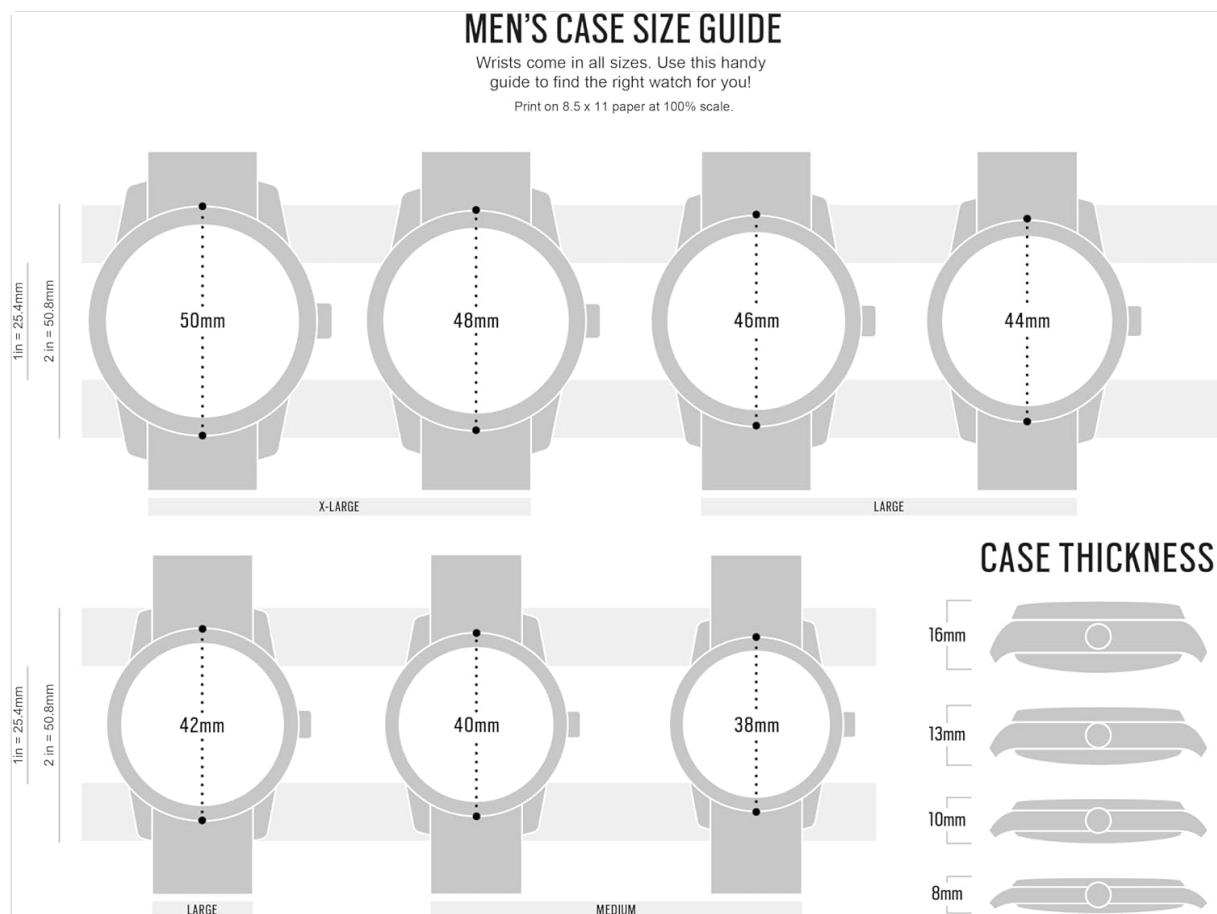

Example of the decorative tin case in which Fossil watches are typically packaged, suitable for storage or gifting.

2. Setting Time and Date

1. **Pull the Crown:** Gently pull the crown (the small knob on the side of the watch case) out to the first or second position.
2. **Set the Date:** If your watch has a date function, pull the crown to the first position and rotate it clockwise or counter-clockwise to adjust the date.
3. **Set the Time:** Pull the crown to the second position. Rotate the crown to move the hands clockwise until the correct time is displayed. Ensure you differentiate between AM and PM for watches with a 24-hour indicator or date function.
4. **Push the Crown Back:** Once the time and date are set, push the crown back into its original position against the watch case. This will start the watch movement.





Side profile of the watch case, displaying the crown used for setting time and date.

3. Strap Adjustment

The watch features a dark brown LiteHide genuine leather band with a secure adjustable buckle closure. The strap is interchangeable with all 22mm Fossil watch straps. For precise fitting, you may need to adjust the buckle or have a professional adjust the strap length.





The reverse side of the watch, highlighting the genuine LiteHide leather strap with its secure adjustable buckle closure.

4. Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This rating means it is suitable for bathing, swimming, or snorkeling. It is **not** resistant enough to withstand scuba diving or high-impact water sports. Always ensure the crown is fully pushed in before any water exposure.

Operating the Watch

Basic Timekeeping

Once the time and date are set and the crown is pushed in, your watch will accurately display the current time and date. The black satin dial features bold, easy-read indices and luminescent accents for visibility in various lighting conditions.





Front view of the Fossil Bronson watch, showcasing its black dial with luminescent accents and dark brown LiteHide leather strap.

Chronograph Style Elements

While designed with a chronograph aesthetic, this specific model features a three-hand date movement. The outer ring (bezel) is fixed and does not rotate for timing purposes. The sub-dials are decorative and do not provide additional timing functions.



The Fossil Bronson watch displayed on a wrist, illustrating its fit and appearance during wear.

Maintenance

Cleaning Your Watch

- **Case and Crystal:** Wipe the watch case and crystal with a soft, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Leather Strap:** Avoid prolonged exposure to water, direct sunlight, and harsh chemicals, as these can damage the LiteHide leather. Wipe the strap with a dry, soft cloth. If it gets wet, allow it to air dry naturally, away from direct heat.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, it

indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

Water Resistance Precautions

- Do not operate the crown or pushers while the watch is submerged in water or wet.
- Avoid exposing the watch to extreme temperature changes, such as moving from a hot sauna to cold water, as this can compromise seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

Troubleshooting

Watch Not Running

- **Check the Crown:** Ensure the crown is fully pushed in against the watch case. If it is pulled out, the watch will not run.
- **Battery:** If the crown is in place and the watch is still not running, the battery may need to be replaced.

Inaccurate Time

- **Reset Time:** Follow the instructions in the 'Setting Time and Date' section to reset the time.
- **Professional Inspection:** If the watch consistently runs slow or fast after resetting, it may require inspection by a professional watch technician.

Moisture Under Crystal

If you notice condensation or moisture under the crystal, immediately take the watch to a qualified service center. This indicates a breach in the water resistance, which can lead to internal damage.

Specifications

| Feature | Detail |
|--------------------|-------------------------------------|
| Model Number | FS5938 |
| Case Size | 40mm |
| Band Width | 22mm |
| Movement | Quartz, 3-hand date analog display |
| Dial Color | Black satin |
| Case Material | Stainless Steel |
| Strap Material | Dark brown LiteHide genuine leather |
| Crystal | Hardened mineral crystal |
| Water Resistance | 10 ATM (100 meters / 330 feet) |
| Product Dimensions | 1.57 x 0.87 x 0.39 inches |
| Weight | 8.47 ounces |

Warranty and Support

Warranty Information

Your Fossil watch is covered by Fossil's standard limited warranty, which typically covers manufacturing defects. Please refer to the official Fossil website or the warranty card included with your purchase for specific terms, conditions, and duration of coverage.

Customer Support

For further assistance, service, or warranty claims, please contact Fossil customer support directly. You can find their contact information on the official Fossil website or through the documentation provided with your watch.

Official Fossil Website: www.fossil.com