

B0B4H942ZP

Instruction Manual for Generic Replacement Voice TV Remote Control

Model: B0B4H942ZP

INTRODUCTION

This manual provides essential instructions for the setup, operation, and troubleshooting of your new Generic Replacement Voice TV Remote Control. This remote is designed for use with Insignia NS-55F301NA22 55-inch F30 Series LED 4K UHD Smart Fire TVs and compatible models. Please read this manual carefully before use to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

Familiarize yourself with the layout of your new remote control.



Image 1: Front view of the remote control, showing buttons for power, voice, navigation, volume, mute, and dedicated app buttons for Netflix, Hulu, Prime Video, and HBO.

SETUP

1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image 2: Back view of the remote control, showing the open battery compartment where two AAA batteries are to be inserted.

2. Initial Pairing / Remote Reset Procedure

If the remote does not respond after battery installation, or if you are experiencing issues, perform the following reset and pairing steps:

1. Place your remote control within 10 feet of your Fire TV device.
2. Simultaneously press and hold the **Left** button, **Menu** button, and **Back** button for 10 seconds.
3. Release the buttons and wait for 60 seconds.
4. Remove the batteries from your remote control.
5. Unplug your Fire TV device from its power source and wait 60 seconds.
6. Plug your Fire TV device back in and wait for the Home Screen to display on your television.
7. Reinsert the batteries into your remote control.
8. Press and hold the **Home** button on your remote control for 40 seconds.
9. Wait an additional 60 seconds for the setup process to complete. The remote should now be paired with your TV.

OPERATING INSTRUCTIONS

This remote control provides intuitive access to your TV's functions. Below are the primary button functions:

- **Power Button ()**: Turns the TV on or off.
- **Voice Button ()**: Activates voice commands for searching, launching apps, and controlling playback.
- **Navigation Ring (Up, Down, Left, Right)**: Navigates through menus and content.
- **Select Button (Center of Navigation Ring)**: Confirms selections.
- **Back Button (←)**: Returns to the previous screen or menu.
- **Home Button ()**: Returns to the Fire TV Home screen.
- **Menu Button (≡)**: Accesses contextual menus or options.
- **Rewind (), Play/Pause (), Fast Forward ()**: Control media playback.
- **Volume Up/Down (+ / -)**: Adjusts the TV volume.
- **Mute Button ()**: Mutes or unmutes the TV audio.
- **App Buttons (Netflix, Hulu, Prime Video, HBO)**: Direct access to popular streaming applications.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the "Battery Installation" steps outlined in the Setup section to replace the two (2) 1.5V AAA alkaline batteries.

- Always use fresh, high-quality AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:** Ensure batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Intermittent Functionality:** Check for any obstructions between the remote and the TV. Ensure the remote is within operating range (typically 10-20 feet).
- **Voice Control Issues:** Ensure your TV's internet connection is stable, as voice commands often require network access.
- **Remote Unpaired:** If the remote stops controlling the TV, perform the "Initial Pairing / Remote Reset Procedure" detailed in the Setup section.

SPECIFICATIONS

Feature	Detail
Model Number	B0B4H942ZP
Compatible Devices	Insignia NS-55F301NA22 55-inch F30 Series LED 4K UHD Smart Fire TV and similar Insignia Fire TV models (e.g., NS-50DF710NA19, NS-43DF710NA19, NS-58DF620NA20, NS-55DF710NA19, NS-39DF510NA19, NS-24DF310NA19, NS-32DF310NA19)
Connectivity Technology	Infrared (IR)
Special Feature	Voice Control, Ergonomic Design
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Color	Black
Manufacturer	NTQinParts

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the seller or manufacturer from whom you purchased this product. Keep your purchase receipt as proof of purchase.

For additional assistance, you may also consult the support resources for your Insignia Fire TV device, as pairing and functionality can sometimes be related to the TV's software or settings.