



Manuals.plus /

› LOMCA /

› Replacement Air Conditioner Remote for Mitsubishi AC Mr Slim MSZ-GL12NA MSZ-FE18NA MSZ-GE06NA MSZ-GE09NA-8 MSZ-GE12NA MSZ-GE12NA-8 MSZ-GE15NA-8 MSY-GL18NA MSZ-A17NA-1 MSZ-A09NA MSZ-A09NA-1

LOMCA 783746863701

Replacement Air Conditioner Remote Control User Manual

Brand: LOMCA | Model: 783746863701

1. INTRODUCTION

This manual provides instructions for the LOMCA Replacement Air Conditioner Remote Control, designed for various Mitsubishi AC Mr Slim models. This remote offers a convenient way to control your air conditioning unit with essential functions. Please read this manual carefully before use to ensure proper operation.



Image 1.1: LOMCA Replacement Air Conditioner Remote Control

This remote is a direct replacement and typically requires no complex programming. It operates using infrared technology.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.

3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: Remote control with battery compartment open, showing battery insertion.

2.2 Initial Use

This replacement remote control is designed to work out of the box with compatible Mitsubishi AC Mr Slim models. No programming or complex setup is required. Once batteries are installed, point the remote towards your air conditioner unit and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions on the remote control.



Image 3.1: Front view of the remote control, highlighting all functional buttons.

3.1 Button Functions

- **ON/OFF Button:** Press to turn the air conditioner unit on or off.
- **Temperature Adjustment Buttons (▲/▼):** Press to increase or decrease the desired temperature setting.
Note: The display on this remote is in Celsius only.
- **MODE Button:** Cycles through the available operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **VANE Button:** Controls the vertical swing of the air conditioner's louver, directing airflow up or down.

- **WIDE VANE Button:** Controls the horizontal swing of the air conditioner's louver, directing airflow left or right.
- **ECONO COOL Button:** Activates an energy-saving cooling mode that subtly adjusts the temperature setting to maintain comfort while reducing power consumption.
- **SLEEP Button:** Engages a sleep mode, which typically adjusts temperature and fan speed over time for comfortable overnight operation.
- **POWERFUL COOL Button:** Initiates a rapid cooling function to quickly bring the room temperature down to the set point.
- **TIME Buttons (▶/◀):** Used for setting timer functions, such as auto-on or auto-off times.
- **STOP/START Buttons:** Typically used in conjunction with timer settings to confirm or cancel programmed operations.
- **RESET CLOCK Button:** Resets the internal clock of the remote control, often a small recessed button requiring a pointed object to press.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's display becomes dim or its response slows, it is time to replace the batteries. Refer to Section 2.1 for battery installation instructions. Always replace both batteries at the same time with new AAA batteries.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Remote not responding to AC unit.	Low or dead batteries; Remote not pointed at AC unit; Obstruction between remote and AC unit; Incompatible AC unit model.	Replace batteries; Ensure direct line of sight to AC unit's receiver; Remove any obstructions; Verify your AC model is listed as compatible.
Temperature display is in Celsius only.	This remote model is designed to display temperature in Celsius only.	This is normal operation. Convert Celsius to Fahrenheit if needed (e.g., 20°C = 68°F).
Buttons are unresponsive or sticky.	Dirt or debris under buttons; Internal circuit issue.	Clean the remote's surface; If problem persists, consider replacing the remote.
Remote's screen is dim or blank.	Low or dead batteries.	Replace batteries.

6. SPECIFICATIONS

- **Brand:** LOMCA
- **Model Number:** 783746863701
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Mitsubishi AC Mr Slim Air Conditioner models including MSZ-GL12NA, MSZ-FE18NA, MSZ-GE06NA, MSZ-GE09NA-8, MSZ-GE12NA, MSZ-GE12NA-8, MSZ-GE15NA-8, MSY-GL18NA, MSZ-A17NA-1, MSZ-A09NA, MSZ-A09NA-1, and others as listed in product description.
- **Display:** Celsius only
- **Special Feature:** No Programming Required
- **Item Weight:** Approximately 3.17 ounces
- **Package Dimensions:** Approximately 7.68 x 4.65 x 0.98 inches

7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your LOMCA Replacement Air Conditioner Remote Control, please contact the seller or manufacturer through the platform where the product was purchased. Please retain your purchase receipt for any warranty claims.