



[Manuals.plus](#) /

> [S-Union](#) /

> [2 Pack] Upgraded 2188656 Fridge Crisper Drawer (UPPER) & 2188664 Fridge Crisper Bin (LOWER) Compatible with Whirlpool Kenmore Refrigerator Drawers with Humidity Control, Food-grade Materials - Instruction Manual

## S-Union 2188656 & 2188664

# S-Union Refrigerator Crisper Drawers Instruction Manual

Models: 2188656 (Upper) & 2188664 (Lower)

## 1. PRODUCT OVERVIEW

---

This manual provides detailed instructions for the S-Union 2-Pack Upgraded Refrigerator Crisper Drawers, models 2188656 (Upper) and 2188664 (Lower). These replacement crisper bins are designed for compatibility with various refrigerator brands, including Whirlpool and Kenmore, offering enhanced durability and functionality for food storage.



Figure 1: S-Union 2188656 (Upper) and 2188664 (Lower) Crisper Drawers.

### Key Features:

- **Upgraded Food-Grade Materials:** Constructed from high-quality, eco-friendly plastic for safety, hygiene, and enhanced durability.
- **Fixed Thickening & Reinforced Design:** Engineered with increased thickness and reinforced edges to prevent cracking and breakage, ensuring a longer service life.
- **2188656 (Upper) with Humidity Control:** Features an adjustable humidity control slider to optimize storage conditions for fruits and vegetables, keeping them fresh longer.
- **2188664 (Lower) Convertible Bin:** Designed for versatile storage of either vegetables or meats, providing flexibility

for your refrigeration needs.

## 2188656 Refrigerator Crisper Bin (UPPER)

Crisper drawer with "Humidity Control" stall design



"Humidity Control" stall design, can be adjusted arbitrarily by your needs.



Matte-finish surface, feel smooth, and is not slippery.

## 2188664 Refrigerator Crisper Bin (LOWER)

Refrigerator meat/vegetable crisper drawer



Says "Convertible Vegetables/Meats" on the front.



High quality food grade material, provide sturdiness, not to crack.  
Load 100 pounds.

Figure 2: Detailed view of the 2188656 Upper Crisper Drawer with Humidity Control and the 2188664 Lower Crisper Bin.

## 2. COMPATIBILITY AND PART NUMBERS

These crisper drawers are compatible with a wide range of refrigerator models from various brands. To ensure proper fit, always verify your refrigerator's model number and the existing part number before purchasing.

### Compatible Brands:

- Whirlpool
- Kenmore
- Amana
- Roper
- Crosley
- Maytag


- Estate
- KitchenAid
- Inglis

**Replaces Part Numbers:**


**For 2188656 (Upper) Crisper Drawer:** WP2188656, 2173384, 2173694, 2174108, 2174109, 2174416, 2175075, 2179281, 2188652, 2189529, 2194072, etc.

**For 2188664 (Lower) Crisper Bin:** WP2188664, WP2188664VP, 2173385, 2173387, 2173696, 2175073, 2175076, 2179276, 2179279, W10153777, WP2313312, etc.


Please Confirm Your Refrigerator Model Before Purchasing



**⊗ 2188661 Crisper Bin**  
No text, No Humidity Control



**✔ 2188656 Crisper Bin (UPPER)**  
With text, with Humidity Control



**✔ 2188664 Crisper Bin (LOWER)**  
Convertible Vegetables/Meats




Figure 3: Visual guide for confirming your refrigerator model and the correct crisper bin type.

# 2188656 Crisper Bin (UPPER) Size Detail



## **Fits Brands:**

Whirlpool, Amana, Roper, Crosley, Maytag, Estate, KitchenAid, Inglis, Kenmore.

## **Part Numbers:**

2173384, 2173386, 2173694, 2174108, 2174109, 2174416, 2175075, 2179281, 2179347, 2188652, 2188656, 2189529, 2189629, 2194072, 2194078, 2194081, 2194087, 2194904, 2194914, 2194978, 2194979, 2196160, 2196230, 2196232, 2197834, PS11739119, EAP11739119, AP6006055, 1021812.

**Notice:** If you are not sure whether the drawers is compatible with your refrigerator, please feel free to contact us, we will help you confirm it.

Figure 4: Dimensions for 2188656 (Upper) Crisper Drawer.

# 2188664 Crisper Bin (LOWER) Size Detail



## Fits Brands:

Whirlpool, Amana, Roper, Crosley, Maytag, Estate, KitchenAid, Inglis, Kenmore.

## Part Numbers:

2173385, 2173387, 2173696, 2175073, 2175076, 2179276, 2179279, 2179282, 2179348, 2188654, 2188664, 2188665, 2188724, 2189530, 2189630, 2194074, 2194076, 2194079, 2194082, 2194088, 2194648, 2196162, 2196228, 2196231, 2196480, 2197835, 2313312, W10153777, WP2188664VP, WP2313312, 1021816, AP6006058, PS11739122, EAP11739122

**Notice: If you are not sure whether the drawers is compatible with your refrigerator, please feel free to contact us, we will help you confirm it.**

Figure 5: Dimensions for 2188664 (Lower) Crisper Bin.

## 3. INSTALLATION AND SETUP

Installation of the S-Union crisper drawers is straightforward and typically requires no special tools. Follow these general steps:

1. Carefully remove the old or broken crisper bin from your refrigerator.
2. Align the new S-Union crisper drawer with the designated rails or slots inside your refrigerator.
3. Gently slide the new crisper drawer into place until it is fully seated and moves smoothly.

For visual guidance on identifying the correct part and installation, please refer to the video below:

Your browser does not support the video tag.

Video 1: "How to Get the Correct Refrigerator Drawer Bin?" - This video demonstrates how to identify the correct crisper drawer for your refrigerator model and provides installation tips.

## 4. OPERATING INSTRUCTIONS

---

### 2188656 (Upper) Crisper Drawer - Humidity Control:

The upper crisper drawer features a humidity control slider. This allows you to adjust the level of humidity within the drawer to best preserve different types of produce:

- **High Humidity Setting:** Ideal for leafy greens, herbs, and other produce that wilts easily. This setting helps retain moisture.
- **Low Humidity Setting:** Best for fruits and vegetables that release ethylene gas, such as apples, pears, and avocados, which can spoil other produce. This setting allows more air circulation.

Adjust the slider to your desired setting based on the contents of the drawer to maximize freshness.

### 2188664 (Lower) Crisper Bin - Convertible Storage:

The lower crisper bin is designed for versatile storage. It can be used to store either vegetables or meats, depending on your needs. While it does not have an adjustable humidity control, its robust design ensures a suitable environment for general storage.

## 5. MAINTENANCE AND CARE

---

To ensure the longevity and hygiene of your S-Union crisper drawers, regular cleaning is recommended:

- **Cleaning:** Hand wash the crisper drawers only. Use warm water and a mild soap. Avoid harsh abrasive cleaners or scouring pads, as these can scratch or damage the plastic.
- **Drying:** Allow the drawers to air dry completely or wipe them with a soft cloth before returning them to the refrigerator.
- **Durability:** The upgraded food-grade materials and reinforced design contribute to the bins' high durability and resistance to breakage under normal use.

## 6. TROUBLESHOOTING

---

### Common Issues and Solutions:

- **Crisper Drawer Does Not Fit:**
  - Double-check your refrigerator's model label and compare it with the compatible models listed in Section 2.
  - Verify the part number of your original crisper drawer against the replacement part numbers provided.
  - Measure your old bin and compare its dimensions with the product dimensions (Figures 4 & 5) to ensure a match.
- **Crisper Drawer is Sticking or Not Sliding Smoothly:**
  - Ensure the drawer is correctly aligned with the refrigerator rails.
  - Check for any debris or food particles on the rails or under the drawer that might be obstructing its movement. Clean thoroughly if necessary.

If you are still unsure about compatibility or encounter persistent issues, please contact our customer support team with your refrigerator model number for assistance.

## 7. SPECIFICATIONS

---

Attribute	Detail
Manufacturer	S-Union
Part Numbers	2188656 & 2188664
Material	Plastic (Food-grade)
Item Weight	3.65 kg
Installation Method	Easy to install, no tool necessary
Included Components	2 Pack Upgraded Refrigerator Drawers (1 Upper 2188656, 1 Lower 2188664)

## 8. WARRANTY AND SUPPORT

---

### Warranty Information:

S-Union provides an **18-month worry-free warranty** for these refrigerator crisper drawers. This warranty covers manufacturing defects and ensures product quality.

### Customer Support:

If you have any questions, concerns, or require assistance with your S-Union crisper drawers, please do not hesitate to contact our customer service team. We are committed to providing satisfactory answers and support within 24 hours.

Your browser does not support the video tag.

Video 2: "Upgraded 2188656 (UPPER) & 2188664 (LOWER) Refrigerator Crisper Drawer" - Provides an overview of the product and highlights key features.