

## Megachef Wide Mouth Juice Extractor

# Megachef Masticating Slow Juicer Extractor Instruction Manual

Model: Wide Mouth Juice Extractor

## INTRODUCTION

Welcome to the world of slow juicing with your new Megachef Masticating Slow Juicer Extractor. This appliance is designed to efficiently extract juice from fruits and vegetables, preserving nutrients and delivering rich flavors. The slow juicing process gently crushes produce, making it ideal for a variety of ingredients, including leafy greens. This manual provides essential information for the safe and effective use, assembly, operation, maintenance, and troubleshooting of your juicer. Please read it thoroughly before first use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Never feed food into the chute with your fingers. Always use the food pusher provided.
- Do not operate the juicer if the cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner.

- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.

## PRODUCT COMPONENTS

Familiarize yourself with the parts of your Megachef Masticating Slow Juicer Extractor:

- Motor Base
- Juicing Bowl
- Auger (Squeezing Screw)
- Fine Strainer
- Hopper/Feeding Chute
- Food Pusher
- Juice Cup
- Pulp Cup
- Cleaning Brush



Image: All components of the juicer laid out, including the motor base, juicing bowl, auger, strainer, hopper, food pusher,

juice cup, pulp cup, and cleaning brush.



Image: The clear juice collection cup with measurement markings and the black pulp collection cup.

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your juicer before use:

1. Place the motor base on a stable, flat surface.
2. Align the juicing bowl with the motor base and rotate it clockwise until it locks into place.
3. Insert the fine strainer into the juicing bowl, ensuring it sits securely.
4. Place the auger into the center of the strainer, pushing it down firmly.
5. Attach the hopper/feeding chute assembly onto the juicing bowl, aligning the marks and rotating clockwise until it locks.
6. Position the juice cup under the juice spout and the pulp cup under the pulp outlet.



Image: The fully assembled juicer with the juice cup and pulp cup in their respective positions, ready for operation.

## OPERATING INSTRUCTIONS

Prepare your ingredients and operate the juicer as follows:

1. Wash all fruits and vegetables thoroughly. Cut ingredients into pieces small enough to fit into the feeding chute. Remove hard pits, seeds, and thick peels.
2. Ensure the juice and pulp cups are correctly placed.
3. Plug the power cord into a suitable electrical outlet.
4. Turn the power switch to the 'ON' position. The motor will start.
5. Slowly feed the prepared ingredients into the feeding chute. Use the food pusher to gently guide the food down. Do not force ingredients.
6. The juicer will extract juice into the juice cup and separate pulp into the pulp cup.
7. If ingredients become jammed, switch the juicer to the 'REV' (Reverse) position for a few seconds to clear the blockage, then switch back to 'ON' to continue juicing.
8. Once juicing is complete, switch the juicer to the 'O' (Off) position and unplug it from the power

outlet.



Image: The juicer actively processing fruits on a kitchen counter, with juice collecting in the cup.





Image: A close-up of the back of the juicer, highlighting the 'ON', 'O' (Off), and 'REV' (Reverse) power switch.

## MAINTENANCE AND CLEANING

---

Proper cleaning ensures the longevity and hygiene of your juicer. Clean the appliance immediately after each use.

1. Unplug the juicer from the power outlet.
2. Disassemble all removable parts: the food pusher, hopper, auger, strainer, juicing bowl, juice cup, and pulp cup.
3. Rinse all removable parts under running water. Use the provided cleaning brush to remove any pulp residue from the strainer.
4. Removable parts are dishwasher safe. Place them on the top rack of your dishwasher.
5. Wipe the motor base with a damp cloth. Do not wash or immerse the main body in water.
6. Dry all parts thoroughly before reassembling or storing.

## TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

| Problem                               | Possible Cause                                                   | Solution                                                                                                                                                                          |
|---------------------------------------|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Juicer does not turn on.              | Not plugged in; parts not assembled correctly; power switch off. | Ensure power cord is securely plugged in. Check that all parts are locked into place. Turn the power switch to 'ON'.                                                              |
| Motor stops during operation or jams. | Too much food fed at once; hard ingredients causing blockage.    | Switch to 'REV' (Reverse) for a few seconds to clear the blockage, then switch back to 'ON'. Reduce the amount of food fed at one time. Cut hard ingredients into smaller pieces. |
| Excessive pulp in juice.              | Strainer is clogged or damaged.                                  | Clean the strainer thoroughly with the cleaning brush. If damaged, replace the strainer.                                                                                          |
| Juicer is leaking.                    | Parts not assembled correctly.                                   | Disassemble and reassemble all parts, ensuring they are securely locked into place.                                                                                               |

## SPECIFICATIONS

| Feature    | Detail                                                                                      |
|------------|---------------------------------------------------------------------------------------------|
| Brand      | Megachef                                                                                    |
| Model Name | Juice Machine with Dual Speed Centrifugal Juicer (Note: Product is Masticating Slow Juicer) |

| Feature               | Detail                                      |
|-----------------------|---------------------------------------------|
| Model Number          | Wide Mouth Juice Extractor                  |
| Color                 | Chrome Silver                               |
| Material              | Stainless Steel                             |
| Maximum Power         | 150 Watts                                   |
| Wattage               | 150 watts                                   |
| Power Source          | Corded Electric                             |
| Recommended Uses      | Fruits, Vegetables                          |
| Blade Material        | Stainless Steel                             |
| Dishwasher Safe Parts | Yes (Removable parts)                       |
| Item Weight           | 5 Pounds                                    |
| Included Components   | One Juice Cup, One Pulp Cup, One Push Stick |

## WARRANTY INFORMATION

This Megachef Masticating Slow Juicer Extractor is covered by a manufacturer's warranty against defects in materials and workmanship under normal household use. Please refer to the product packaging or contact Megachef customer support for specific warranty terms and conditions, including duration and coverage details. Keep your purchase receipt as proof of purchase for any warranty claims.

## SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Megachef customer service. Contact information can typically be found on the product packaging, the official Megachef website, or through your retailer. When contacting support, please have your product model number and purchase date available.

