

[manuals.plus](#) /› [FOHERE](#) /› [FOHERE Smart Double Belgian Waffle Maker Model 5403 Instruction Manual](#)

FOHERE 5403

FOHERE Smart Double Belgian Waffle Maker Model 5403 Instruction Manual

Model: 5403 | Brand: FOHERE

INTRODUCTION

Thank you for purchasing the FOHERE Smart Double Belgian Waffle Maker, Model 5403. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The floating lid automatically adjusts to the contents for optimal cooking results with leavened dough. Ensure not to clip the latch when closing the lid.

PRODUCT OVERVIEW

The FOHERE Smart Double Belgian Waffle Maker is designed for ease of use and consistent results. Familiarize yourself with its components:



Image Description: A detailed diagram of the FOHERE Smart Double Belgian Waffle Maker, showing its various components. Key parts labeled include: double heating elements (top and bottom), large insulated handle, easy-release button for storage, extra-deep non-stick heating plates, overflow channel (no spillage), selectable 7 browning levels, 5 pre-programmed waffle types, countdown timer, and two selectable waffle textures.

- **Double Heating Elements:** Ensures precise and even heat distribution for consistent waffle cooking.
- **Insulated Handle:** For safe opening and closing of the waffle maker.
- **Control Panel with LCD Display:** Features Power, Menu, Crisp Exterior/Moist Interior, Uniform Texture buttons, and a rotary knob for browning levels. The LCD displays cooking time, selected program, and browning level.
- **Non-Stick Waffle Plates:** Extra-deep plates designed for Belgian waffles, with an overflow channel to prevent spills.
- **Safety Latch:** For secure storage.
- **Cord Storage & Non-Slip Feet:** For convenience and stability.

SETUP

1. **Unpacking:** Carefully remove the waffle maker and all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. The non-stick plates can be wiped with a soft, damp cloth. Do not immerse the appliance in water.
3. **First Use Preparation:** Before first use, it is recommended to lightly grease the non-stick plates with a small amount of cooking oil or butter. Close the lid and plug in the appliance. Allow it to heat up for approximately 5-10 minutes on a medium setting to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Unplug and allow to cool, then wipe the plates clean.
4. **Placement:** Place the waffle maker on a stable, heat-resistant, and dry surface, away from walls or cabinets to allow for proper ventilation.

OPERATING INSTRUCTIONS

The FOHERE Smart Double Belgian Waffle Maker features an intelligent LED display and pre-programmed settings for optimal waffle preparation.

Step-by-Step Operation:

SCHRITTE IN RICHTUNG GOLDENER FLAUSCHIGER WAFFELNC

I

Waffelhersteller einstecken.
POWER-Taste drücken, um
das LCD-Display aufzuhellen



II

MENU-Taste drücken, Der
Waffelhersteller beginnt nach
5 Sekunden ohne Betrieb mit
dem Vorheizen, Das Roast
Color Grade zusammenfunkelt.

III

Wenn das Vorheizen beendet
ist, ertönt ein 1x-Piepton.



IV

Gießen Sie den Teig auf den
Teller, die Arbeitszeit beginnt
herunterzuzählen.

V

Der Countdown wird 00: 00
und kehrt bald zu 03: 35
zurück. Das Waffeleisen piept
6 Mal, wenn es fertig ist.



Image Description: A visual guide illustrating the five steps to operate the waffle maker. Step I: Plug in and press POWER. Step II: Press MENU to select waffle type; the display shows cooking time and browning level. Step III: A single beep indicates preheating is complete. Step IV: Pour batter onto plates; countdown begins. Step V: The waffle maker beeps 6 times when cooking is finished.

- I. **Power On:** Plug the waffle maker into a suitable power outlet. Press the **POWER** button to illuminate the LCD display.
- II. **Select Waffle Type:** Press the **MENU** button to cycle through the 5 available programs:
 - Belgian Waffles
 - Chocolate Waffles

- Classic Waffles
- Buttermilk Waffles
- Custom Setting

The waffle maker will automatically calculate the correct cooking time and suggest a browning level for the selected type. If no operation is performed for 5 seconds, preheating will begin.

- III. **Preheating Indication:** Once preheating is complete, the appliance will emit a single beep.
- IV. **Pour Batter:** Carefully pour your waffle batter onto the preheated waffle plates. Close the lid. The countdown timer will automatically begin.
- V. **Cooking Completion:** When the cooking cycle is finished, the waffle maker will beep 6 times. Open the lid and carefully remove your waffles using a non-metallic utensil.

Understanding the Digital Display and Controls:

DIGITALER BILDSCHIRM

Der FOHERE Advanced Waffle Maker verfügt über eine Auswahl an Bedienelementen zum Kochen aller Arten von Waffeln

1. Roast Color Grade

2. Characteristic Function

3. Arbeitszeit

4. Funktion



Image Description: A close-up view of the FOHERE Waffle Maker's digital display. It highlights four key areas: 1. Roast Color Grade (browning level from LIGHT 1 to DARK MAX 7), 2. Characteristic Function (waffle texture options: Crisp Exterior/Moist Interior or Uniform Texture), 3. Working Time (countdown timer), and 4. Function (waffle type selection: Belgian, Classic, Chocolate, Buttermilk, Custom).

- **Browning Levels (1-7):** Use the rotary knob to adjust the desired browning level from 1 (lightest) to 7 (darkest). This can be done before or during the cooking cycle.
- **Waffle Texture:** Select between "Crisp Exterior / Moist Interior" or "Uniform Texture" using the dedicated buttons. This allows for customization of your waffle's consistency.
- **Custom Setting:** For advanced users, the "Custom" program allows you to manually set your preferred cooking time, browning level, and texture.

- **Countdown Timer:** The LCD display shows the remaining cooking time. This timer starts automatically once the lid is closed after pouring batter.

FOHERE

1600W GLEICHMÄßIGE HITZE MIT THERMAL PRO

Thermisch gefertigte Heizelemente sorgen für eine gleichmäßige Hitzeverteilung und fluffigere Backereignisse



Image Description: An illustration demonstrating the 1600W even heat distribution within the FOHERE Waffle Maker. It shows heat elements glowing orange, ensuring uniform cooking, contrasted with a diagram of a conventionally cooked waffle that might have dry edges and undercooked centers.

The 1600W heating elements ensure even heat distribution, preventing dry edges or undercooked centers, resulting in consistently baked waffles.


CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your FOHERE Waffle Maker.

SIE VERDIENEN EINE BESSERE



VS

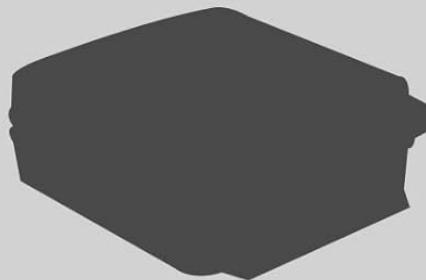

1600 W Thermal Pro Even Heat:

Thermisch konstruierte Heizelemente sorgen für eine gleichmäßige Wärmeverteilung



800 W Heat:

Nicht genug Hitze, ungleichmäßiges Backen

LCD-Display:

intelligent und übersichtlich



Herkömmliche Maschinen:

nur eine Taste

Signaltonanzeige:

einstellen, loslassen



keine Aufforderung:

Unfähigkeit, sich auf andere Dinge zu konzentrieren

Premium-PFOA-freie tiefe Antihaftbeschichtung



herkömmlicher Grill:

einfach zu kleben

Großer wärmeisolierender Griff



kurzer heißer Griff

Image Description: A comparison image highlighting the easy cleaning features of the FOHERE Waffle Maker. It shows wiping the non-stick surface with a cloth (check mark) versus other waffle makers that may have difficult-to-clean crevices or exposed heating elements (X marks).

- Always Unplug:** Ensure the waffle maker is unplugged from the power outlet and completely cooled before cleaning.
- Cleaning Waffle Plates:** The non-stick plates are designed for easy cleaning. Wipe them with a soft, damp cloth or sponge. For stubborn batter residue, dampen a cloth with a small amount of cooking oil

and gently rub the area, then wipe clean with a damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.

- Cleaning Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use abrasive cleaners.
- Do Not Immerse:** Never immerse the waffle maker, cord, or plug in water or any other liquid.
- Storage:** Once clean and dry, the waffle maker can be stored upright to save space. Use the safety latch to keep the lid securely closed. The cord can be wrapped for tidy storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffle maker does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the appliance is securely plugged into a working power outlet. Check the power button.
Waffles are not cooking evenly.	Uneven batter distribution; incorrect browning level; preheating not complete.	Ensure batter is spread evenly. Allow the appliance to fully preheat (single beep). Adjust browning level.
Waffles stick to the plates.	Plates not properly greased; damaged non-stick coating; incorrect batter consistency.	Lightly grease plates before each use. Ensure non-stick coating is intact. Adjust batter consistency if too thin or thick.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few minutes.
Waffles are too light or too dark.	Browning level setting is incorrect.	Adjust the browning level using the rotary knob (1 for light, 7 for dark).

SPECIFICATIONS

Brand	FOHERE
Model Number	5403
Power	1600W
Voltage	220V
Material	Stainless Steel, Aluminum, Plastic
Product Dimensions (L x W x H)	30 x 35 x 20 cm
Item Weight	3.97 Kilograms
Special Features	5 Different Programs, 7 Browning Levels, LCD Display, Automatic Shut-off

WARRANTY AND SUPPORT

FOHERE is committed to providing quality products and customer satisfaction. Your purchase includes:

- **Worry-Free Purchase:** We stand by our product.
- **Lifetime Technical Advice and Customer Service:** Should you encounter any issues or have questions regarding your FOHERE Smart Double Belgian Waffle Maker, please contact our customer support team. We are always available to assist you.

For support, please refer to the contact information provided with your product packaging or visit the official FOHERE website.

Related Documents - 5403

	<p>FOHERE SNJ-159B Yogurt Maker User Manual and Guide</p> <p>Comprehensive user manual for the FOHERE SNJ-159B Yogurt Maker. Includes setup instructions, operation guide, basic yogurt recipes, advanced uses for cheese, fermented rice, and natto, troubleshooting tips, maintenance advice, and product specifications.</p>
	<p>FOHERE RH-906 Popcorn Maker User Manual - Operation, Care, and Troubleshooting</p> <p>Comprehensive user manual for the FOHERE RH-906 Popcorn Maker. Includes important safety instructions, operating guidance, care and cleaning tips, and troubleshooting advice for household use.</p>
	<p>Fohere Intelligent Tea Master KT600 User Manual: Perfect Tea Brewing Guide</p> <p>Discover how to achieve perfect tea brews with the Fohere Intelligent Tea Master KT600. This user manual provides comprehensive instructions on operation, safety, care, and troubleshooting for precise temperature-controlled tea making.</p>
	<p>FOHERE KC211 Coffee Maker User Manual - Hot & Iced Coffee Brewer Instructions</p> <p>Comprehensive user manual for the FOHERE KC211 Coffee Maker, detailing operation, safety, cleaning, and troubleshooting for both hot and iced coffee brewing. Includes product parameters and indicator light explanations.</p>
	<p>FOHERE Tea Master KT-Z1 Quick Start Guide: Brewing Perfect Tea</p> <p>Learn how to set up and use your FOHERE Tea Master KT-Z1 electric kettle with this quick start guide. Includes safety information, initial cleaning, and brewing instructions for perfect tea.</p>



[Foheré Electric Kettle Instruction Manual - Safety, Usage, and Maintenance Guide](#)

This comprehensive instruction manual for the Foheré electric kettle provides essential safety guidelines, operating instructions, temperature settings, and cleaning and maintenance procedures. Learn how to safely use and care for your appliance.