

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Glazata](#) /
- › [Glazata Wireless Bluetooth Headset EC300N User Manual](#)

## Glazata EC300N

# Glazata Wireless Bluetooth Headset EC300N User Manual

Model: EC300N | Brand: Glazata

## 1. INTRODUCTION

Thank you for choosing the Glazata Wireless Bluetooth Headset EC300N. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new headset. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

## 2. PACKAGE CONTENTS

The Glazata EC300N package typically includes:

- Glazata Wireless Bluetooth Headset EC300N
- USB Type-C Charging Cable
- Ear Hooks (various sizes)
- Ear Tips (various sizes)
- User Manual (this document)

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Glazata EC300N headset.



Image 3.1: Glazata EC300N Wireless Bluetooth Headset. This image shows the sleek black design of the headset with its ear hook and control buttons.

次世代版

Qualcomm cVcテクノロジー

MEMS高感度マイク搭載



- 👉 デュアルマイク高音質設計
- 👉 ENCノイズ除去技術
- 👉 aptX™ & aptX™ HD対応
- 👉 次世代急速充電スマートチップ搭載

約40分で完全復活 爆速フル充電

Qualcomm aptX™ HD

※ご使用の携帯電話がAptx対応である必要があります

Image 3.2: Key features of the Glazata EC300N. This diagram highlights the Qualcomm cVc technology, MEMS high-sensitivity microphone, dual microphone high-quality design, ENC noise reduction, aptX & aptX HD support, and fast charging capabilities.

### 3.1. Key Features

- **Qualcomm Smart Chip:** Equipped with an industry-leading Qualcomm smart chip for stable performance and efficient power consumption.
- **aptX & aptX HD, SBC/AAC Support:** Compatible with multiple audio codecs for high-quality sound transmission and reduced latency.
- **Dual Microphone Call Design with ENC Noise Reduction:** Features two microphones (feed-back canceling function) to automatically cancel ambient noise and accurately calculate the direction of the speaker, ensuring clear call quality.
- **MEMS High-Sensitivity Microphone:** Utilizes a superior MEMS microphone for high sensitivity and omnidirectionality, reducing noise during use for HD calls.
- **Fast Charging:** Supports rapid charging, allowing for quick power replenishment.
- **Mute Function:** Allows you to mute your voice during a call.
- **Voice Assistant Support:** Compatible with Siri and Android voice assistants.

## 4. SETUP

### 4.1. Charging the Headset

Before first use, fully charge the headset. The EC300N supports fast charging via its Type-C port.

1. Connect the USB Type-C charging cable to the headset's charging port.
2. Connect the other end of the cable to a USB power source (e.g., computer, wall adapter).
3. The indicator light will show charging status. A full charge typically takes approximately 40 minutes.

# 次世代急速充電スマートチップ搭載

**約40分** 完全復活 爆速フル充電



低消費チップ、バッテリー一つで十分

**業界先端Qualcomm社製スマートチップ搭載**



**防塵充電ポート**

## Type-C急速充電

従来のMicroUSB充電で2時間以上必要ですが、  
主流Type-C急速充電で40分だけです

Image 4.1: Fast charging feature. This image illustrates connecting the Type-C charging cable to the headset, highlighting the rapid charging capability.

### 4.2. Pairing with a Device

The EC300N supports automatic pairing after the initial setup.

1. **Power On:** Press and hold the multi-function button until the indicator light flashes, indicating it's in pairing mode.

2. **Enable Bluetooth:** On your smartphone, tablet, or computer, enable Bluetooth.
3. **Select Device:** In the Bluetooth settings, search for available devices and select "EC300N".
4. **Confirm Pairing:** Once connected, the indicator light will change, and a voice prompt will confirm successful pairing.



iPhone, iPadなどiOSデバイスでは、バッテリー残量を右上隅から下にスワイプする方法又はウィジェットを使う方法これら2通りの方法により表示され、そこからいつでも電池残量を確認することができ、バッテリー不足の心配不要  
【注: Android一部機種がAndroidシステム設定原因により、表示がされないかもしれません】



Image 4.2: Automatic pairing process. This image shows a smartphone's Bluetooth settings screen displaying the EC300N as a discoverable device, and the headset wirelessly connected.

### 4.3. Multi-Pairing

The headset can be paired with two devices simultaneously. To switch between devices, simply play audio or answer a call on the desired device.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Power On/Off

- **Power On:** Press and hold the multi-function button for approximately 3 seconds.
- **Power Off:** Press and hold the multi-function button for approximately 5 seconds.

### 5.2. Call Functions

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.
- **Mute/Unmute:** During a call, press the dedicated mute button. Your voice will be silenced, and the other party will not hear you.

## ミュート機能

通話中、ミュートボタンを押すと自分の声を消すことができ、相手にこちらの声は聞こえません。



## 音声アシスタント

待機中にマルチ・ボタン（着信時に受話のために押すボタン）を3秒（反応があるまで）長押し、手を離すと、siriが起動します。



Image 5.1: Mute function in use. This image depicts individuals using the headset, demonstrating the mute button's functionality during a call.

### 5.3. Voice Assistant (SIRI/Android)

While in standby mode, press and hold the multi-function button for approximately 3 seconds (until a response is heard). Release the button to activate Siri or your Android voice assistant.

### 5.4. Volume Control

Use the volume buttons on the headset to adjust the audio level.

## 6. MAINTENANCE

### 6.1. Cleaning

Wipe the headset with a soft, dry cloth. Do not use abrasive cleaners or solvents.

### 6.2. Storage

Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.

### 6.3. Water Resistance

#### Important Note:



Image 6.1: Water resistance warning. This image shows a crossed-out water droplet icon, indicating that the product is not fully waterproof.


This product is not fully waterproof. Avoid using it in heavy rain or submerging it in water for extended periods. While it features nanolayer surface treatment technology for a certain level of moisture protection, it is designed for normal use under conditions of 90% RH or less. Always remove the headset before washing clothes or pants to prevent damage.

## 7. TROUBLESHOOTING

### 7.1. No Sound or Connection Issues

If you experience no sound or difficulty connecting, try the following reset method:

## リセット方法:音声の不具合時にお試し下さい

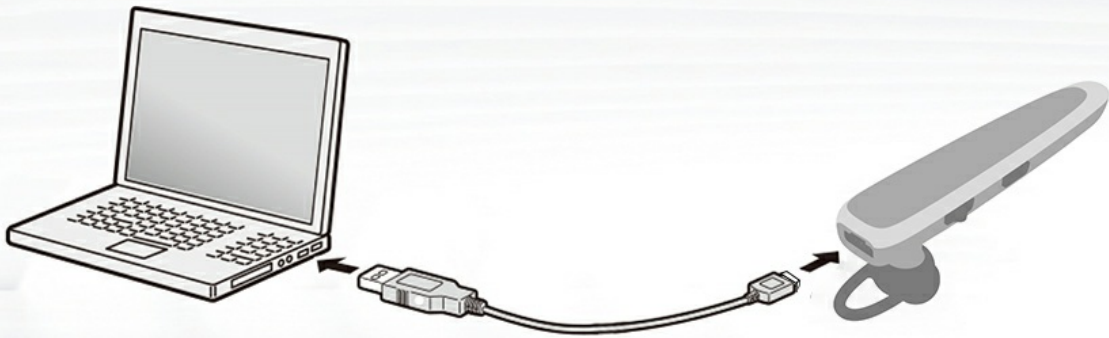

- ①まず携帯Bluetooth接続画面からペアリングを解除、
- ②携帯デバイスとイヤホン両方再起動して又はマルチボタンを約3秒押し続けてペアリングを再度行う

Image 7.1: Headset reset method. This diagram shows a laptop connected via USB to a charging cable, which is then connected to the headset, illustrating a potential reset or firmware update process.

1. Delete the pairing record for "EC300N" from your device's Bluetooth settings.
2. Restart both your device and the headset. Alternatively, press and hold the multi-function button on the headset for approximately 3 seconds to re-enter pairing mode and attempt to pair again.

## 7.2. Mute Function Behavior



ミュート操作方法につきまして、  
ミュートボタンは通話中のみ有効になります。

- 🔊 本ヘッドセットをPCに接続する際、ヘッドセットのミュート機能を使用する時、まず、PCのマイクをOFFにしてください。
- 🔊 PCマイク禁止の手順はPCの設置⇒音声設置⇒音声⇒音声デバイス管理⇒マイクをOFF、になります。
- 🔊 本ヘッドセットを利用し、Zoom会議する際、ミュート機能を使用時、直接本ヘッドセットのミュートボタンを押してください。
- 🔊 iPad、タブレット、スマートフォンでは、ミュート機能使用するとき、直接ヘッドセットのミュートボタンを押してください。PCのような設定が不要です。

Image 7.2: Mute operation for Zoom and PC. This image shows a Zoom call interface and provides instructions for using the mute function with the headset on a PC, iPad, tablet, or smartphone.

The mute button on the headset is only active during a call.

- **When connecting to a PC:** If using the headset's mute function, first turn off the PC's microphone. To do this, go to PC settings > Sound > Sound device management > Microphone > OFF.
- **For Zoom meetings:** When using the headset for Zoom meetings, directly press the headset's mute button.
- **For iPad, tablets, smartphones:** When using the mute function, directly press the headset's mute button. No PC-like settings are required.

### 7.3. Calls via LINE App



Image 7.3: Notes on calls using the LINE app. This image displays a smartphone screen during a LINE call and provides important information regarding headset functionality with the LINE application.

When making calls via apps like LINE:

- You will hear the incoming call ringtone from the earphone. However, microphone and volume adjustment functions are handled by the headset's side buttons. Answering and ending calls cannot be done using the smartphone's buttons.
- This is not an issue with the earphone itself, but rather due to the software design of the LINE app. This applies to other wireless headsets on the market as well.

## 8. SPECIFICATIONS

Feature	Specification
Model Name	EC300N
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Included Components	Instruction Manual

Target Age	Adult
Material	Plastic
Control Type	Voice Control
Cable Feature	Cable-less
Control Method	Touch
Number of Items	1
Battery Required	Yes
Manufacturer	Glazata
Package Dimensions	11.5 x 9.2 x 2.7 cm
Weight	100 g
Color	Black
Headphone Style	Ear-hook
Noise Control	ENC Noise Reduction

## 9. WARRANTY AND SUPPORT

### 9.1. Warranty Information

Glazata products are designed and manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card included with your product or contact Glazata customer support.

### 9.2. Customer Support

If you have any questions, concerns, or require technical assistance, please contact Glazata customer support through the official website or the contact information provided in your product packaging. Please have your model number (EC300N) and purchase details ready when contacting support.