



Manuals.plus /

- › Epson /
- › Epson EcoTank L15150 - A3 Wi-Fi Duplex All-in-One Ink Tank Printer User Manual

Epson L15150

Epson EcoTank L15150 User Manual

A3 Wi-Fi Duplex All-in-One Ink Tank Printer

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Epson EcoTank L15150 A3 Wi-Fi Duplex All-in-One Ink Tank Printer. Please read this manual thoroughly before using the product to ensure proper operation and to prevent damage.

The Epson EcoTank L15150 is designed for high-volume printing, scanning, copying, and faxing, offering a cost-effective solution with its integrated ink tank system. It supports A3 size printing, automatic duplexing, and various connectivity options including Wi-Fi, Wi-Fi Direct, Ethernet, and USB.



Figure 1: Epson EcoTank L15150 All-in-One Printer

2. SETUP

2.1 Unpacking and Initial Inspection

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Verify that all included accessories are present:

- Epson EcoTank L15150 Printer
- Power Cord
- Initial Ink Bottles (Black, Cyan, Magenta, Yellow)
- Setup Guide
- CD-ROM for software (drivers, utilities)

2.2 Filling the Ink Tanks

The EcoTank L15150 uses an integrated ink tank system. Follow these steps to fill the ink tanks:

1. Open the ink tank unit cover on the side of the printer.
2. Uncap the ink bottle for the corresponding color (Black, Cyan, Magenta, Yellow).
3. Insert the ink bottle into the correct tank opening. The bottles are keyed to fit only the correct color tank.
4. Allow the ink to drain into the tank. Do not squeeze the bottle. The ink will stop flowing automatically when the tank is full.

5. Once filled, remove the bottle and securely close the ink tank cap.
6. Repeat for all colors.
7. Close the ink tank unit cover.

2.3 Power Connection

Connect the power cord to the printer's power input and then to a grounded electrical outlet. Do not connect the printer to a computer yet.

2.4 Initial Ink Charging

After connecting power, press the power button to turn on the printer. The printer will begin an initial ink charging process. This may take approximately 10-15 minutes. Do not turn off the printer or perform any other operations during this process.

2.5 Software Installation and Network Setup

Once ink charging is complete, proceed with software installation. Insert the provided CD-ROM into your computer or download the latest drivers and software from the official Epson support website. Follow the on-screen instructions to install the necessary software and set up your preferred connection method (Wi-Fi, Wi-Fi Direct, Ethernet, or USB).

- **Wi-Fi Setup:** Use the printer's control panel to select Wi-Fi setup and follow the prompts to connect to your wireless network.
- **Ethernet Setup:** Connect an Ethernet cable from the printer to your network router or switch.
- **USB Setup:** Connect a USB cable from the printer to your computer only when prompted by the software installer.

3. OPERATING INSTRUCTIONS

3.1 Loading Paper

The L15150 supports various paper sizes and types, including A3. It features multiple paper trays.



Figure 2: Epson EcoTank L15150 with paper trays

1. Pull out the desired paper cassette (Tray 1 or Tray 2) or open the rear paper feed slot.
2. Adjust the paper guides to the size of the paper you are loading.
3. Load the paper print-side down (for cassettes) or print-side up (for rear feed).
4. Do not overload the tray. Ensure the paper stack is below the maximum load line.
5. Close the paper cassette or rear paper feed.

3.2 Printing Documents

To print from your computer or mobile device:

- Open the document or image you wish to print.
- Select **Print** from the application's menu (e.g., File > Print).
- Choose **Epson EcoTank L15150** as your printer.
- Adjust print settings such as paper size, print quality, and duplex printing (for two-sided prints) as needed.
- Click **Print**.

For mobile printing, use Apple AirPrint™ for iOS devices or Mopria™ Print Service for Android devices, ensuring your device is on the same network as the printer.

3.3 Scanning Documents

The L15150 features an Automatic Document Feeder (ADF) and a flatbed scanner.

- **Using the ADF:** Place documents face-up in the ADF input tray.
- **Using the Flatbed:** Lift the scanner lid and place the document face-down on the scanner glass, aligning it with the corner mark.

- From the printer's control panel, select **Scan** and choose your desired destination (e.g., computer, cloud, USB drive).
- Alternatively, use Epson Scan software on your computer to initiate scanning and adjust settings.

3.4 Copying Documents

To make copies directly from the printer:

1. Place the original document on the scanner glass or in the ADF.
2. On the printer's control panel, select **Copy**.
3. Adjust settings such as number of copies, paper size, color/black & white, and reduction/enlargement.
4. Press the **Start** button to begin copying.

3.5 Faxing Documents

The L15150 includes fax functionality:

1. Connect a phone line to the printer's LINE port.
2. Place the document to be faxed on the scanner glass or in the ADF.
3. On the control panel, select **Fax**.
4. Enter the recipient's fax number using the numeric keypad.
5. Adjust any necessary fax settings.
6. Press the **Start** button to send the fax.

4. MAINTENANCE

4.1 Checking Ink Levels and Refilling

Visually inspect the ink tanks on the front of the printer to monitor ink levels. When an ink tank is low, refill it using genuine Epson ink bottles as described in Section 2.2. Do not allow ink levels to fall below the lowest line indicated on the tank.

4.2 Print Head Cleaning

If print quality declines (e.g., missing lines, faded prints), perform a print head cleaning:

- From the printer's control panel, navigate to **Setup > Maintenance > Print Head Cleaning**.
- Follow the on-screen prompts. This process uses a small amount of ink.
- After cleaning, print a nozzle check pattern to verify print quality.

4.3 Nozzle Check

To check for clogged nozzles, print a nozzle check pattern:

- From the printer's control panel, navigate to **Setup > Maintenance > Nozzle Check**.
- Examine the printed pattern for any gaps or missing segments. If imperfections are present, perform a print head cleaning.

4.4 Paper Path Cleaning

If smudges or streaks appear on prints, the paper path may need cleaning. Refer to the printer's on-screen manual or Epson support website for specific instructions on cleaning the paper rollers.

4.5 Firmware Updates

Periodically check for firmware updates on the Epson support website. Firmware updates can improve printer performance, add new features, or resolve issues. Follow the instructions provided by Epson for safe firmware installation.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson EcoTank L15150.

Problem	Possible Cause	Solution
Printer is not turning on.	Power cord is not securely connected.	Ensure the power cord is firmly plugged into the printer and a working electrical outlet.
Paper jam error.	Paper is stuck in the printer's paper path.	Turn off the printer, open all covers, and carefully remove any jammed paper. Refer to the printer's on-screen guide for specific jam locations.
Poor print quality (streaks, faded colors).	Clogged print head nozzles; low ink levels.	Perform a Nozzle Check and Print Head Cleaning (see Section 4). Refill ink tanks if levels are low.
Printer not connecting to Wi-Fi.	Incorrect Wi-Fi password; printer too far from router; network issues.	Verify Wi-Fi password. Move printer closer to router. Restart printer and router. Re-run Wi-Fi setup from control panel.
"Ink Pad Needs Service" message.	Waste ink pad is nearing or at the end of its service life.	This requires service by an authorized Epson service provider. Contact Epson support.

For more detailed troubleshooting, refer to the comprehensive user guide available on the Epson support website or contact Epson customer support.

6. SPECIFICATIONS

Feature	Detail
Model Name	L15150
Functions	Print, Scan, Copy, Fax
Printing Technology	Inkjet (Epson Heat-Free Technology)
Maximum Print Resolution	4800 x 1200 dpi
Max Print Speed (Black ISO)	25 ppm
Max Print Speed (Color ISO)	12 ppm
Duplex Printing	Automatic (Yes)
Scanner Type	Flatbed and ADF (Automatic Document Feeder)
Scanning Optical Resolution	1200 x 2400 dpi
Connectivity	Wi-Fi, Wi-Fi Direct, Ethernet, USB 2.0
Mobile Printing	Apple AirPrint™, Mopria™ Print Service
Compatible Ink	Epson 008 Ink Bottles
Product Dimensions (D x W x H)	50D x 35W x 52H centimetres
Item Weight	20.7 Kilograms

7. WARRANTY AND SUPPORT

7.1 Product Warranty

Your Epson EcoTank L15150 printer comes with a limited warranty. Please refer to the warranty card included in your product packaging or visit the official Epson website for detailed terms and conditions, including warranty period and coverage. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact Epson customer support. You can find contact information, FAQs, and additional resources on the official Epson support website:

Visit [Epson Support Website](#)

When contacting support, please have your printer's model name (L15150) and serial number ready. The serial number is typically located on a sticker on the back or bottom of the printer.