



Manuals.plus /

› Sedzofan /

› Sedzofan Kids Smart Watch S16 Instruction Manual

Sedzofan S16

Sedzofan Kids Smart Watch S16 Instruction Manual

Model: S16

1. INTRODUCTION

This manual provides detailed instructions for the Sedzofan Kids Smart Watch S16. It covers product features, setup, operation, maintenance, and troubleshooting to ensure optimal use of the device. The watch is designed for children and includes various entertainment and utility functions.



Image 1.1: The Sedzofan Kids Smart Watch S16, showcasing its blue color and digital display.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Multifunctional Design:** Includes camera, MP3 player, video recording, pedometer, voice recorder, 24 puzzle games, alarm clock, time teacher, audiobooks, learn card, habit tracker, stopwatch, calendar, timer, calculator, and flashlight.
- **HD Touch Screen:** Features a 1.54-inch IPS HD colored touch screen for easy operation.
- **Built-in Games:** Offers 24 pre-installed puzzle games designed to engage children and develop logical thinking and hand-eye coordination.
- **Camera and Video Recording:** Equipped with an HD camera for taking photos and recording videos, including fun head stickers.

- **Durable and Comfortable:** Constructed from non-toxic ABS plastic with a soft, adjustable silicone strap. It is sweatproof and splash-resistant.



Image 2.1: The watch interface showing icons for alarm, torch, camera, MP3 player, calculator, video, recorder, theme, calendar, stopwatch, games, pedometer, and alarm clocks.

2.2 What's in the Box

- 1 x Kids Smart Watch
- 1 x User Manual
- 1 x Screen Protector
- 1 x USB Charging Cable

3. SETUP

3.1 Initial Charging

Before first use, ensure the watch is fully charged. If the watch does not turn on, connect it to a power source using the provided USB charging cable and charge for at least 10 minutes. The watch requires 1 Lithium Ion battery (included).

3.2 Power On/Off

- **To Power On:** Press and hold the Home button for 2 seconds.
- **To Power Off:** Navigate to the settings menu on the watch, then select the power off option.

3.3 Music Download

To add music files to the watch:

1. Turn off the watch.
2. Connect the watch to a computer using the USB cable.
3. Locate the watch's storage on your computer.
4. Transfer your desired MP3 format songs to the "My Music" folder on the watch.



Image 3.1: Detailed view of the watch highlighting its components: HD Camera, Soft Band, Metal Shell, Flashlight, USB Socket, and Home Button.

4. OPERATING INSTRUCTIONS

4.1 Navigation

The watch features a touch screen display. Swipe left or right to navigate between applications and menus.

Tap an icon to open an application.

4.2 Camera and Video Recording

Access the Camera application from the main menu. You can take photos or record videos. The watch also includes fun head stickers for creative photos.



Image 4.1: The watch displaying its camera and video recording capabilities, with children capturing a moment.

4.3 Music Player

Open the MP3 Player application to listen to music files stored on the watch. Ensure music files are in MP3 format and transferred to the "My Music" folder.



Image 4.2: A child enjoying music through headphones while wearing the smart watch.

4.4 Games

The watch includes 24 puzzle games. Select the Games application to browse and play. These games are designed to be engaging and help develop cognitive skills.



Image 4.4: The watch showing its activity tracking function, including pedometer, calories, timer, and stopwatch, with children engaged in outdoor play.

4.6 Alarm Clock

Set multiple alarms through the Alarm Clock application. This feature can be used for daily routines like waking up or reminding children of tasks.



4.7 Flashlight

Activate the built-in flashlight feature for illumination in dark environments. This can be accessed via a dedicated icon or button.



Image 4.6: The watch's flashlight feature being used by children for reading in low light conditions.

4.8 Other Functions

- **Time Teacher:** An educational tool to help children learn to tell time.
- **Audiobooks:** Access pre-loaded or transferred audio stories.
- **Learn Card:** Educational content for learning.
- **Habit Tracker:** Helps children track and develop good habits.
- **Stopwatch & Timer:** For timing activities.
- **Calendar:** View dates and schedule events.
- **Calculator:** A basic calculator for mathematical operations.



Image 4.7: The watch interface showing various icons for habit tracking, such as 'Get Up', 'Lunch', 'Dinner', 'Go to School',

'Breakfast', 'Sports', 'Go to Bed', 'Brush Your Teeth', 'Walk the Dog', 'Go Home', 'Reading', 'Homework', and 'Housework'.



Image 4.8: The watch showing its calculator function, useful for basic arithmetic.

5. MAINTENANCE

5.1 Cleaning

Wipe the watch with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

5.2 Water Resistance

The watch is sweatproof and splash-resistant. It is not suitable for bathing, showering, or swimming. Avoid submerging the watch in water.

5.3 Battery Care

To prolong battery life, avoid extreme temperatures. Charge the watch regularly and do not allow it to fully discharge for extended periods.

6. TROUBLESHOOTING

6.1 Watch Does Not Turn On

- Ensure the watch is charged. Connect it to the USB charging cable and charge for at least 10 minutes.
- Press and hold the Home button for 2 seconds to attempt to power it on.

6.2 Watch is Abnormal / Unresponsive

If the watch behaves abnormally or becomes unresponsive, a reset may be required:

1. Locate the reset button, typically a small pinhole between the flashlight and the Home button.
2. Use an unfolded paperclip or a similar thin object to gently press the reset button.
3. After resetting, charge the watch and then hold the Home button for 2 seconds to power it on.

6.3 Screen Protector

Please remove the screen protective film before using the smart watch for optimal display clarity.

7. SPECIFICATIONS

Brand	Sedzofan
Model Number	S16
Screen Size	1.54 Inches
Screen Display Size (Diagonal)	2" / 4 cm
Product Dimensions	9.25 x 1.5 x 0.39 inches
Item Weight	3.2 ounces
Battery Type	1 Lithium Ion battery (included)
Memory Storage Capacity	1 GB
Connectivity Technology	USB
Special Features	Camera, Games, Music, Pedometer, Audiobooks, Video, Flashlight, Learn Card, Alarm Clock, Audio Recording, Calendaring, Calculator, Stopwatch

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Sedzofan provides a 2-year warranty for this product. Please retain your proof of purchase for warranty claims.

8.2 Customer Service

For any questions, technical support, or warranty inquiries, please contact Sedzofan customer service. Lifetime friendly customer service is provided.