

[Manuals.plus](#) /

› [Ufree](#) /

› Ufree Professional Beard Trimmer for Men, Zero Gapped T-Blade Hair Clipper & Mustache Trimmer Kit with LCD Display, Precision Edgers for Haircut & Grooming, Barber-Grade Electric Shaver, Gifts for Men Bronze

Ufree U-1733

Ufree Professional Beard Trimmer User Manual

Model: U-1733

Brand: Ufree

1. INTRODUCTION

Thank you for choosing the Ufree Professional Beard Trimmer. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new grooming device. Please read it thoroughly before first use and keep it for future reference.

2. PRODUCT OVERVIEW & WHAT'S IN THE BOX

The Ufree Professional Beard Trimmer is designed for precision grooming, offering a versatile solution for beard, mustache, head, face, and body hair. Its robust construction and advanced features ensure a superior trimming experience.



Figure 2.1: Ufree Professional Beard Trimmer and included accessories.

Package Contents:

- Ufree Electric Beard Trimmer (Bronze)
- 4 Trimming Guards (1mm, 3mm, 5mm, 7mm)
- USB Charging Cable
- Lubricant Oil Bottle
- Cleaning Brush

UPGRADE 7500RMP MOTOR

High performance motor heat dissipation is good,
can run all day without heating up



Upgraded
Heat Dissipation



7500rpm



Powerful



Efficient



Figure 2.2: All components included in the Ufree Beard Trimmer kit.

Official Product Overview Video:

Video 2.1: An overview of the Ufree trimmer and shaver combo, showcasing its features and contents.

3. SETUP

Initial Charging:

1. Connect the USB charging cable to the charging port at the bottom of the trimmer.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included).
3. The LCD display will show the battery charging status. A full charge takes approximately 2 hours.
4. Once fully charged, the trimmer provides over 150 minutes of operation.

FAST CHARGE & PORTABLE

A long battery life to keep up with your intricate shaving routine

2 hours
Charging time

150 minutes
Working time



Figure 3.1: Illustration of the trimmer's fast charging capability and portable design.

SAMRT LCD DISPLAY REFUSE TO RUN OUT OF BATTERY



Battery indicator



Oil reminder



Charging Reminder



Figure 3.2: The smart LCD display provides real-time information on battery life, oil reminders, and charging status.

4. OPERATING INSTRUCTIONS

General Use:

1. Ensure the trimmer is charged.
2. Attach the desired trimming guard (1mm, 3mm, 5mm, or 7mm) for your preferred hair length, or use without a guard for a zero-gap trim.
3. Press the power button at the bottom of the trimmer to turn it on.
4. Gently move the trimmer against the direction of hair growth for an even cut.
5. The ultra-sharp titanium T-blade ensures smooth and precise trimming without irritation.

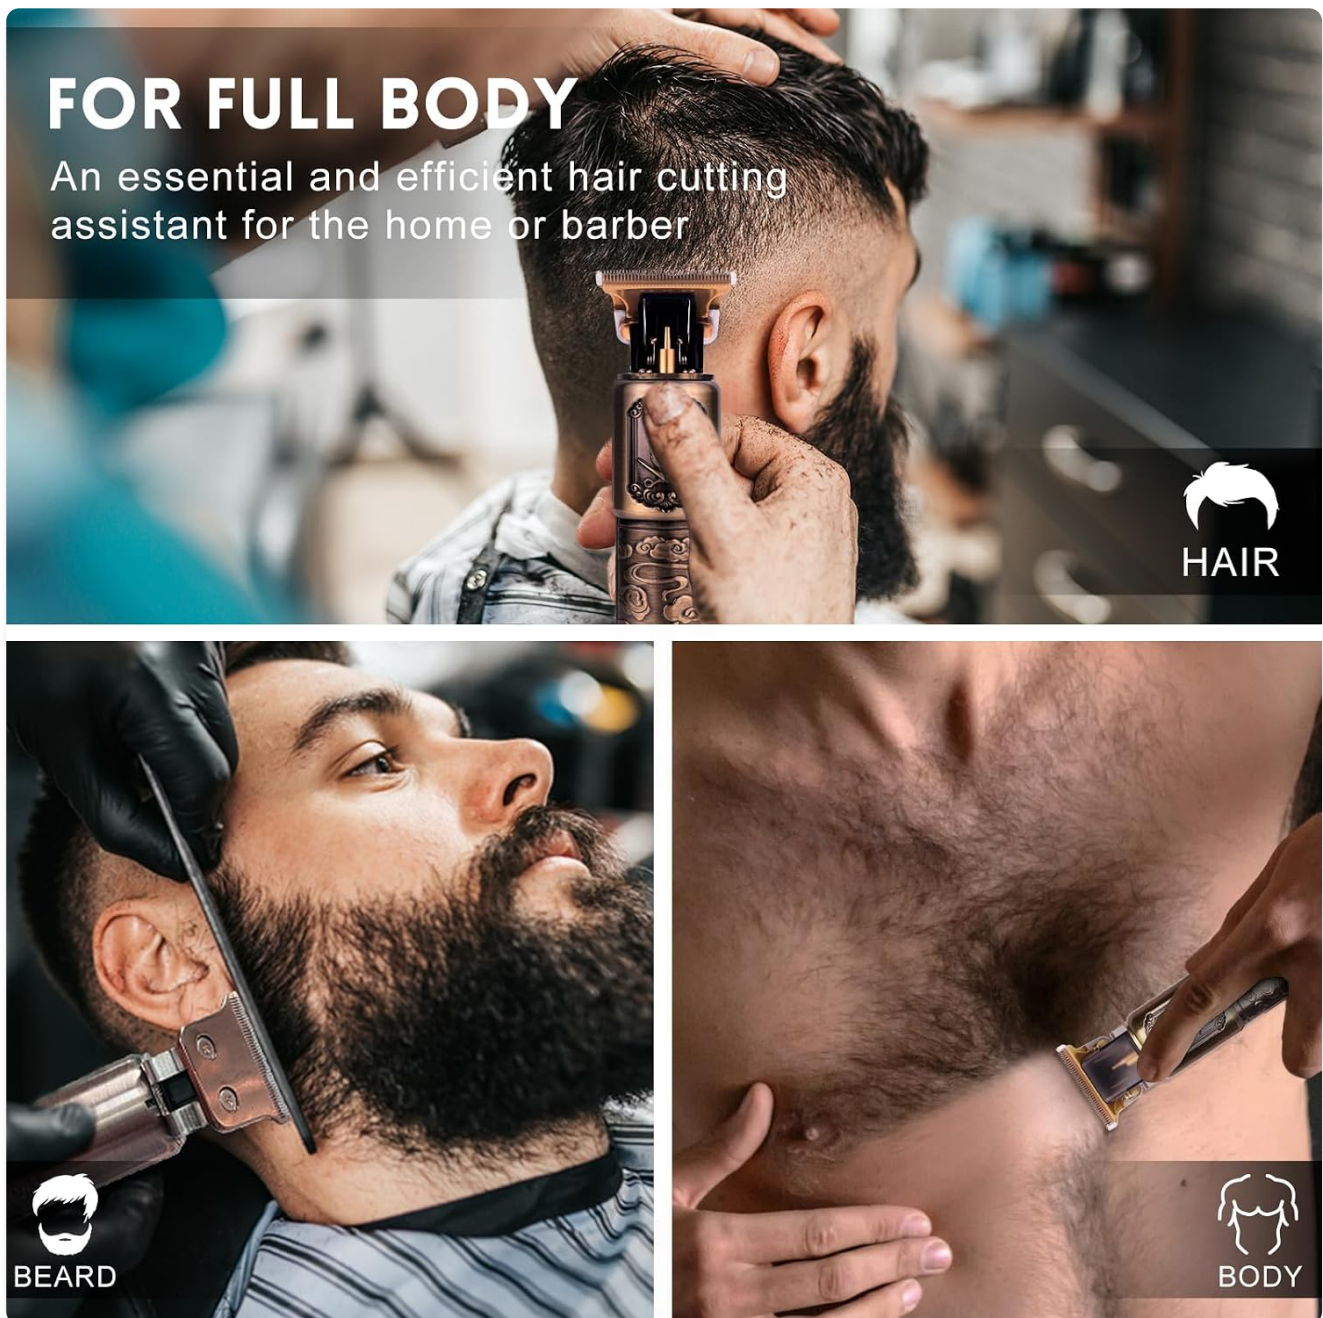


Figure 4.1: The trimmer is suitable for full body grooming, including hair, beard, and body hair.

1/3/5/7 MM LIMIT COMBS

With four limit combs, easily control the length of hair



Figure 4.2: Four different length limit combs are included to easily control hair length.

Blade Features:

The trimmer features an ultra-sharp titanium T-blade designed for close shaves and precision edging. Its R-shaped angle and small knife teeth ensure a clean cut without pulling hair.



Figure 4.3: Close-up of the sharp titanium T-blade, highlighting its precision features.

Motor Performance:

Equipped with an upgraded 7500 RPM motor, the Ufree trimmer provides powerful and efficient cutting performance. This high-speed motor ensures smooth operation and effective heat dissipation for prolonged use.

Ufree®

Beard Trimmer for Men

Premium blades and powerful motor for a perfect clean shave



Premium Blades



Powerful Motor



Waterproof



Chargeable



Figure 4.4: Visual representation of the upgraded 7500 RPM motor's performance and heat dissipation.

Product Usage Video:

Video 4.1: A demonstration of how to use the Ufree Hair Trimmer for various grooming needs.

5. MAINTENANCE

Cleaning:

1. After each use, turn off the trimmer and disconnect it from the power supply.
2. Remove the anti-clogging cover from the blade head.
3. Use the included cleaning brush to remove any hair clippings from the blade and the trimmer body.
4. The trimmer can be easily cleaned by rinsing the blade head under running water. Ensure the trimmer is completely dry before storage.



Figure 5.1: Step-by-step guide on how to easily clean the trimmer.

Lubrication:

- Regularly apply a few drops of the included lubricant oil to the blades to ensure smooth operation and prolong the life of the trimmer.
- Turn the trimmer on for a few seconds after oiling to distribute the lubricant evenly.

6. TROUBLESHOOTING

Common Issues:

- **Trimmer not turning on:** Ensure the battery is fully charged. Check the charging cable and adapter for any damage.
- **Poor cutting performance:** The blades might be dull or clogged with hair. Clean the blades thoroughly and apply lubricant oil. If performance does not improve, consider professional blade sharpening or replacement if available.
- **Excessive vibration or noise:** This could indicate a need for lubrication or cleaning of the blade mechanism. Ensure the anti-clogging cover is properly seated.

If you encounter persistent issues not covered here, please contact customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	U-1733
Product Dimensions	1.18 x 1.61 x 6.06 inches
Item Weight	280 Grams (9.88 ounces)
Blade Type	Ultra-Sharp Titanium T-Blade
Motor Speed	7500 RPM
Battery Life	Over 150 minutes (after 2-hour charge)
Charging Method	USB Type-C
Included Guards	1mm, 3mm, 5mm, 7mm
Color	Bronze
Country of Origin	China

8. SAFETY INFORMATION

Standard safety warnings for hair trimmers apply. To ensure safe operation and prevent injury or damage to the product, please observe the following:

- Keep the trimmer away from water and do not use it in wet environments (e.g., shower, bath) unless explicitly stated as waterproof.
- Do not disassemble the trimmer. Servicing should only be performed by qualified personnel.
- Keep out of reach of children.
- Avoid dropping the trimmer, as this may damage the blades or internal components.
- Do not use if the blades are damaged or bent, as this may cause injury.
- Only use the provided charging cable or a compatible USB-C cable for charging.

9. WARRANTY & SUPPORT

Ufree offers a **1-Year Warranty** on this product. For any inquiries, technical support, or warranty claims, please contact Ufree customer service.

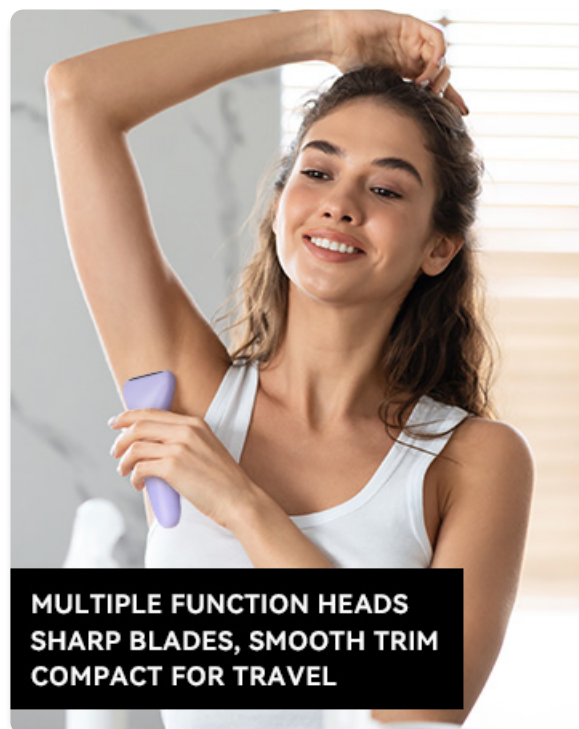


Figure 9.1: Ufree provides 30-day money back, 24-hour support, and a 1-year warranty.

You can also visit the official Ufree store on Amazon for more information and product registration.

[Visit the Ufree Store](#)

