



[Manuals.plus](#) /

› [AULCMEET](#) /

› AULCMEET 1810196 Remote Control User Manual for Hisense Air Conditioner DG11L1-04

AULCMEET BJKJ-1810196-JKJBEU

AULCMEET 1810196 Remote Control User Manual

For Hisense Air Conditioner Models DG11L1-04 and DG11L104

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your AULCMEET 1810196 replacement remote control. This remote is specifically designed to be compatible with Hisense Air Conditioner models DG11L1-04 and DG11L104. Please read this manual carefully to ensure proper use and to maximize the lifespan of your device.



Image 1.1: General view of the AULCMEET 1810196 remote control, a white unit with an LCD display and various control buttons.

2. SETUP

2.1 Battery Installation

The AULCMEET 1810196 remote control requires two AAA alkaline batteries (not included) for operation. No programming or pairing is necessary; simply insert the batteries correctly, and the remote will be ready for use.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image 2.1: Rear view of the AULCMEET 1810196 remote control with the battery compartment open, revealing slots for two AAA batteries.

3. OPERATING INSTRUCTIONS

This remote control is designed for straightforward operation without complex setup. Point the remote directly at your Hisense Air Conditioner unit for optimal signal transmission.

3.1 Button Functions

The remote features a clear LCD display and various buttons for controlling your air conditioner's functions. Below is a description of the primary buttons:



Image 3.1: Front view of the AULCMEET 1810196 remote control, showing the LCD display and all function buttons.

- **POWER (Red button in center):** Turns the air conditioner unit ON or OFF.
- **MODE:** Cycles through operating modes such as Cool, Heat, Fan, Dry, and Auto.
- **TEMP ▲/▼ :** Adjusts the desired temperature setting up or down.
- **FAN SPEED:** Changes the fan speed (e.g., Low, Medium, High, Auto).
- **SMART:** Activates the intelligent operating mode, which automatically adjusts settings for optimal comfort.
- **SUPER:** Engages a powerful cooling or heating mode for rapid temperature change.
- **I FEEL:** Activates the 'I Feel' function, which senses the temperature at the remote's location for more precise control.
- **SLEEP:** Initiates the sleep mode, which adjusts temperature and fan speed for comfortable sleep and energy saving.
- **SWING (Horizontal/Vertical icons):** Controls the direction of the airflow.
- **CLOCK:** Sets the current time on the remote's display.
- **TIMER ON:** Sets a timer for the air conditioner to turn ON automatically.

- **TIMER OFF:** Sets a timer for the air conditioner to turn OFF automatically.
- **8 HEAT:** Activates a specific 8-degree Celsius heating mode, often used for frost protection.
- **QUIET:** Reduces fan noise for quieter operation.
- **DIMMER:** Adjusts the brightness of the air conditioner unit's display.
- **ECONOMY:** Activates an energy-saving mode.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or unresponsive. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner unit.
 - Confirm you are within the maximum operating range (approximately 10 meters).
- **Display is dim or blank:**
 - This usually indicates low battery power. Replace the batteries.
- **Air conditioner not responding to specific commands:**
 - Ensure the remote is pointed directly at the air conditioner's receiver.
 - Verify that the air conditioner unit is powered on.

If problems persist after attempting these solutions, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	AULCMEET
Model Name	BJKJ-1810196-JKJBEU
Compatibility	Hisense Air Conditioner DG11L1-04, DG11L104

Controller Type	Button Control
Number of Buttons	20
Maximum Range	10 meters
Batteries Required	2 x AAA Alkaline Batteries
Color	White (as pictured)

7. WARRANTY INFORMATION

Specific warranty details for this product may vary. Please refer to the product packaging or contact your retailer for information regarding warranty coverage and terms. Generally, replacement remote controls are covered against manufacturing defects for a limited period from the date of purchase.

8. CUSTOMER SUPPORT

For any questions, technical assistance, or issues not covered in this manual, please contact the seller or manufacturer directly. Contact information can typically be found on your purchase receipt or the product packaging. We are committed to ensuring your satisfaction.