

[manuals.plus](#) /› [Dyson](#) /› [Dyson Supersonic Hair Dryer Instruction Manual](#)

Dyson HD-07

Dyson Supersonic™ Hair Dryer Instruction Manual

Model: HD-07 | Brand: Dyson

PRODUCT OVERVIEW

The Dyson Supersonic hair dryer is engineered for fast drying and precision styling while protecting hair from extreme heat damage. It includes five attachments to dry and style straight, wavy, curly, and coily hair.

Key Benefits

- **Extreme Heat Protection:** Intelligent heat control measures air temperature over 40 times per second to prevent heat damage and help protect hair's shine.
- **Fast Drying:** Air Multiplier™ technology produces a high-pressure, high-velocity jet of controlled air for fast drying and precise styling.
- **Versatile Styling:** Includes five attachments engineered for different hair types to style your hair your way.

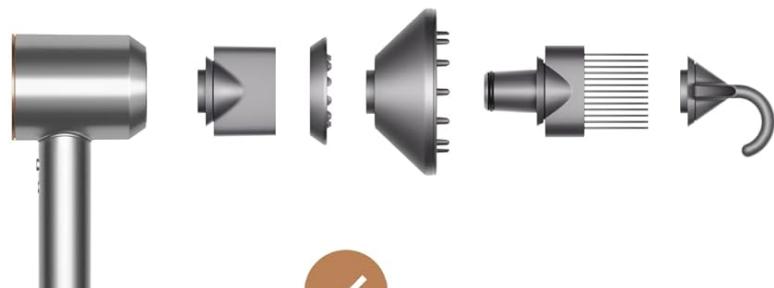


Figure 1: Dyson Supersonic Hair Dryer with Styling Concentrator, Gentle Air Attachment, Flyaway Attachment, Wide-tooth Comb, and Diffuser.

SETUP AND FIRST USE

Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the hair dryer and its attachments for any signs of damage. Ensure all five attachments are present.



Fast drying

Air Multiplier™ technology produces a high-pressure, high-velocity jet of controlled air, for fast drying and precise styling.



No heat damage

Intelligent heat control measures and regulates airflow temperature more than 40 times a second, to prevent heat damage.



Versatility

Five attachments engineered for different hair types.
Style your hair your way.

Figure 2: The Dyson Supersonic Hair Dryer and its five magnetic attachments as packaged.

Connecting Attachments

All attachments connect magnetically to the front of the hair dryer. Simply align the attachment with the nozzle and it will snap into place. They can be rotated 360° for precise styling.



Defined curls and waves

Diffuser



Figure 3: The magnetic attachments easily connect and rotate on the hair dryer for versatile styling.

UNDERSTANDING YOUR ATTACHMENTS

Styling Concentrator

The wider, thinner design of the Styling Concentrator creates a high-velocity blade of air, perfect for precision styling. Use it to style one section of hair at a time without disturbing the rest.

In the box



Dyson Supersonic™ hair dryer




Styling concentrator



Gentle air attachment



Flyaway attachment

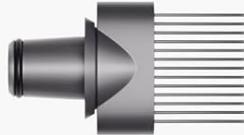

Wide-tooth comb



Diffuser

Figure 4: The Styling Concentrator provides focused airflow for precise styling.

Diffuser

Engineered to disperse air evenly around your curls, the Diffuser simulates natural drying, helping to reduce frizz and define curls and waves.



Smooth finish

Flyaway attachment



Figure 5: The Diffuser helps to define curls and reduce frizz.

Gentle Air Attachment

Designed for fine hair and sensitive scalps, the Gentle Air Attachment diffuses the air, creating a cooler, gentler airflow while still drying hair fast.



Volumized blow out

Gentle air attachment

Styling concentrator

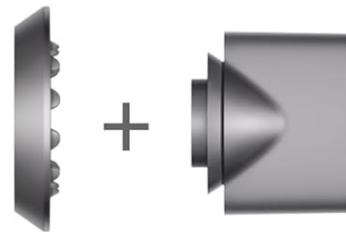


Figure 6: The Gentle Air Attachment provides a cooler, diffused airflow.

Wide-tooth Comb

Engineered for curly and coily hair, the Wide-tooth Comb attachment helps to shape, lengthen, and add volume as it dries.

dyson supersonic

Fast drying. No heat damage.
Engineered for different hair types.



Figure 7: The Wide-tooth Comb helps to shape and lengthen curly and coily hair.

Flyaway Attachment

The ideal finishing tool for sleek, straight styles. It hides flyaways under longer hair to give you a smooth, shiny finish with no extreme heat.



1. Section clean, wet hair



2. Rough dry with Gentle air attachment



3. Dry to desired shape with styling concentrator



4. Finish with flyaway attachment

Figure 8: The Flyaway Attachment helps achieve a smooth, shiny finish.

OPERATING INSTRUCTIONS

Power On/Off

To turn the hair dryer on, slide the power switch up. To turn it off, slide the switch down.

Heat Settings

The Dyson Supersonic™ Hair Dryer offers four precise heat settings:

- **212°F (100°C):** Fast drying and styling
- **176°F (80°C):** Regular drying
- **140°F (60°C):** Cooler drying and diffusing
- **82°F (28°C):** Constant cold to set hair after styling

Adjust the heat by pressing the temperature control button. The LED indicators on the head of the dryer will illuminate to

show the selected heat level (red dots).



Figure 9: The intelligent heat control system monitors air temperature to prevent extreme heat damage.

Airflow Settings

Choose from three precise airflow settings:

- **High:** For fast drying and styling
- **Medium:** For regular drying
- **Low:** For diffusing

Adjust the airflow by pressing the airflow control button. The LED indicators on the head of the dryer will illuminate to show the selected airflow level (white dots).

Cold Shot

Press and hold the cold shot button for a burst of cold air to set your style.

SUGGESTED USE AND STYLING TIPS

For optimal results, start with clean, wet hair. Use the Gentle Air Attachment to rough dry roots before styling. Section hair and use the Styling Concentrator to dry one section of hair at a time using a round brush. Once hair is dry, use the Flyaway Attachment to create a smooth, shiny finish.



Volumized blow out

Gentle air attachment

Styling concentrator

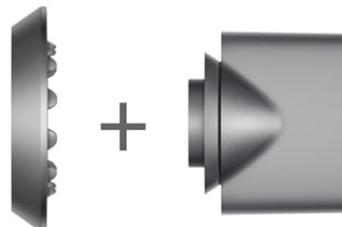


Figure 10: Recommended steps for achieving a smooth, shiny finish.

MAINTENANCE

Cleaning the Filter

To maintain optimal performance, regularly clean the filter at the base of the handle. Twist the filter cage counter-clockwise to remove it. Wipe away any dust or debris with a soft, dry cloth. Ensure the filter is completely dry before reattaching by twisting clockwise until it clicks into place.

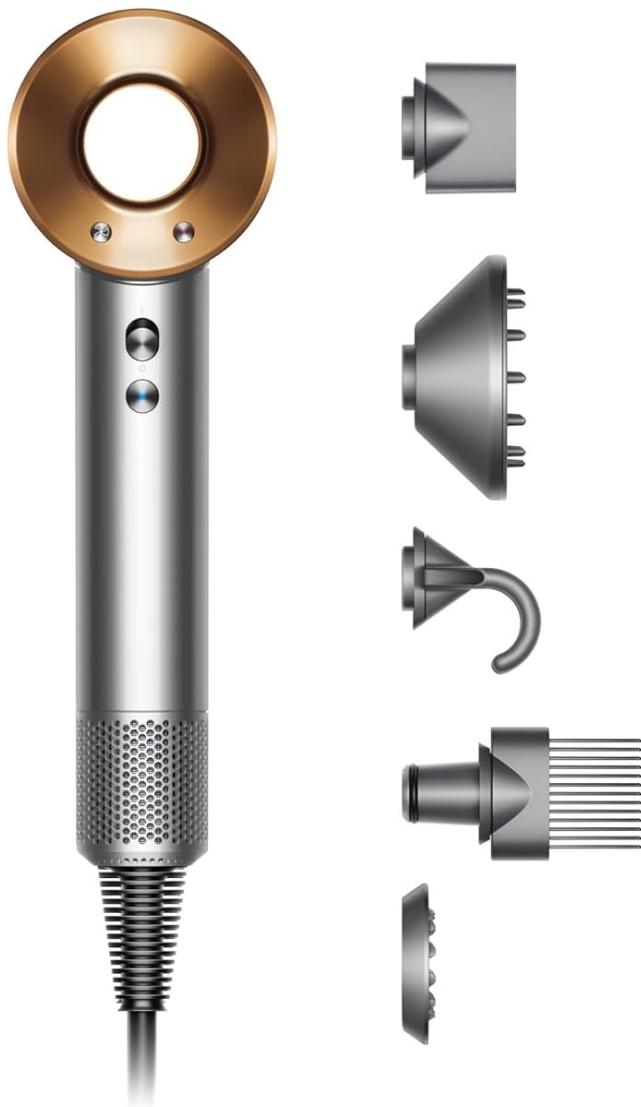


Figure 11: The filter is located at the base of the handle and should be cleaned regularly.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Hair dryer stops unexpectedly	Overheating or blocked filter	Clean the filter. Allow the device to cool down before restarting.
Reduced airflow	Blocked filter	Clean the filter thoroughly.
Attachments not staying on	Debris on magnetic connection or worn magnets	Clean the magnetic connection points on both the dryer and attachments. If issue persists, contact support.

SPECIFICATIONS

- **Model Number:** HD-07
- **Dimensions:** 3.1 x 3.8 x 9.6 inches
- **Weight:** 1.8 Pounds
- **Color:** Nickel / Copper
- **Material:** Aluminum, Ceramic, Polycarbonate
- **Wattage:** 1600 watts
- **UPC:** 885609025421

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Dyson website or contact Dyson customer service directly. Keep your proof of purchase for warranty claims.

ADDITIONAL RESOURCES

For a comprehensive user guide, please download the PDF manual:

[Download User Guide \(PDF\)](#)