

[Manuals.plus](#) /

› [FLOITTUY](#) /

› FLOITTUY 4-inch Super Silent Analog Alarm Clock (Model KD520) Instruction Manual

FLOITTUY KD520

FLOITTUY 4-inch Super Silent Analog Alarm Clock (Model KD520) Instruction Manual

Your guide to setting up and using your new FLOITTUY alarm clock.

PRODUCT OVERVIEW

The FLOITTUY 4-inch Super Silent Analog Alarm Clock is a battery-operated timepiece designed for desk, bedroom, and home decoration. It features a silent sweep movement, a beep alarm, and a convenient night light function. Its compact size and retro-modern design make it a versatile addition to any room.



Image: Front view of the FLOITTUY 4-inch Super Silent Analog Alarm Clock in Navy Blue, showcasing its minimalist design and clear dial.

PACKAGE CONTENTS

- 1 x FLOITTUY 4-inch Beep Alarm Clock
- 1 x Gift Bag (for multipurpose use)

KEY FEATURES

- **Super Silent Movement:** Ensures a quiet environment for comfortable sleep.
- **Beep Alarm:** A clear and effective alarm sound.
- **Night Light Function:** Press a button on the back for a soft light to view the time in the dark.
- **Battery Operated:** Requires 1 AA battery (not included) for cordless operation.
- **Durable Construction:** Features a metal shell for enhanced quality and longevity.
- **Compact Design:** Measures approximately 4 inches wide by 4.3 inches high.

SETUP

1. Battery Installation

Locate the battery compartment on the back of the clock. Open the cover and insert one AA battery, ensuring correct polarity (+/-). Close the battery compartment cover securely.



Image: Rear view of the alarm clock with labeled controls: (1) Light Button, (2) Time Knob, (3) Alarm Knob, (4) Alarm Switch, (5) Battery Compartment.

2. Setting the Time

Turn the **Time Knob** (labeled 2 in the image above) located on the back of the clock in either direction until the hour and minute hands display the correct time.

3. Setting the Alarm

Turn the **Alarm Knob** (labeled 3 in the image above) to set your desired alarm time. The alarm hand will move independently of the time hands.

OPERATING INSTRUCTIONS

1. Activating/Deactivating the Alarm

Use the **Alarm Switch** (labeled 4 in the image above) to turn the alarm ON or OFF. Slide the switch to the "ON" position to activate the alarm, and to "OFF" to deactivate it.

2. Using the Night Light

Press and hold the **Light Button** (labeled 1 in the image above) on the back of the clock to illuminate the dial. Release the button to turn off the light. This feature is designed for quick time checks in low-light conditions without disturbing sleep.

3. Silent Operation

The clock features a silent sweep second hand, ensuring no ticking sound for a peaceful environment.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AA battery when the clock starts to lose time or the alarm weakens. Always dispose of used batteries responsibly.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Dead or incorrectly installed battery.	Check battery polarity or replace with a new AA battery.
Alarm not sounding	Alarm switch is OFF or alarm time is incorrectly set.	Ensure the Alarm Switch is in the "ON" position. Verify the alarm hand is set to the desired time.
Night light not working	Dead battery or faulty light button.	Replace battery. If the issue persists, contact customer support.

SPECIFICATIONS

- **Brand:** FLOITTUY
- **Model:** KD520
- **Color:** Navy Blue (as per current product)
- **Display Type:** Analog
- **Style:** Retro
- **Special Features:** Alarm, Night Light, Silent Clock
- **Product Dimensions:** 4"W x 4.3"H (approximately 10.16 cm W x 10.92 cm H)
- **Power Source:** Battery Powered (1 x AA battery, not included)
- **Room Type:** Bedroom, Desk, Home Decoration
- **Shape:** Round
- **Indoor/Outdoor Usage:** Indoor

- **Material:** Metal
- **Item Weight:** 3.53 ounces (approximately 100 grams)

WARRANTY AND SUPPORT

For any issues or inquiries regarding your FLOITTUY alarm clock, please contact the seller directly through the Amazon platform. The manufacturer, Tophour, is committed to providing customer satisfaction. While specific warranty details are not provided, please refer to Amazon’s standard return and refund policies for eligible products. For direct assistance, you may reach out to the seller, Tophour, via their Amazon seller page.

PRODUCT VIDEOS

Features Overview by Julie Nixon

Your browser does not support the video tag.

Video: A detailed overview of the FLOITTUY alarm clock’s features, including its silent operation, alarm function, and night light, demonstrated by Julie Nixon.

The All-Purpose Clock by 6lk Widow's Web Of Wonders

Your browser does not support the video tag.

Video: A review highlighting the versatility and aesthetic appeal of the FLOITTUY alarm clock for various uses, presented by 6lk Widow's Web Of Wonders.

Review of FLOITTUY Analog Alarm Clock by Rosalynn Miller

Your browser does not support the video tag.

Video: Rosalynn Miller provides a comprehensive review of the FLOITTUY Analog Alarm Clock, covering its design, functionality, and silent operation.

© 2023 FLOITTUY. All rights reserved.

For further assistance, please refer to the product listing on Amazon or contact customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question