

[Manuals.plus](#) /

› [TOZO](#) /

› TOZO NC7 Hybrid Active Noise Cancelling Wireless Earbuds User Manual

TOZO NC7

TOZO NC7 Hybrid Active Noise Cancelling Wireless Earbuds User Manual

Model: NC7

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your TOZO NC7 Hybrid Active Noise Cancelling Wireless Earbuds. Please read this manual thoroughly before use to ensure proper functionality and to maximize your listening experience.



Image: The TOZO NC7 earbuds resting in their open charging case, showcasing their compact design.

WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- TOZO NC7 Hybrid Active Noise Cancelling Wireless Earbuds
- Wireless Charging Case
- Eartips (multiple sizes for optimal fit)
- USB-C (A to C) charging cable (30cm)
- User Manual (this document)



Image: The TOZO NC7 earbuds and their charging case, illustrating the complete product package.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging case and a power source. The indicator lights on the case will show charging status. The case also supports wireless charging.



Image: The TOZO NC7 charging case placed on a wireless charging pad, demonstrating its wireless charging capability.

2. Pairing with a Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "TOZO-NC7" in the list of available Bluetooth devices and select it to connect.
4. Once connected, a confirmation message will appear on your device.



Image: A smartphone screen displaying a successful Bluetooth connection to the TOZO-NC7 earbuds.

3. Optimal Fit

Select the eartips that provide the best seal and comfort for your ears. A proper fit is crucial for sound quality and effective noise cancellation.

Ergonomic Design

The shape of NC7 perfectly fits the curve of the inner contour of the ear, which can match different ear shapes, providing a more comfortable wearing experience.



Image: A close-up of a TOZO NC7 earbud properly seated in a human ear, demonstrating ergonomic design.

OPERATING INSTRUCTIONS

Touch Controls

The TOZO NC7 earbuds feature high-precision touch sensors for various functions:



Image: A detailed diagram illustrating the touch control functions for both the left and right TOZO NC7 earbuds.

TOZO NC7 Touch Control Functions

Action	Left Earbud (L)	Right Earbud (R)
Play/Pause	Single Tap (X1)	Single Tap (X1)
Previous Song	Double Tap (X2)	N/A
Next Song	N/A	Double Tap (X2)
Answer Call	Single Tap (X1)	Single Tap (X1)
Hang Up Call	Single Tap (X1)	Single Tap (X1)
Reject Call	Hold for 2 seconds	Hold for 2 seconds
Volume Down	Hold for 2 seconds	N/A
Volume Up	N/A	Hold for 2 seconds
ANC/Transparency/Off Mode	Triple Tap (X3)	N/A
Voice Assistant	N/A	Triple Tap (X3)

Active Noise Cancellation (ANC) & Transparency Mode

The TOZO NC7 features Hybrid 3-layer Active Noise Cancellation to reduce external sounds. Transparency Mode allows you to hear your surroundings without removing the earbuds.

- **ANC Mode:** Reduces ambient noise, ideal for travel or noisy environments.
- **Transparency Mode:** Amplifies external sounds, useful for conversations or being aware of your surroundings.
- **Normal Mode:** Standard audio playback without noise cancellation or transparency.

Switch between these modes by triple-tapping the left earbud.

Active Noise Cancellation

It cut out the lower frequency noises like aviation environment, trains, busy office and so on, makes you focus on what you want to hear, enjoy your music, movies and videos.



Image: A person wearing TOZO NC7 earbuds in a busy environment, illustrating the effectiveness of Active Noise Cancellation.

In-Ear Detection

The earbuds utilize optical sensor technology to detect their wear status. Playback will automatically pause when an earbud is removed from your ear and resume when placed back in.

Auto Optical In-ear Detection

Adopt high-precision contact sensor, optimized for daily use and sports occasion, achieving real-time detection of wearing status



AUTO PAUSE
Take off the headset



AUTO PLAY
Put on headphones

High-precision contact sensor

High Stereo Sound quality

Featured with advanced ANC technology & powerful bass sound performance, each earbud enables you to enjoy crystal clear High stereo sound.

Image: An exploded view diagram highlighting the high-precision optical sensor responsible for automatic in-ear detection.

TOZO APP Customization

Download the TOZO APP for enhanced control and customization options:

- Switch between Active Noise Cancellation modes and EQ modes.
- Adjust noise reduction intensity and customize EQ curve settings.
- Customize Gesture operations for touch controls.
- Perform Over-The-Air (OTA) software updates.
- Access Quick Guide and Product FAQ.

Support TOZO App



6 Types of Active Noise Cancellation Modes



32 Types of EQ Sound Modes



Customized Touch Controls



Firmware Updates



Image: A smartphone displaying the TOZO App interface, showing various customization options for the NC7 earbuds.

MAINTENANCE

Cleaning

Regularly clean the earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals. Ensure charging contacts are free of debris.

Water Resistance

The TOZO NC7 earbuds are water-resistant (IPX6 rated), meaning they can withstand splashes and sweat. They are not designed for submersion in water. Ensure earbuds are dry before placing them back in the charging case.



Image: TOZO NC7 earbuds being splashed with water, illustrating their water-resistant design.

TROUBLESHOOTING

- **No Sound:** Ensure earbuds are charged, properly paired, and volume is adjusted on both the earbuds and your device. Check if the earbuds are correctly seated in your ears for in-ear detection.
- **Pairing Issues:** Make sure Bluetooth is enabled on your device and the earbuds are in pairing mode. Try forgetting the device in your Bluetooth settings and re-pairing. Ensure no other devices are connected to the earbuds.
- **Noise Cancellation Not Working:** Ensure ANC mode is activated via touch control or the TOZO App. Verify that the eartips provide a good seal in your ear canal.
- **Earbuds Not Charging:** Check that the charging cable is securely connected and the power source is active. Ensure the charging contacts on both the earbuds and case are clean and free of debris. For wireless charging, ensure the case is correctly positioned on the charging pad.
- **Touch Controls Unresponsive:** Ensure your fingers are clean and dry. Try resetting the earbuds by placing them in the case and closing it for a few seconds, then reopening.

SPECIFICATIONS

Feature	Specification
Model Name	NC7
Connectivity Technology	Wireless (Bluetooth 5.3)
Noise Control	Hybrid Active Noise Cancellation
Battery Life (Earbuds)	Up to 18 hours (single charge)
Total Playtime (with Case)	Up to 72 hours
Charging Time	Approximately 2 hours
Charging Case Battery Capacity	500 mAh
Water Resistance Level	IPX6

Feature	Specification
Frequency Response	2 Hz - 20,000 Hz
Sensitivity	103 dB
Impedance	16 Ohm
Bluetooth Range	Up to 20 meters
Control Type	Touch Control / APP
Item Weight	42.5 Grams (total)
Product Dimensions	0.81 x 0.96 x 1.04 inches (earbud)

WARRANTY AND SUPPORT

TOZO products are designed for reliability and performance. In the event of any issues, please refer to the troubleshooting section or contact TOZO customer support.

For warranty information and support, please visit the official TOZO website or contact their customer service directly. Details are typically provided on the product packaging or the TOZO brand store.

TOZO Brand Store: [Visit TOZO Store on Amazon](#)

© 2023 TOZO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question