

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLITZHOME](#) /
- › [BLITZHOME Mini Dishwasher User Manual](#)

## BLITZHOME BH-CDW1

# BLITZHOME Mini Dishwasher User Manual

Model: BH-CDW1  
Brand: BLITZHOME

## INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your BLITZHOME Mini Dishwasher. Please read this manual thoroughly before use and keep it for future reference.



The BLITZHOME Mini Dishwasher is a compact and smart appliance designed for small kitchens, apartments, dorms, offices, camping, RVs, and boats. It offers multiple washing programs and can be controlled via touch or a smartphone app.

## SETUP AND INSTALLATION

### Unpacking and Initial Inspection

Before first use, inspect the dishwasher and all accessories for any damage.

It is normal for a small amount of moisture to remain inside the dishwasher, as units are water-tested before packaging.

### Water Inlet Modes

The BLITZHOME Mini Dishwasher offers two convenient water inlet modes:

1. **5L Water Tank:** Manually fill the integrated 5-liter water tank. This mode is ideal for locations without a direct water connection.

# Obere und untere Sprüharme

Spült das Geschirr gründlich und ohne Verstopfungen



12

Wasserpfosten  
360° Reinigungsabdeckung

>35

Minutes  
Hochdruckwäsche

The dishwasher features a 5-liter integrated water tank for convenient manual filling, making it suitable for locations without a direct water connection.

2. **Direct Water Connection:** Connect the dishwasher to a water tap using the provided water inlet hose. Ensure the connection is tight to prevent leaks, and remember to tighten the adjustment clamp on the drain pipe connection.

## Duale Modi liefern Wasser

In keiner Szene gibt es einen Wasserhahn zum Geschirrspülen



Duale Modi  
liefern Wasser



5L Fassungsvermögen



For continuous water supply, the dishwasher can be connected directly to a water tap using the included water inlet hose.

### Setup Video Guide

This video demonstrates the setup process, including filling the water tank and connecting the water hose, along with an overview of the dishwasher's features.

## OPERATING INSTRUCTIONS

### Control Panel and Programs

The dishwasher features a touch control panel and can also be controlled via the smartphone app.

It offers 6 washing programs:

- **Standard:** Suitable for common dishes.
- **Quick:** Basic cleaning in just 29 minutes.
- **Strong:** For heavily soiled dishes, heats water up to 75°C.
- **ECO:** Energy and water-saving mode.
- **Fruit:** Specifically designed for cleaning fruits and vegetables.

- **Drying:** Provides an additional 60 minutes of drying time and 73 hours of fresh air circulation for storage.

## Leicht ablesbares LED-Display

mit 5 Wascheinstellungen



Standard



Schnell



Stark



ECO



Obst



The easy-to-read LED display and touch controls allow for selection of various wash programs tailored to different cleaning needs.

## App Control

The dishwasher can be controlled remotely using the "BlitzHome" smartphone app. Follow these steps to connect:

1. Install the "BlitzHome" app.
2. To add the device: When the dishwasher is off, press the "Dry" icon for three seconds until the Wi-Fi symbol blinks.
3. Open the app, log in, click "Add Device," then select the dishwasher under kitchen appliances.
4. Enter your Wi-Fi network name and password.
5. Follow the in-app instructions to complete the connection.

The app allows you to schedule wash times and monitor the dishwasher's status in real-time.



Küchenarbeitsplatte



Wohnmobil/Boote



Camping

 <p>4 x</p> <p>Speiseteller (10,5 Zoll) 26,7cm</p>	 <p>4 x</p> <p>Kleine Teller</p>	 <p>4 x</p> <p>Schüsseln</p>	 <p>4 x</p> <p>Tassen</p>
 <p>4 x</p> <p>Gläser</p>	 <p>4 x</p> <p>Löffel</p>	 <p>4 x</p> <p>Gabeln</p>	 <p>4 x</p> <p>Messer</p>

The intelligent app control allows users to manage wash cycles, set timers, and check the dishwasher's status conveniently from their smartphone.

Download the BlitzHome app here: [BlitzHome App](#)

## Washing Features

- **360° Spiral Cleaning:** Upper and lower spray arms provide 360° rinsing, high-pressure cleaning, and a 3D full jet for thorough stain removal.
- **High-Temperature Wash:** Water can be heated up to 75°C in Strong mode for effective cleaning and sterilization.
- **Drying Function:** An independent fan system removes steam and prevents bacterial growth during storage.

# Intelligente APP-Steuerung



Überprüfen Sie den Spülmaschinenstatus in Echtzeit und stellen Sie den Timer für das Geschirrspülen ein



Großes transparentes visuelles Design: Sehen Sie den Waschvorgang deutlich

The advanced 360-degree spiral cleaning system ensures comprehensive coverage and effective removal of food residues from all dish surfaces.

# 75°C Wassertemperatur Ptc-Heißlufttrocknung und -Lagerung

99,99 % effektiv Ölflecken entfernen & sterilisieren  
72 Stunden lang belüftete Lagerung, um Gerüche zu verhindern und Ihr Geschirr sauber zu halten



The integrated drying function utilizes hot air to ensure dishes are thoroughly dried and ready for storage, preventing moisture buildup.


## Loading Dishes

The dishwasher features a dish basket for up to 4 place settings and a cutlery basket for knives, forks, and spoons.

Before placing dishes in the dishwasher, remove any large food residues to prevent clogging.

# Befreien Sie sich von Weltraumproblemen

Schnappen Sie sich Ihren Tischgeschirrspüler und nehmen Sie ihn mit

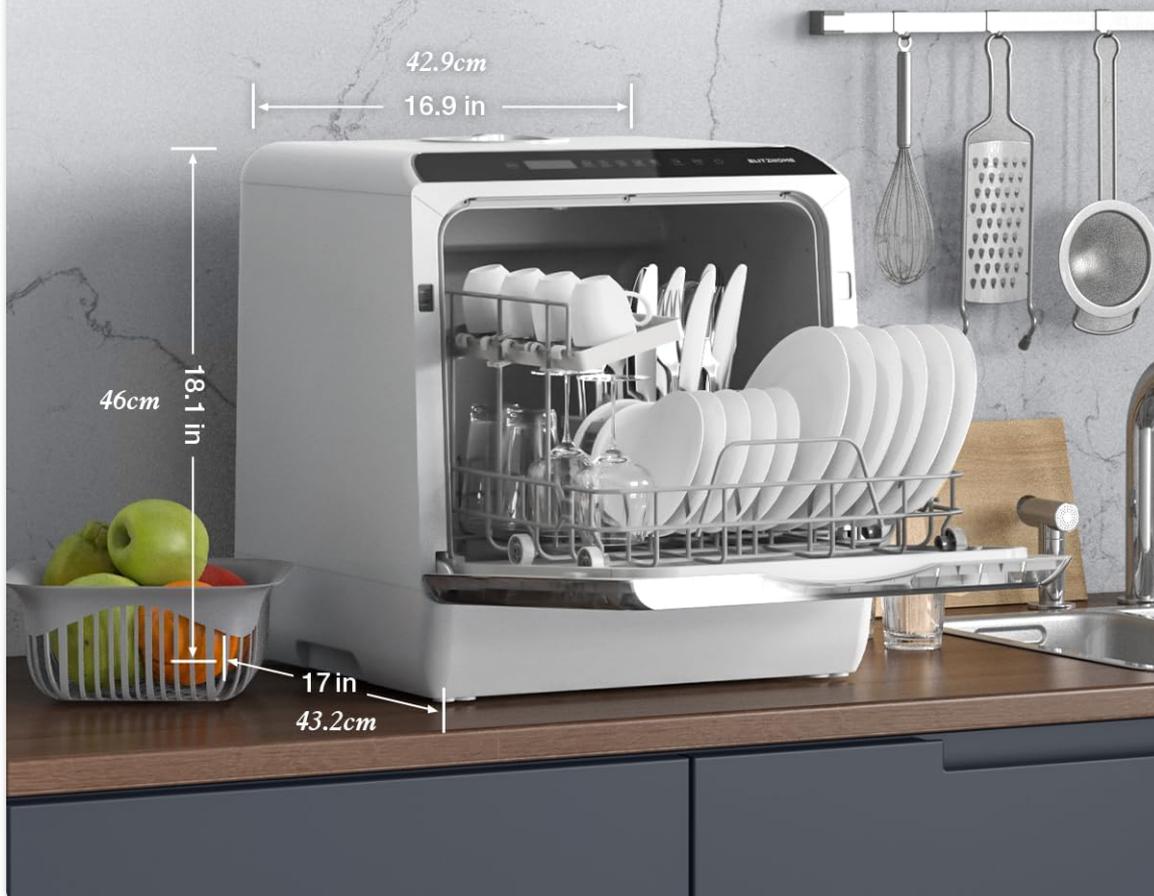

The compact design accommodates up to 4 place settings, including dinner plates, small plates, bowls, cups, glasses, and cutlery.

## MAINTENANCE

### Cleaning the Dishwasher

Regularly clean the interior of the dishwasher, especially the spray arms, to prevent lime scale buildup.

If spray arms become clogged or do not rotate properly due to lime scale, thorough cleaning is recommended.

### Detergent Usage

This product does not include detergent and must be purchased separately. The dishwasher is compatible with liquid, powder, tablet, and gel detergents.



The dishwasher is designed to work with various types of dishwasher detergents, including liquid, powder, tablets, and gel.

## TROUBLESHOOTING

### Common Issues and Solutions

- **Leakage:** Before use, check if the dishwasher and accessories are damaged. When connecting the water pipe, ensure the connection is tight and tighten the adjustment clamp on the drain pipe connection. You can test for leaks by pouring water into the water tank and running a short cycle.
- **Food Residue Clogging:** Remove large food residues from dishes before placing them in the dishwasher to prevent clogging and malfunction.
- **LED Light Behavior:** The LED light stays on for 5 minutes if the door is open and not closed. After opening and closing the door, it stays on for 2 minutes. To turn on the integrated LED light while the dishwasher is running, press the pause button, slightly open the door, then close it. The light will stay on for 2 minutes.

- **Spray Arm Malfunction:** If the upper part of the spray arm does not rotate completely during a program, even if it appears clean, it might be due to lime scale buildup. Regular descaling is recommended to maintain optimal cleaning performance.

## SPECIFICATIONS

Feature	Detail
Form Factor	Tabletop
Model Name	BH-CDW1
Voltage	230 Volts
Cycle Options	Standard, Quick, Strong, ECO, Fruit, Drying
Display Type	LED
Water Tank Capacity	5 Liters
Energy Consumption	950 Watts
Interior Material	Stainless Steel
Product Dimensions (DxWxH)	43.2 x 42.9 x 46 cm
Dish Capacity	4 Place Settings
Noise Level	60 dB
Included Components	1x BLITZHOME Mini Dishwasher with EU plug, 1x Water inlet hose, 1x Water cup, 1x Drain hose with adjustable clamp, 1x Dish basket set, 1x Fruit and vegetable basket, 1x User manual

# Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2017 DER KOMMISSION zur Energieverbrauchskennzeichnung von Haushaltsgeschirrspülern

**Name oder Handelsmarke des Lieferanten:** Blitzhome

**Anschrift des Lieferanten:** SCHEUFER Technologies GmbH, Hertleinstrasse 37, 91052 Erlangen, DE

**Modellkennung:** BH-CDW1

## Allgemeine Produktparameter:

Parameter	Wert	Parameter	Wert	
Nennkapazität <sup>(a)</sup> (ps)	4	Abmessungen in cm	Höhe	46
			Breite	43
			Tiefe	43
EEI <sup>(a)</sup>	61,0	Energieeffizienzklasse <sup>(a)</sup>	F	
Reinigungsleistungsinde- dex <sup>(a)</sup>	1,210	Trocknungsleistungs- index <sup>(a)</sup>	1,100	
Energieverbrauch in kWh [pro Betriebs- zyklus] im eco-Pro- gramm bei Kaltwas- seranschluss. Der tat- sächliche Energiever- brauch hängt von der jeweiligen Nut- zung des Geräts ab.	0,384	Wasserverbrauch in Li- tern [pro Betriebs- zyklus] im eco-Pro- gramm. Der tatsäch- liche Wasserverbrauch hängt von der jewei- ligen Nutzung des Ge- räts und vom Härte- grad des Wassers ab.	4,2	
Programmdauer <sup>(a)</sup> (h:min)	2:02	Art	Freistehend	
Luftschallemissio- nen <sup>(a)</sup> (dB (A) re 1 pW)	60	Luftschallemissions- klasse <sup>(a)</sup>	D	
Aus-Zustand (W) (falls zutreffend)	0,49	Bereitschaftszustand (W) (falls zutreffend)	0,49	
Zeitvorwahl (W) (falls zutreffend)	0,49	Vernetzter Bereit- schaftsbetrieb (W) (falls zutreffend)	0,49	

**Mindestlaufzeit der vom Lieferanten angebotenen Garantie:** 12 Monate

## Weitere Angaben:

Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2019/2022 der Kommission zu finden sind: /

<sup>(a)</sup> für das eco-Programm.

The manufacturer provides a 12-month warranty for this product.

For any issues during use or for further assistance, please contact BLITZHOME customer service.

Visit the official BLITZHOME store for more information: [BLITZHOME Store](#)