

AMERTEER RF073

AMERTEER RF073 Wireless Presenter with Laser Pointer User Manual

Model: RF073

1. INTRODUCTION

Thank you for purchasing the AMERTEER RF073 Wireless Presenter with Laser Pointer. This device is designed to enhance your presentations by providing seamless control over slides and a clear laser pointer for highlighting key information. It features a streamlined design, multi-functional keys, and broad compatibility with various operating systems and presentation software.

2. PRODUCT FEATURES

- **Ergonomic Design:** Streamlined body with a comfortable grip and durable, anti-drop materials for a premium feel. Large, rounded buttons ensure comfortable operation.
- **Multi-functional Control:** Features include laser pointer activation, page up/down, full screen mode, black screen mode, and hyperlink operation.
- **Wide Compatibility:** Supports Windows, Mac OS, and Linux operating systems. Compatible with popular presentation software such as PowerPoint, Keynote, and Google Slides.
- **Long-Range Wireless:** Utilizes 2.4 GHz wireless remote technology, offering a control range of approximately 15 meters (49 feet).
- **Plug and Play:** No additional software or driver installation required. Simply plug the 2.4 GHz wireless receiver into your computer's USB port.
- **USB Rechargeable:** Equipped with a built-in 3.7V/360mAh lithium battery. Eliminates the need for disposable batteries. A 1.5-hour charge provides approximately 12 hours of continuous use.
- **Lightweight and Portable:** Weighing approximately 30g, it is ultra-light yet feels substantial in hand.



Image: Overview of the AMERTEER RF073 Wireless Presenter, showcasing its sleek design and key functionalities like rechargeable battery, red laser, basic operations, high-quality materials, and USB receiver.

3. PACKAGE CONTENTS

Please check the package contents upon receipt to ensure all items are present:

- AMERTEER RF073 Wireless Presenter
- USB Receiver
- USB Charging Cable (Micro-B)
- User Manual (this document)



Image: The AMERTEER RF073 Wireless Presenter, USB charging cable, and user manual shown alongside its packaging box.

4. SETUP GUIDE

4.1. Charging the Presenter

1. Locate the Micro-B USB charging port on the side of the presenter.
2. Connect the provided USB charging cable to the presenter and a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate during charging and turn off or change color when fully charged. A full charge takes approximately 1.5 hours.



Image: The AMERTEER RF073 Wireless Presenter connected to a laptop via a USB cable for charging. The charging port is visible on the side of the device.

4.2. Connecting the USB Receiver

1. Retrieve the USB receiver from its storage slot at the bottom of the presenter.
2. Plug the USB receiver into an available USB port on your computer.
3. Your computer should automatically detect and install the necessary drivers. No manual installation is required.



Image: The USB receiver for the AMERTEER RF073 Wireless Presenter is shown being removed from its storage slot and then plugged into a laptop's USB port. The presenter itself is also visible.

4.3. Powering On/Off

Locate the power switch on the side of the presenter. Slide it to the 'ON' position to power on the device. Slide it to the 'OFF' position when not in use to conserve battery.

5. OPERATING INSTRUCTIONS

Once connected, the presenter is ready for use. Ensure your presentation software (e.g., PowerPoint, Keynote, Google Slides) is open and in presentation mode.

5.1. Button Functions

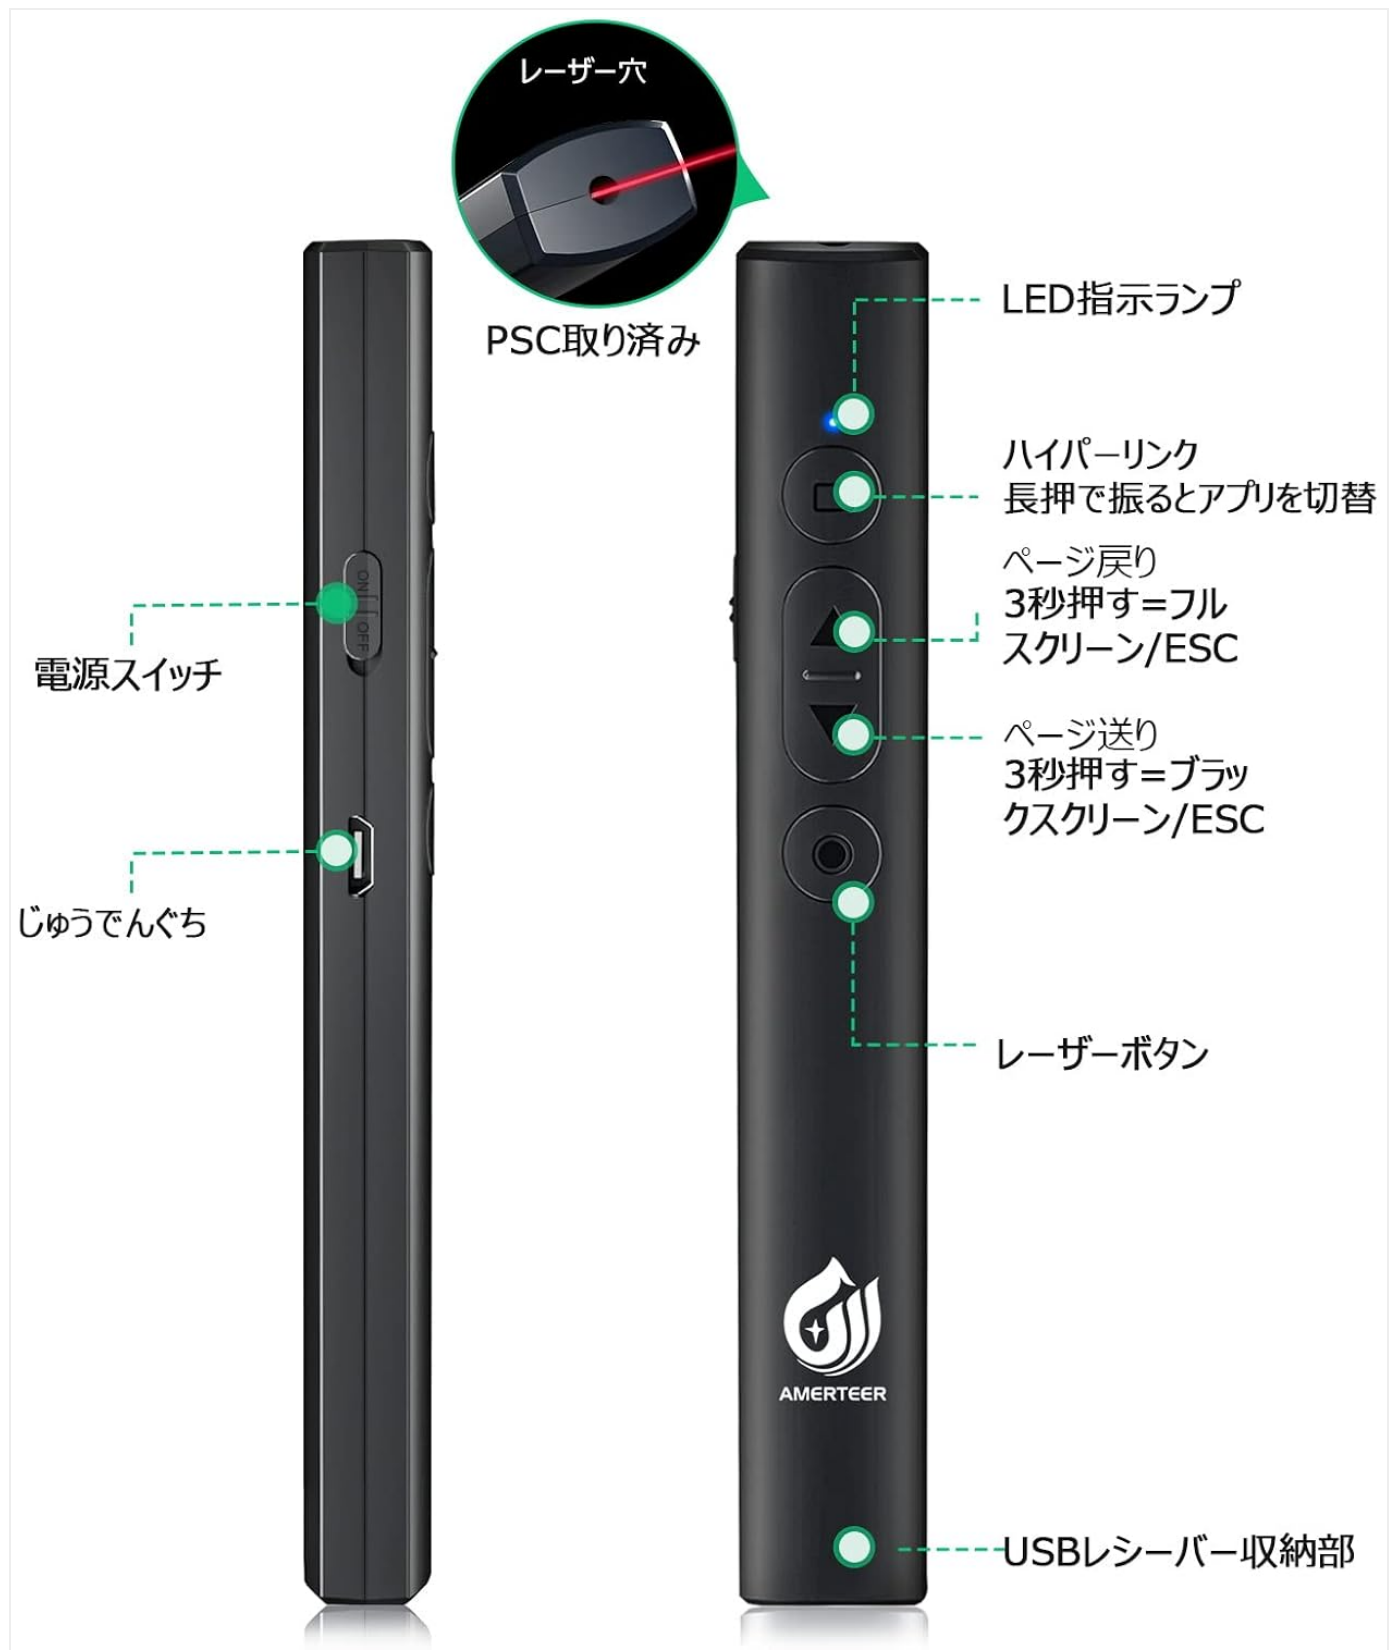


Image: A detailed view of the AMERTEER RF073 Wireless Presenter, labeling each button and its corresponding function, including LED indicator, hyperlink, page up/down, full screen/black screen, and laser button.

- **Laser Button:** Press and hold to activate the red laser pointer. Release to turn off. (Located at the bottom front).

- **Page Up Button (▲):** Press to move to the previous slide. Long press for 3 seconds to enter/exit full screen mode or ESC.
- **Page Down Button (▼):** Press to move to the next slide. Long press for 3 seconds to activate/deactivate black screen mode or ESC.
- **Hyperlink Button:** Press to activate hyperlinks within your presentation. Long press and shake to switch between applications.
- **LED Indicator:** Shows connection status and battery level.

5.2. Laser Safety

The AMERTEER RF073 uses a PSC Class 2 red laser. Observe the following safety precautions:

- Do not stare directly into the laser beam.
- Do not point the laser beam at people or animals.
- Avoid pointing the laser beam at highly reflective surfaces.
- Keep out of reach of children.



Image: A close-up view of the AMERTEER RF073 Wireless Presenter's tip, showing the red laser beam emitting from the device.

5.3. Application Switching

When operating the presenter, you can switch between open applications by long-pressing the Hyperlink button and shaking the device. This feature allows for seamless transitions between different programs during a presentation.



Image: A person using the AMERTEER RF073 Wireless Presenter to switch between multiple open windows on a large display, demonstrating the program switching function.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the USB receiver in its dedicated slot at the bottom of the presenter to prevent loss. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if not in constant use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Presenter not responding	Device is off; Low battery; USB receiver not connected; Out of range.	Ensure power switch is ON; Charge the presenter; Re-insert USB receiver; Move closer to the computer (within 15m).
Laser pointer not working	Low battery; Laser button not pressed correctly.	Charge the presenter; Press and hold the laser button firmly.
Page up/down not working	Not in presentation mode; Software incompatibility.	Ensure your presentation software is in full screen or presentation mode; Verify software compatibility (PowerPoint, Keynote, Google Slides).
Hyperlink function not working	No active hyperlinks; Software limitation.	Ensure hyperlinks are correctly set up in your presentation; Some software or modes may not fully support this function.

8. SPECIFICATIONS

Feature	Detail
Brand	AMERTEER
Model Number	RF073
Connectivity	2.4 GHz Wireless (USB Receiver)
Wireless Range	Up to 15 meters (49 feet)
Battery Type	3.7V/360mAh Lithium-ion (Rechargeable)
Charging Time	Approx. 1.5 hours
Continuous Use Time	Approx. 12 hours
Weight	Approx. 30g
Laser Class	PSC Class 2
Laser Color	Red
Compatible OS	Windows, Mac OS, Linux
Compatible Software	PowerPoint, Keynote, Google Slides, etc.
Color	Black

9. WARRANTY AND SUPPORT

AMERTEER provides the following warranty and support for the RF073 Wireless Presenter:

- **12-Month Warranty:** The product comes with a 12-month warranty from the date of purchase.
- **30-Day Money-Back Guarantee:** You may return the product for a full refund within 30 days of purchase.
- **Product Exchange:** Product exchange is available within 12 months for any manufacturing defects or malfunctions.
- **Customer Support:** If you encounter any issues or have questions regarding your product, please do not hesitate to contact our customer support team. We are committed to providing prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question