



Manuals.plus /

› AMERTEER /

› AMERTEER RF071 USB Rechargeable Wireless Laser Presentation Pointer User Manual

AMERTEER RF071

AMERTEER RF071 USB Rechargeable Wireless Laser Presentation Pointer User Manual

Model: RF071 | Brand: AMERTEER

INTRODUCTION

Thank you for choosing the AMERTEER RF071 Wireless Laser Presentation Pointer. This device is designed to enhance your presentations with its intuitive controls, reliable wireless connectivity, and versatile compatibility. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance.



AMERTEER 赤レーザーシリーズ・プレゼンター

素晴らしいデザインと更に効率なプレゼンのために

Windows/Mac OSシステムに汎用

Image: The AMERTEER RF071 wireless laser presentation pointer shown in a professional setting with various devices, highlighting its sleek design and compatibility.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x AMERTEER RF071 Wireless Laser Presentation Pointer
- 1 x USB Charging Cable
- 1 x User Manual (this document)
- 1 x Warranty Card



Image: The AMERTEER RF071 presentation pointer, its charging cable, and packaging, illustrating the complete set of items included.

PRODUCT OVERVIEW

The AMERTEER RF071 features an ergonomic design with clearly labeled buttons for easy operation during

presentations.



Image: Two views of the AMERTEER RF071 pointer, showcasing its sleek gray design and button layout.

Button Functions:



Image: A detailed diagram labeling the LED indicator, hyperlink button, page up/full screen, page down/black screen, and laser button on the AMERTEER RF071.

- **LED Indicator:** Displays connection status and battery level.
- **Hyperlink Button:** Activates hyperlinks in presentations. Long press to switch programs.
- **Page Up / Full Screen Button:** Moves to the previous slide. Long press to enter/exit full screen mode.
- **Page Down / Black Screen Button:** Moves to the next slide. Long press to toggle black screen mode.
- **Laser Button:** Activates the red laser pointer.
- **Power Switch:** Located on the side to turn the device on/off.
- **Volume +/- Buttons:** Located on the side for audio control.
- **USB Receiver Storage:** Located at the bottom of the pointer.

SETUP

1. Charging the Device

The AMERTEER RF071 has a built-in rechargeable lithium battery. Before first use, or when the battery is low, charge the device using the provided USB cable.

1. Locate the charging port on the side of the pointer.
2. Connect the small end of the USB charging cable to the pointer.
3. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
4. The LED indicator will show charging status. A full charge typically takes about 1.5 hours and provides approximately 1 week of use.



Image: The AMERTEER RF071 pointer connected to a laptop via its USB charging cable, demonstrating the charging process.

2. Connecting the Receiver

The RF071 uses a dual-type USB receiver (USB-A and USB-C compatible) for wireless connection. No software installation is required.

1. Gently pull out the USB receiver from the bottom of the pointer.

2. Insert the receiver into an available USB-A or USB-C port on your computer or tablet.
3. The system will automatically detect and install the necessary drivers. This is a plug-and-play device.
4. Turn on the power switch on the side of the pointer. The LED indicator will illuminate, signifying a successful connection.



Image: The dual USB-A and USB-C receiver of the AMERTEER RF071, demonstrating its compatibility with different port types on a laptop.

OPERATING INSTRUCTIONS

Once connected, the AMERTEER RF071 is ready for use with your presentation software.

Basic Functions:

- **Laser Pointer:** Press the **Laser Button** (sun icon) to activate the red laser beam. Release to turn off.
- **Page Up:** Press the **Page Up** (up arrow) button to move to the previous slide.
- **Page Down:** Press the **Page Down** (down arrow) button to move to the next slide.
- **Full Screen Mode:** Long press the **Page Up** button to enter or exit full screen presentation mode.
- **Black Screen Mode:** Long press the **Page Down** button to toggle a black screen, useful for focusing

audience attention away from the slide.

- **Volume Control:** Use the **Volume +/-** buttons on the side to adjust audio output.



Image: A close-up view of the AMERTEER RF071 emitting its red laser beam.

Hyperlink Function:

The hyperlink button allows for quick navigation within your presentation or to external links.

- **Activate Hyperlink:** Press the **Hyperlink Button** (rectangle icon) to activate a hyperlink on the current slide.
- **Switch Programs:** Long press the **Hyperlink Button** to switch between open applications or programs on your computer. This can be used as an alternative to mouse control for program switching.

プログ切替

PC操作不便の時、マウスの代わりに窓口を変換する



Image: A presenter using the AMERTEER RF071 to switch between different open windows on a large display, demonstrating the program switching function.

Compatibility:

The AMERTEER RF071 is widely compatible with various operating systems and presentation software.

- **Operating Systems:** Windows, Mac OS, Linux.
- **Presentation Software:** PowerPoint, Keynote, Google Slides, and other standard presentation applications.



Image: Icons representing Windows, Mac OS, Android, PowerPoint, Keynote, and Google Slides, indicating the broad compatibility of the AMERTEER RF071.

MAINTENANCE

Charging Guidelines:

- Charge the device fully before its first use.
- Recharge the device when the LED indicator shows a low battery warning.
- Avoid overcharging or completely draining the battery to prolong its lifespan.
- Use only the provided USB charging cable or a certified equivalent.

Storage:

- When not in use, turn off the pointer using the power switch to conserve battery.
- Store the USB receiver inside the pointer's dedicated storage slot to prevent loss.
- Keep the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Clean the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pointer not responding	Device is off Low battery Receiver not connected Out of range	Turn on the power switch Charge the device Ensure receiver is fully inserted into a USB port Move closer to the computer (within 15m)
Laser not working	Laser button not pressed Low battery	Press and hold the laser button Charge the device
Page navigation not working	No presentation software open Software not in presentation mode Incorrect focus	Open your presentation software Start the slideshow/presentation Ensure the presentation window is active
Intermittent connection	Interference Loose receiver	Avoid obstacles between pointer and receiver Ensure receiver is securely connected

SPECIFICATIONS

Feature	Detail
Model Number	RF071
Connectivity	2.4GHz Wireless
Receiver Type	USB-A & USB-C Dual Receiver
Operating Range	Up to 15 meters (49 feet)
Laser Type	Red Laser, PSC Class 2 certified
Battery	Built-in 3.7V/360mAh Lithium Battery
Charging Time	Approx. 1.5 hours
Weight	Approx. 50g (1.1 oz)
Dimensions	15.5 x 4.9 x 2.2 cm (approximate package size)
Compatible OS	Windows, Mac OS, Linux
Color	Gray

WARRANTY AND SUPPORT

AMERTEER provides the following warranty and support for your RF071 Wireless Laser Presentation Pointer:

- **30-Day Refund Guarantee:** If you are not satisfied with the product, you may be eligible for a full refund within 30 days of purchase.
- **12-Month Exchange Policy:** The product is covered by a 12-month exchange policy for any

manufacturing defects or malfunctions under normal use.

For any product inquiries, technical support, or warranty claims, please contact AMERTEER customer service through the platform where you purchased the product. Please have your purchase details and model number (RF071) ready when contacting support.