

[manuals.plus](#) /

- › [SoBuy](#) /
- › [SoBuy FSR111-W Shoe Cabinet Instruction Manual](#)

SoBuy FSR111-W

SoBuy FSR111-W Shoe Cabinet Instruction Manual

Model: FSR111-W

INTRODUCTION

Thank you for choosing the SoBuy FSR111-W Shoe Cabinet. This manual provides essential information for the safe assembly, proper use, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The SoBuy FSR111-W shoe cabinet, a white, narrow unit designed for entryway organization, featuring open shelves and closed compartments.

SAFETY INFORMATION

- **Adult Assembly Required:** This product contains small parts and requires assembly by adults. Keep children away during assembly.
- **Wall Mounting:** For safety and stability, this shoe cabinet **must** be securely fixed to the wall using the provided safety hardware to prevent tipping. Failure to do so can result in serious injury.
- **Weight Capacity:** Do not exceed the maximum load capacity of 30 kg. Distribute weight evenly.
- **Proper Tools:** Use appropriate tools for assembly as indicated in the assembly guide.
- **Placement:** Place the cabinet on a flat, stable surface. Avoid placing it in areas with high humidity or direct sunlight.

PACKAGE CONTENTS

Before starting assembly, please ensure all parts and hardware are present and undamaged. Refer to the separate assembly guide included in your package for a detailed list of numbered components and fasteners.

The package typically includes:

- All necessary wooden panels (MDF E1, PB E1)
- Hardware pack (screws, dowels, hinges, wall-mounting kit)
- Illustrated assembly instructions

ASSEMBLY INSTRUCTIONS

Assembly of the SoBuy FSR111-W shoe cabinet is designed to be straightforward with the provided illustrated instructions. All parts are numbered to facilitate the process.

1. **Unpack:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each part to the corresponding number in the assembly guide.
3. **Follow Steps:** Adhere strictly to the step-by-step illustrated instructions. Do not skip steps.
4. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the material.
5. **Wall Attachment:** Once assembled, position the cabinet in its desired location. Use the provided safety hardware to firmly attach the cabinet to a solid wall. This is crucial for stability and safety.



Image: Detail of the cabinet's sturdy base, designed for floor mounting and stability.

OPERATING INSTRUCTIONS

The SoBuy FSR111-W shoe cabinet offers versatile storage with its two flap doors, two open compartments, and one additional door.

Shoe Storage (Flap Doors)

The two flap doors are designed to store shoes. Each flap compartment can accommodate multiple pairs, depending on shoe size and style. The internal shelves are height-adjustable to optimize space for different shoe types.



Image: The shoe cabinet with its two flap doors open, showing shoes neatly organized within the compartments.



Image: A close-up view of the flap door mechanism, illustrating how shoes are placed and secured.

Note on Shoe Size: Due to the narrow design (24 cm depth), larger shoe sizes (e.g., men's US size 10/EU 43 and above, or bulky athletic shoes) may fit snugly or require careful placement. Some shoes might need to be stored at an angle or with the flap slightly ajar if they are particularly long or wide. Consider the dimensions of your footwear when utilizing these compartments.

Open Compartments

The two open compartments located at the top provide easy access storage for frequently used items, decorative pieces, or smaller accessories.



Image: A detailed view of the two open compartments, suitable for small decorative items or quick-access storage.

Top Door Compartment

The single door at the top offers a hidden storage space, ideal for items like scarves, hats, gloves, or other small personal belongings, keeping your entryway tidy and organized.



Image: The top door of the cabinet opened, revealing a discreet storage area for various accessories.

MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood material.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Avoid Overloading:** Do not place excessively heavy items on the shelves or inside the compartments to prevent structural damage.

TROUBLESHOOTING

Shoes do not fit in compartments:

The FSR111-W is a narrow shoe cabinet (24 cm depth). If your shoes are too large or bulky, try the following:

- Adjust the height of the internal shelves if possible.
- Place shoes at an angle.
- Consider storing larger or bulkier footwear elsewhere if they consistently do not fit.

Cabinet feels unstable:

Ensure the cabinet is placed on a level surface. Verify that all assembly screws are tightened. Most importantly, confirm that the cabinet is securely anchored to the wall using the provided anti-tip hardware. This step is critical for stability.

Missing parts or damaged components:

If you find any parts missing or damaged upon unpacking, please contact SoBuy customer support immediately for assistance.

SPECIFICATIONS

Brand	SoBuy
Model Number	FSR111-W
Color	White
Product Dimensions (D x W x H)	24 x 71 x 118 cm
Item Weight	24 Kilograms
Maximum Weight Capacity	30 Kilograms
Material	Engineered Wood (MDF E1, PB E1)
Features	2 flap compartments, height-adjustable shoe shelves, upper storage shelf, hidden storage behind the door, wall mounting
Recommended Uses	Entryway
Mounting Type	Floor Mount (with wall attachment)



Image: Technical diagram showing the precise dimensions of the SoBuy FSR111-W shoe cabinet.

WARRANTY AND SUPPORT

SoBuy products are designed for quality and durability. If you encounter any issues with your product, or if you are not satisfied, please contact SoBuy customer service. Information regarding returns or product issues can be found on the retailer's website or by contacting SoBuy directly.

For assistance, please refer to the contact information provided by your point of purchase or visit the official SoBuy website.