

## Geepas GSWM6493

# Geepas GSWM6493 Semi-Automatic Washing Machine User Manual

Model: GSWM6493 | Brand: Geepas

[Safety Instructions](#)   [Product Components](#)   [Setup & Installation](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Geepas GSWM6493 Semi-Automatic Washing Machine. Please read these instructions carefully before use and retain them for future reference. The Geepas GSWM6493 is a top-load, semi-automatic washing machine designed for efficient laundry care. It features a dual tub system for washing and spinning, a 7kg wash capacity, and a 5.5kg spin capacity, making it suitable for individuals, couples, or small families. Its compact design allows for placement in various spaces, and the durable ABS plastic body ensures longevity.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the power supply matches the specifications (240V AC).
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not reach into the machine if the tub is moving.
- Install the machine on a firm, level surface to prevent vibration and noise.
- Ensure proper drainage to avoid water overflow.
- This appliance is for household use only.

## PRODUCT COMPONENTS AND FEATURES

Familiarize yourself with the main parts of your washing machine:

- **Wash Tub:** For washing clothes.
- **Spin Tub:** For spinning clothes to remove excess water.
- **Control Panel:** Includes Wash Timer, Wash Selector, Water Inlet, and Spin Timer.
- **Water Inlet:** Connects to the water supply. Features a filter assembly.
- **Drain Hose:** For discharging water.
- **Lid:** Covers the wash and spin tubs.
- **Ripple Pulsator:** Generates strong water flow for effective cleaning.
- **Lint Filter:** Collects lint and debris during the wash cycle.



Image: Front view of the Geepas GSWM6493 washing machine, showing the dual tubs and control panel.

**GEEPAS**<sup>®</sup>  
For you. For life.

## High-grade Plastic & Abs Body

Geepas Semi-Automatic Washing Machine is made up of high-quality plastic and ABS body. This high-grade plastic makes keeps this washing machine protected from rust and corrosion. This high-grade plastic is durable and non-breakable.

It also provides a smooth surface to the washing machine's body, which helps you in its convenient cleaning



Image: Close-up of the control panel, highlighting the wash timer, wash selector, water inlet, and spin timer knobs.



Image: Internal view of the wash tub, showing the lint filter and the water inlet mechanism.

## SETUP AND INSTALLATION

### Unpacking

- Carefully remove the washing machine from its packaging.
- Check for any damage during transit. If damaged, contact your retailer immediately.
- Remove all packing materials, including the base packaging.

## Placement

- Place the machine on a flat, stable surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access.
- Avoid direct sunlight or placing near heat sources.

## Water Connection

- Connect the water inlet hose to a suitable water tap.
- Ensure the connection is secure to prevent leaks.
- The water inlet is designed for easy connection without removing the machine cover.

## Drainage

- Position the drain hose to allow for proper water discharge.
- Ensure the drain hose is not kinked or blocked.
- The drain hose should be placed at a height that allows gravity to drain the water effectively.

## Power Connection

- Plug the power cord into a grounded 240V AC electrical outlet.
- Do not use extension cords or adapters.

# OPERATING INSTRUCTIONS

---

## Washing Procedure

1. **Load Laundry:** Open the lid and place clothes into the wash tub. Do not overload the machine beyond its 7kg capacity.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
3. **Fill with Water:** Turn on the water tap and fill the wash tub to the desired level. The water inlet is located on the control panel.
4. **Set Wash Timer:** Turn the **Wash Timer** knob to select the desired wash duration (up to 15 minutes).
5. **Select Wash Mode:** Turn the **Wash Selector** knob to choose the appropriate wash mode (e.g., Gentle, Normal, Strong) based on fabric type.
6. **Start Washing:** The machine will begin the wash cycle.
7. **Drain Water:** Once the wash cycle is complete, turn the Wash Selector knob to "Drain" to empty the water from the wash tub.

## Spinning Procedure

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute them evenly.
2. **Close Spin Lid:** Ensure the spin tub lid is securely closed.
3. **Set Spin Timer:** Turn the **Spin Timer** knob to select the desired spin duration (up to 5 minutes).
4. **Start Spinning:** The machine will begin the spin cycle.
5. **Remove Laundry:** Once the spin cycle is complete, open the lid and remove the spun clothes.

**Note:** The dual tub design allows for simultaneous washing and spinning, saving time. You can wash a new load in the wash tub while a previous load is spinning in the spin tub.

## MAINTENANCE AND CLEANING

---

### Cleaning the Lint Filter

- The lint filter should be cleaned regularly, ideally after every few washes, to maintain washing efficiency.
- Remove the lint filter from the wash tub.
- Rinse it under running water to remove accumulated lint and debris.
- Reinsert the clean lint filter back into its position in the wash tub.

### Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the ABS plastic body.
- Ensure the control panel is kept dry.

### Cleaning the Tubs

- Periodically clean the inside of the wash and spin tubs to prevent detergent residue buildup.
- You can run a short wash cycle with hot water and a cup of white vinegar (without clothes) to help sanitize and remove odors.

### Storage

- If storing the machine for an extended period, ensure it is completely drained and dry.
- Unplug the power cord and store it safely.
- Cover the machine to protect it from dust.

## TROUBLESHOOTING GUIDE

---

Problem	Possible Cause	Solution
Machine does not start	<ul style="list-style-type: none"><li>◦ Power cord not plugged in.</li><li>◦ Power outage.</li><li>◦ Lid not closed properly (for spin tub).</li><li>◦ Timer not set.</li></ul>	<ul style="list-style-type: none"><li>◦ Plug in the power cord securely.</li><li>◦ Check your household's power supply.</li><li>◦ Ensure the lid is fully closed.</li><li>◦ Set the wash or spin timer.</li></ul>
Water does not fill	<ul style="list-style-type: none"><li>◦ Water tap is off.</li><li>◦ Water inlet hose is kinked or blocked.</li><li>◦ Water pressure is too low.</li></ul>	<ul style="list-style-type: none"><li>◦ Turn on the water tap.</li><li>◦ Straighten the hose or clear any blockage.</li><li>◦ Check household water pressure.</li></ul>
Water does not drain	<ul style="list-style-type: none"><li>◦ Drain hose is kinked or blocked.</li><li>◦ Drain selector not set to "Drain".</li></ul>	<ul style="list-style-type: none"><li>◦ Straighten the hose or clear any blockage.</li><li>◦ Turn the Wash Selector knob to "Drain".</li></ul>

Problem	Possible Cause	Solution
Excessive vibration or noise	<ul style="list-style-type: none"> <li>Machine is not on a level surface.</li> <li>Laundry is unevenly distributed in the spin tub.</li> <li>Shipping bolts not removed (if applicable, though less common for semi-auto).</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the machine to be level.</li> <li>Rearrange clothes evenly in the spin tub.</li> <li>Refer to installation guide for shipping bolt removal if present.</li> </ul>
Poor washing performance	<ul style="list-style-type: none"> <li>Overloading the machine.</li> <li>Insufficient detergent.</li> <li>Lint filter is clogged.</li> </ul>	<ul style="list-style-type: none"> <li>Reduce laundry load.</li> <li>Use recommended amount of detergent.</li> <li>Clean the lint filter.</li> </ul>

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	GSWM6493
Brand	Geepas
Type	Semi-Automatic Top Load Washing Machine
Wash Capacity	7 kg
Spin Capacity	5.5 kg
Dimensions (D x W x H)	73.5 cm x 42 cm x 86 cm
Gross Weight	20 kg
Material	ABS Plastic
Voltage	240V AC
Control Type	Knob
Special Features	Portable, Dual Tub, Ripple Pulsator

## Water Inlet Design, Rotary Controls

Design of independent water inlet, made-to-order waterproofing excellent, sun protection, anti-aging power, kind of washing machine. Water can be supplied without removing the washing machine cover.



Durable Body



Highly Efficient



Ripple Pulsator



Classic Design



Water Inlet With Filter Assy



Image: Dimensional diagram of the washing machine, indicating height, width, and depth.

## WARRANTY AND SUPPORT

Your Geepas GSWM6493 Semi-Automatic Washing Machine comes with a **two-year warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials under normal household use.

The warranty does not cover:

- Damage caused by improper installation or use not in accordance with this manual.
- Damage caused by accidents, misuse, neglect, or unauthorized repairs.
- Normal wear and tear.

For warranty claims or technical support, please contact Geepas customer service or your authorized retailer with your proof of purchase.

