

PPLEE CR1002W

PPLEE Sound Noise Machine & Dual Alarm Clock User Manual

Model: CR1002W

INTRODUCTION

This user manual provides detailed instructions for the operation and maintenance of your PPLEE Sound Noise Machine & Dual Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

The PPLEE Sound Noise Machine & Dual Alarm Clock is designed to enhance sleep and relaxation for babies, kids, and adults. It features 42 soothing sounds, a 7-color night light, dual alarms with snooze, adjustable volume and display brightness, and convenient charging ports.



Image: Front view of the PPLEE Sound Noise Machine and Dual Alarm Clock, showcasing its digital display, control buttons, and a smartphone connected for charging.

WHAT'S IN THE Box

- 1 x PPLEE Noise Machine Alarm Clock
- 1 x 5V 2A Power Adapter and Cord
- 1 x User Manual

SETUP

Power Connection

To power on the device, connect the provided 5V 2A power adapter to the DC jack on the back of the

unit and plug it into a standard wall outlet. The device requires continuous power for all functions, including USB charging and time display.



Image: The sound machine connected to a power outlet, illustrating the primary power source and the internal CR2032 battery for backup.

Battery Backup Installation

The unit includes a CR2032 battery for backup. This battery maintains time and alarm settings during a power outage, ensuring you wake up on time. No user installation is typically required for this battery, as it comes pre-installed.

Initial Time Setting

Upon first power-up or after a prolonged power disconnection without battery backup, the time display

may need to be set. Refer to the "Operating Instructions" section for detailed steps on setting the time and date.

OPERATING INSTRUCTIONS

General Controls Overview

The device features an intuitive control panel with clearly labeled buttons for various functions. Familiarize yourself with the button layout for easy operation.



Image: A detailed view of the control panel on the sound machine, showing buttons for power, sound categories, time adjustment, and alarms.

Setting Time and Date

1. Press the **HOUR** button to adjust the hour.
2. Press the **MIN** button to adjust the minute.
3. To switch between 12-hour and 24-hour format, press the **12/24H** button.
4. To activate or deactivate Daylight Saving Time (DST), press the **DST** button.

Sound Machine Functions

The device offers 42 high-quality soothing sounds across various categories:

- **Fan Sounds:** 5 different fan sounds.
- **White Noise:** 6 types of white noise.
- **Lullabies:** 15 lullaby melodies, suitable for babies and children.
- **Natural Sounds:** 16 natural sounds including rain, thunderstorm, ocean waves, forest, clock ticking, summer night (crickets), bird, brook, wind, drops, keyboard, and fire.



Image: Illustration of the 42 soothing sounds available, categorized into fan, white noise, lullabies, and natural sounds, with sleep timer options.

To select a sound, press the corresponding sound category button (e.g., Fan, White Noise, Lullaby,

Music Note for Natural Sounds) and then cycle through the available sounds within that category using the sound selection buttons.

Sleep Timer

The sleep timer allows the sound machine to automatically turn off after a set duration. Available timer settings are 15, 30, 60, 90, 120, or 180 minutes.

1. Press the **TIMER** button repeatedly to cycle through the timer options.
2. The selected timer duration will be displayed on the screen.
3. To cancel the timer, cycle through the options until no timer duration is displayed.



Image: A visual representation of the auto-off timer settings (15, 30, 60, 90, 120, 180 minutes) for the sound machine.

Alarm Clock Functions

The device features dual alarms (Alarm 1 and Alarm 2) and 9 natural wake-up sounds.

1. Setting Alarms:

- Press and hold **ALM 1** or **ALM 2** button to enter alarm setting mode.
- Use the **HOUR** and **MIN** buttons to set the desired alarm time.
- Press the **ALM 1** or **ALM 2** button again to confirm and exit setting mode.

2. Selecting Alarm Sound:

- While in alarm setting mode, or after selecting an alarm, use the sound selection buttons to choose from 9 wake-up sounds (flute, bird, piano, buzzer, bell, beep, etc.).

3. **Snooze Function:** When the alarm sounds, press the large **SNOOZE** button on top of the unit to get an extra 9 minutes of sleep.

4. **Disabling Alarm:** To turn off an active alarm, press any button other than the SNOOZE button. To disable an alarm permanently, press the **ALM 1** or **ALM 2** button until the alarm icon disappears from the display.

Dual Alarm With 9 Natural Wake-up Sounds

① First Alarm AM 7:30



② Second Alarm AM 8:00



Image: Depiction of the dual alarm functionality, showing two different alarm times and a selection of 9 natural wake-up sounds.



Image: The snooze button on top of the unit, indicating its ease of use for an additional 9 minutes of sleep.

Volume and Display Brightness Adjustment

The device features 16 adjustable volume levels for sounds and 5 levels of display brightness.

1. **Volume:** Use the **Volume Up** and **Volume Down** buttons to adjust the sound output from level 0 to 16.
2. **Display Brightness:** Press the **DIMMER** button to cycle through 5 levels of display brightness. Level 01 is suitable for night, and level 05 is bright enough for daytime viewing.



1-16 Levels Adjustable Volume



5 Adjustable Brightness



Image: Visual representation of the 16 adjustable volume levels and 5 adjustable brightness levels for the display.

Night Light Function

The integrated night light offers 7 color options: blue, ice blue, green, white, yellow, red, and purple. It

provides a warm and comfortable light, suitable for various environments.

1. To turn on the night light, press the **Night Light** button.
2. Press the **Night Light** button repeatedly to cycle through the 7 colors.
3. To turn off the night light, cycle through the colors until the light is off.
4. Alternatively, pat the top of the unit to switch colors or turn the light on/off.



Image: The sound machine with its night light illuminated in various colors, demonstrating the 7-color option and the pat-to-switch feature.

Charging Ports

The device includes a USB-A port and a Type-C port for charging external devices like smartphones or tablets. These ports are active only when the unit is powered via the wall outlet.

Type-C Charging & USB Phone Charger



Image: The sound machine with a smartphone connected to its USB charging port, illustrating its function as a charging station.

MAINTENANCE

Cleaning

To clean the device, gently wipe the exterior with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or spray directly onto the unit. Ensure the device is unplugged before cleaning.

Storage

When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures. Keep it free from dust and moisture.

Battery Replacement (CR2032)

The CR2032 backup battery is designed for long-term use. If the time and alarm settings are not retained during a power outage, the battery may need replacement. Consult the manufacturer's support for guidance on battery replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Not plugged in; power outlet issue; faulty adapter.	Ensure power adapter is securely plugged into the device and a working wall outlet. Try a different outlet.
No sound from the speaker.	Volume is too low or muted; incorrect sound selected.	Increase the volume using the volume buttons. Ensure a sound is selected and not paused.
Alarm does not sound.	Alarm not set or disabled; volume too low.	Verify alarm time and ensure alarm is enabled (alarm icon visible). Check alarm volume.
Time/settings reset after power outage.	Backup battery depleted or not installed.	The CR2032 backup battery may need replacement. Contact customer support for assistance.
USB/Type-C charging not working.	Device not powered by wall outlet; cable issue.	Ensure the device is plugged into a wall outlet. Try a different charging cable.

SPECIFICATIONS

Feature	Detail
Model Number	CR1002W
Product Dimensions	5.32 x 5.95 x 6.1 inches
Item Weight	1.39 pounds


Feature	Detail
Power Source	AC Outlet (5V 2A adapter included)
Backup Battery	1 x CR2032 (included)
Sound Options	42 (Fan, White Noise, Lullabies, Natural Sounds)
Volume Levels	16
Display Dimmer Levels	5
Night Light Colors	7 (Blue, Ice Blue, Green, White, Yellow, Red, Purple)
Sleep Timer Options	15, 30, 60, 90, 120, 180 minutes
Alarm Sounds	9 (Flute, Bird, Piano, Buzzer, Bell, Beep, etc.)
Charging Ports	1 x USB-A, 1 x Type-C
Manufacturer	PPLEE E-commerce Co.Ltd
Date First Available	June 24, 2022

WARRANTY AND SUPPORT

Your PPLEE Sound Noise Machine & Dual Alarm Clock comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.

Additionally, PPLEE offers a 30-day free return and refund service. For any inquiries, technical assistance, or warranty claims, please contact our 24/7 online customer services. Please have your purchase details and model number (CR1002W) ready when contacting support.

For further assistance, you may refer to the official PPLEE store on Amazon:[PPLEE Amazon Store](#)

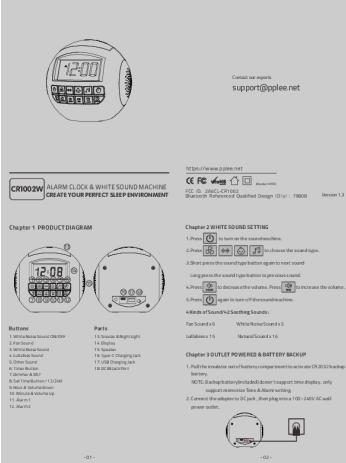

[pdf] User Manual Diagram

3401000207 PPLEE CR1002W UserManual 2022 7 28 V1 3 cdr Peter User Manual Sound Noise Machine for Baby Kids Adults Sleeping 42 Soothing White Nature Fan Lullaby Sounds with Colors Night Light 6 Timers 16 Volumes Dual Alarm Clock 2 USB Ports Bedroom Office Privacy Health Household B1DnWsChmuL m media amazon images ! |||

Contact our experts support pplee.net **CR1002W** ALARM CLOCK WHITE SOUND MACHINE CREATE YOUR PERFECT SLEEP ENVIRONMENT

<https://www.pplee.net> Made in PRC FCC ID. 2A6CL-CR1002 Bluetooth Referenced Qualified Design ID s : 79808 Version 1.3 Chapter 1 PRODUCT DIAGRAM 13 14 123456 15 7 8 9 10 11 12 16...

lang:en score:22 filesize: 3.11 M page_count: 2 document date: 2022-07-28