

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY D512-H Remote Control Instruction Manual for Vizio Elevate Soundbar

VINABTY D512-H

VINABTY D512-H Remote Control Instruction Manual

For Vizio Elevate Soundbar 5.1.2 and 5.1.4 Models

INTRODUCTION

This manual provides instructions for the VINABTY D512-H replacement remote control. This remote is designed to be compatible with Vizio Elevate Soundbar 5.1.2 and 5.1.4 models, including M512a-H6, P514a-H6, M51ax-J6, V51x-J6, M215a-J6, V51-H6, M51a-H6B, and M51a-H6B-RB. It offers full functionality for controlling your soundbar's features, including input selection, volume adjustment, EQ settings, and more.



D512-H

Replaced Remote Control with LCD Backlit Display fit for Vizio

Elevate Soundbar 5.1.2 and 5.1.4 Soundbar M512a-H6 P514a-H6

M51ax-J6 V51x-J6 M51ax-J6 M215a-J6 V51-H6 M51a-H6B

Image: The VINABTY D512-H remote control, designed as a replacement for Vizio Elevate Soundbars.

Battery Installation

The D512-H remote control requires two AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and - terminals match the indicators inside the compartment).
4. Close the battery compartment cover securely.

The remote control is designed to function immediately after battery installation without additional pairing steps for compatible Vizio Elevate Soundbar models.



Image: The D512-H remote control with its battery compartment open, illustrating the insertion of two AAA batteries.

This section details the functions of each button on your D512-H remote control.



Image: A detailed diagram labeling each button on the D512-H remote control and its corresponding function.

Display: Shows Sound Bar Settings.

Power (): Turns the soundbar on or off.

Input: Changes the audio input source. Long press for Auto Input Search.

Bluetooth (☆): Press to go to Bluetooth Mode. Long press for Pairing Mode.

OK: Selects an option, plays, or pauses. Long press for info.

Previous (◀◀): Returns to the previous track. (Changes audio settings in menu).

Next (▶▶): Skips to the next track. (Changes audio settings in menu).

Up/Down Arrows: Cycles through settings and options.

Volume +/-: Increases and decreases volume.

EQ Settings (EQ): Changes equalizer settings.

Setup (SETUP): Changes setup settings.

Level Settings (LEVEL): Changes audio leveling settings.

Effect Settings (EFFECT): Changes audio effect settings.

Mute (): Mutes or unmutes the sound. Long press to turn LED power indicator on/off.

When selecting specific inputs, the remote's visual display may show different LED colors to indicate the active input.



Image: A user operating the D512-H remote control to interact with a Vizio soundbar and television setup.

MAINTENANCE

To ensure the longevity and optimal performance of your D512-H remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners, aerosols, or harsh chemicals, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's response becomes sluggish or it stops functioning.

Always replace both batteries at the same time with new ones of the same type (AAA).

- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** Avoid dropping the remote or exposing it to excessive force, which can damage the internal circuitry or the LCD display. Keep it away from liquids.

TROUBLESHOOTING

If you encounter issues with your D512-H remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
 - Confirm the remote is pointed directly at the soundbar.
- **Limited Functionality:**
 - Verify that your soundbar model is listed as compatible with the D512-H remote control.
 - Some advanced functions may only be available on specific Vizio Elevate soundbar versions. If a function does not work, your soundbar model may not support it.
- **Display Issues:**
 - If the LCD display is dim or not showing information, replace the batteries.
 - Ensure the remote has not been exposed to physical damage or liquids.

SPECIFICATIONS

Brand	VINABTY
Model Name	D512-H
Connectivity Technology	Infrared
Special Feature	Digital Display
Compatible Devices	Home Theater (Vizio Elevate Soundbars)
Battery Type	AAA (x2)
Maximum Range	33 feet
Item Dimensions (L x W x H)	5"L x 1.9"W x 0.5"H
Color	Black



5.91 inch



Image: The D512-H remote control with its length and width dimensions indicated.

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller or the original purchase documentation. For technical support or further assistance, please contact the seller directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question