

[Manuals.plus](#) /

› [ZIPPY](#) /

› ZIPPY 37-Key Digital Piano for Kids (Model SLW99802A) - Instruction Manual

ZIPPY SLW99802A

ZIPPY 37-Key Digital Piano for Kids

MODEL: SLW99802A

Important Safety Information

WARNING: CHOKING HAZARD - Small Parts. Not suitable for children under 3 years due to small parts that could be swallowed. Adult supervision is recommended during play.

What's in the Box

Verify that all components are present before assembly and use.

- 1x 37 Keys Digital Piano
- 1x Assembly Kit (hardware for assembly)
- 1x Color Coded Keyboard Stickers
- 1x Color Illustrated Songbook

ZIPPY

37 KEYS DIGITAL PIANO



MUSIC ENLIGHTENMENT



WOODEN



SUPERIOR SOUND



EDUCATIONAL



DIGITAL-TUNED KEYS



SCREEN-FREE

Image: The complete set of the ZIPPY 37-Key Digital Piano, including the piano, matching bench, and educational accessories.

1. Setup and Assembly

Adult assembly is required for this digital piano. Follow these steps to ensure proper setup:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble the Piano Stand:** Attach the piano legs to the main body using the provided screws and tools from the assembly kit. Ensure all connections are secure.
3. **Assemble the Bench:** Connect the bench legs to the seat using the provided hardware. Verify stability.
4. **Install Batteries:** The piano requires 3x AA batteries (not included). Locate the battery compartment, insert the batteries according to polarity markings, and close the cover securely.
5. **Apply Keyboard Stickers:** For an enhanced learning experience, apply the color-coded keyboard stickers to the corresponding keys as indicated in the songbook or on the sticker sheet.

ZIPPY



REQUIRES 3 x AA BATTERIES (NOT INCLUDED)

Image: Dimensions of the assembled piano and bench, indicating height, width, and depth.




Image: A child seated at the assembled ZIPPY 37-Key Digital Piano, demonstrating its use.

2. Operating Instructions

The ZIPPY 37-Key Digital Piano is designed for ease of use, providing a foundational musical experience.

- **Power On/Off:** Locate the power button, typically on the piano's top panel or side. Press to turn the piano on or off.
- **Playing the Keys:** The 37 digital-tuned keys produce accurate musical notes. Press any key to hear its corresponding sound.
- **Using the Songbook:** The included color-illustrated songbook provides simple songs with color-coded notes that correspond to the keyboard stickers. Follow the colors and notes to play melodies.
- **Headphone Jack:** A 3.5mm headphone jack is available for private practice. Connect standard headphones (not included) to this port.

ZIPPY

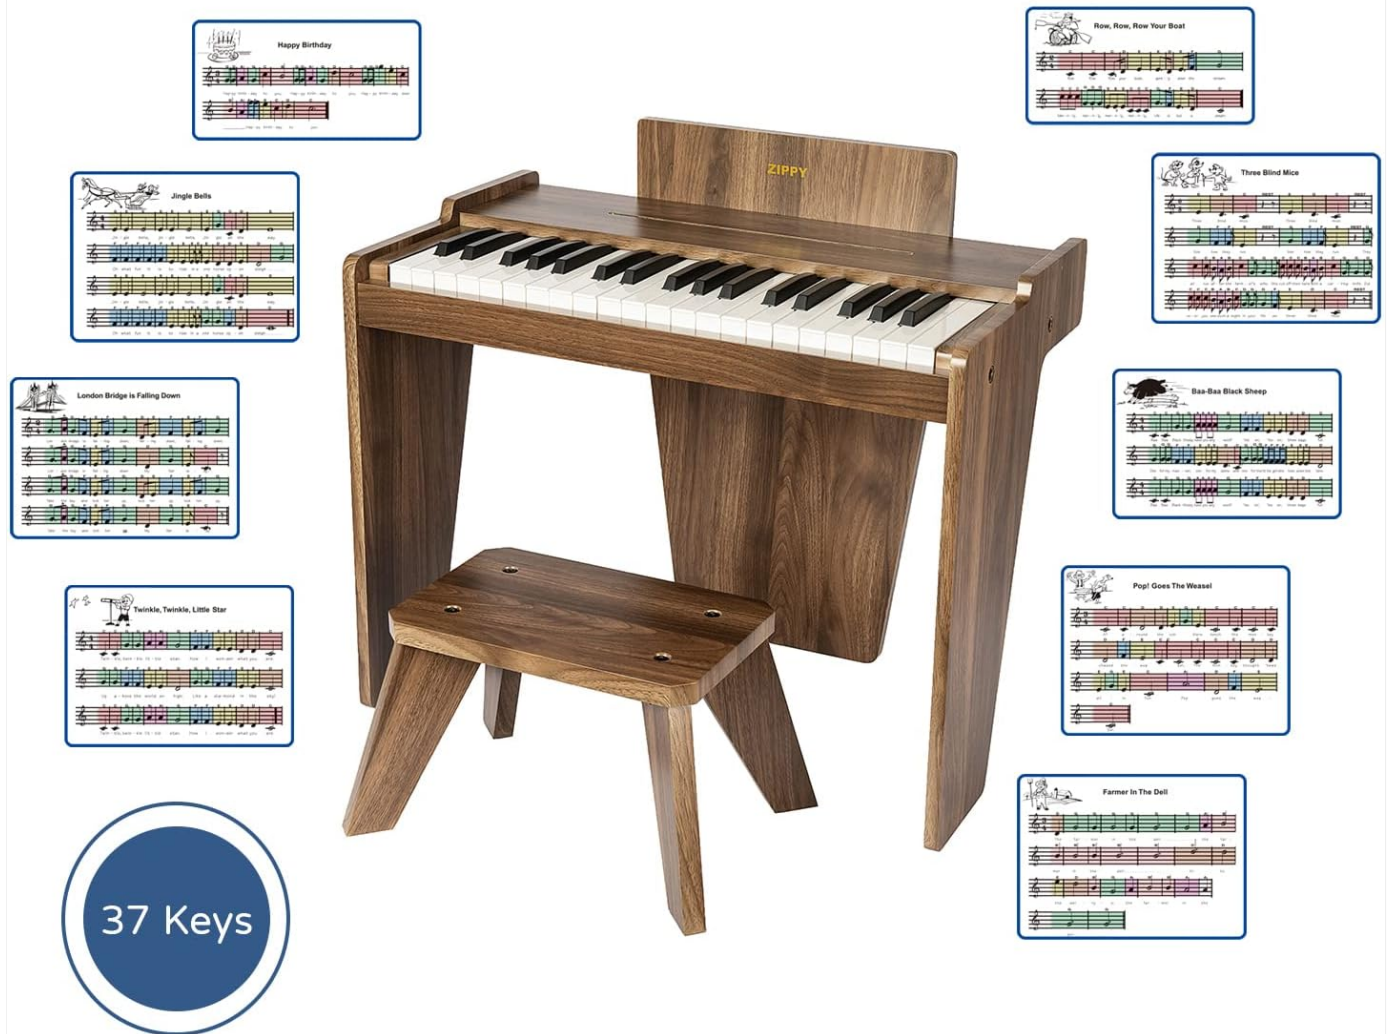

Includes color illustrated songbook of 9 selected tunes.

Image: The digital piano with the included color-illustrated songbook placed on its music rest, ready for use.



Includes color coded keyboard stickers.

Image: A detailed view of the piano keys, showing the color-coded stickers that assist in learning.

Your browser does not support the video tag.

Video: This video demonstrates the features and functionality of the ZIPPY 37-Key Digital Piano, highlighting its suitability for hands-on musical exploration.

3. Maintenance

To ensure the longevity and proper functioning of your digital piano, follow these maintenance guidelines:

- **Cleaning:** Wipe the piano and bench surfaces with a soft, dry cloth. Avoid abrasive cleaners or solvents, which can damage the finish.
- **Storage:** Store the piano in a dry environment, away from direct sunlight and extreme temperatures.
- **Battery Care:** If the piano will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Handling:** Avoid dropping or subjecting the piano to strong impacts, as this can damage internal electronic components or the wooden structure.

4. Troubleshooting

If you encounter any issues with your ZIPPY 37-Key Digital Piano, refer to the following common solutions:

- **No Sound:**
 - Ensure the piano is powered on.
 - Check if batteries are correctly installed and not depleted. Replace if necessary.
 - If headphones are connected, ensure they are fully plugged in and functioning. Disconnect them to check speaker output.
- **Distorted Sound:**
 - Check battery level; low batteries can cause distortion.
 - Ensure no foreign objects are obstructing the speaker.
- **Keys Not Responding:**
 - Power cycle the piano (turn off, then on again).
 - Ensure no debris is lodged under the keys.

If the issue persists after attempting these steps, please contact customer support.

5. Specifications

Feature	Detail
Brand	ZIPPY
Model Name	SLW99802A
Number of Keys	37
Skill Level	Beginner
Connectivity Technology	Auxiliary
Headphones Jack	3.5mm Jack
Item Weight	10.12 kg (22.31 lbs)
Item Dimensions (D x W x H)	12.6"D x 22.4"W x 18.1"H (32cm D x 57cm W x 46cm H)
Finish Type	Polished
Sound Profile	Piano-like Digital Sound
Power Source	3x AA Batteries (not included)

6. Warranty and Support

This ZIPPY Digital Piano comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any product-related inquiries, please contact ZIPPY customer service through the retailer where the product was purchased or visit the official ZIPPY website for contact information.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question