



[Manuals.plus](#) /

› [Better Homes & Gardens](#) /

› Better Homes & Gardens 16" Pedestal Fan User Manual

Better Homes & Gardens BHS23619315319R

Better Homes & Gardens 16" Pedestal Fan

Model: BHS23619315319R

User Manual

INTRODUCTION

Thank you for choosing the Better Homes & Gardens 16" Pedestal Fan. This high-quality fan is designed to provide effective cooling and consistent airflow, enhancing comfort in any space. With its sleek design, powerful yet quiet motor, and versatile features, it is an ideal solution for beating the heat. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your fan.



Image: The Better Homes & Gardens 16" Pedestal Fan positioned in a modern living room, demonstrating its aesthetic integration into a home environment.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this fan and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- This fan is intended for household use only. Do not use outdoors.
- Do not insert fingers or any other objects through the grille when the fan is operating.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not use this fan in areas where water or moisture is present, such as bathrooms or laundry rooms.
- Keep children and pets away from the fan during operation.

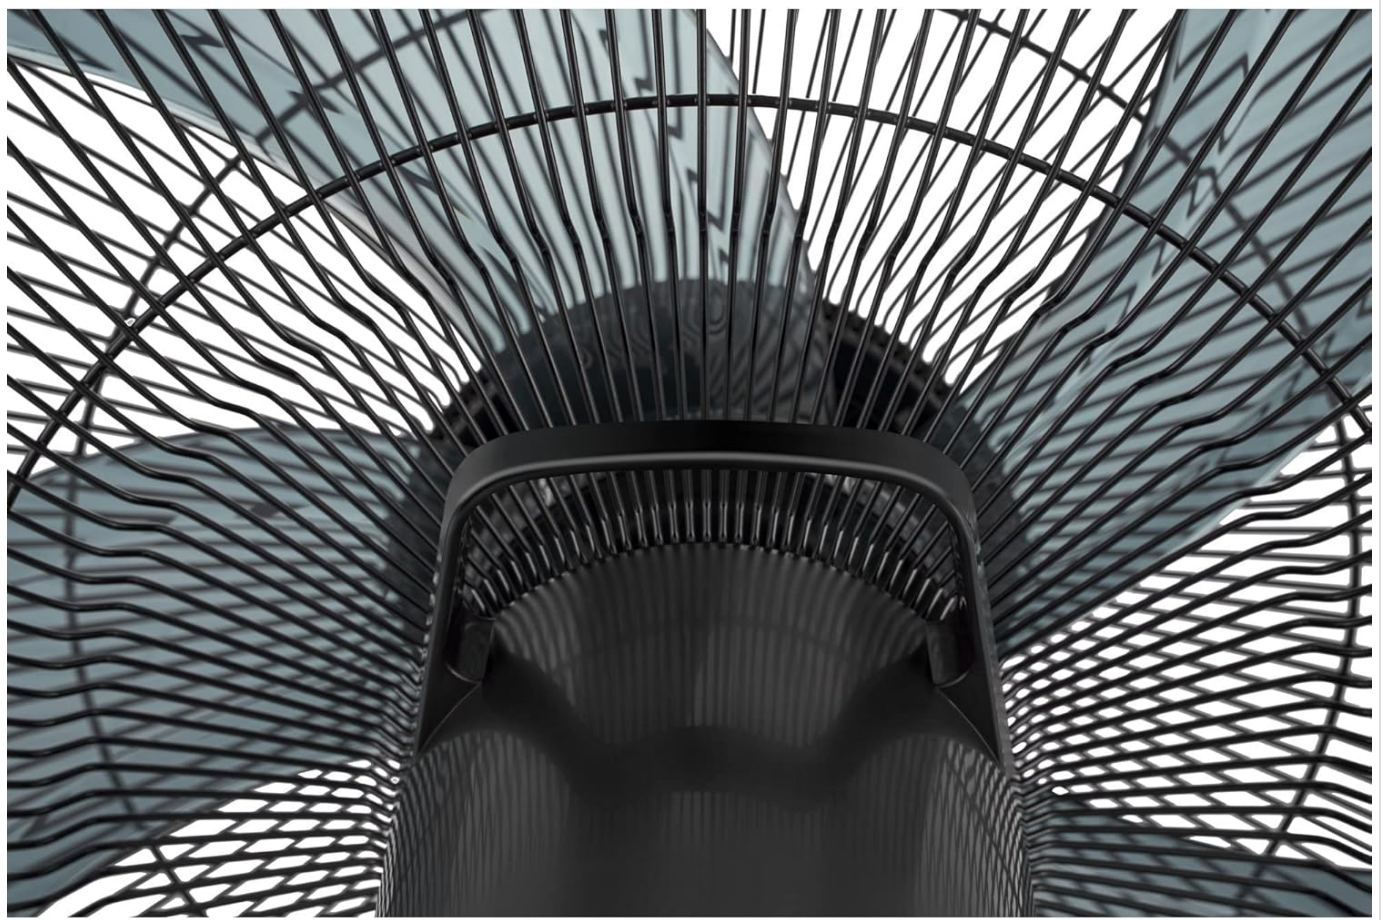


Image: A detailed close-up of the fan's protective grille and blades, highlighting the safety design to prevent accidental contact.

PACKAGE CONTENTS

Please check the box and ensure all parts are present:

- Fan Head Assembly (includes front and rear grilles, fan blades, motor housing)
- Adjustable Height Pole
- Base

- Remote Control
- Power Cord (attached to fan head assembly)
- User Manual (this document)

SETUP AND ASSEMBLY

Follow these steps to assemble your pedestal fan:

1. **Attach the Pole to the Base:** Insert the bottom end of the adjustable height pole into the fan base. Secure it by tightening the large plastic nut from underneath the base.
2. **Attach the Fan Head Assembly:** Place the fan head assembly onto the top of the adjustable height pole. Align the screw holes and secure it with the provided screw.
3. **Adjust Height:** Loosen the height adjustment knob on the pole, extend or retract the pole to your desired height, and then tighten the knob securely.
4. **Position the Power Cord:** Ensure the power cord is routed safely and not pinched by any fan components.





Image: A full front view of the assembled Better Homes & Gardens 16" Pedestal Fan, showcasing its complete structure.





Image: A side view of the assembled fan, illustrating the power cord connection and the overall profile.

OPERATING INSTRUCTIONS

Your Better Homes & Gardens Pedestal Fan can be operated using the control panel on the fan stand or the multi-functional remote control.

Control Panel Functions



Image: A close-up view of the fan's control panel, showing the digital display and touch-sensitive buttons for various functions.

- **Power Button (U):** Press to turn the fan On or Off.
- **Speed Button (+/-):** Press to cycle through the 12 speed settings. The current speed will be displayed on the LED screen.
- **Mode Button (M):** Press to select different fan modes (e.g., Normal, Natural, Sleep).
- **Oscillation Button (O):** Press to start or stop the fan's oscillation function, providing widespread cooling.
- **Timer Button (T):** Press to set the programmable timer from 1 to 12 hours. Each press increases the timer by one hour. The fan will automatically turn off after the set time.

Remote Control Functions



Image: A close-up of the multi-functional remote control, showing its buttons and how it conveniently stores in a dedicated slot on the fan stand.

The remote control allows you to operate all fan functions from a distance. Ensure the remote is pointed towards the fan's control panel for optimal response.

- **Power Button:** Turns the fan On/Off.

- **Speed Buttons (+/-):** Adjusts the fan speed from 1 to 12.
- **Mode Button:** Cycles through fan modes.
- **Oscillation Button:** Activates/deactivates oscillation.
- **Timer Button:** Sets the auto-off timer.

Power-Off Memory Function

This fan is equipped with a power-off memory function. When the fan is turned off and then back on, it will resume operation at the last used speed and oscillation setting.

MAINTENANCE

Regular cleaning and proper care will ensure the long life and efficient operation of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. For dust accumulation on the blades or inside the grille, carefully remove the front grille (refer to assembly instructions in reverse) and wipe the blades with a dry or slightly damp cloth. Ensure all parts are completely dry before reassembling and plugging in the fan.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you experience issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Ensure fan is securely plugged into a working outlet. Press the power button on the control panel or remote.
Fan does not oscillate.	Oscillation function not activated.	Press the oscillation button on the control panel or remote.
Remote control not working.	Batteries are dead or incorrectly inserted; remote not pointed at sensor.	Replace batteries (ensure correct polarity). Point the remote directly at the fan's control panel.
Fan makes unusual noise.	Loose parts; fan not on a level surface; obstruction in blades.	Unplug fan and check for loose parts or obstructions. Ensure fan is on a stable, level surface.
Error code "E3" displayed.	Motor obstruction or malfunction.	Unplug the fan immediately. Check for any obstructions around the fan blades or motor. If the issue persists after removing obstructions and restarting, contact customer support. Do not attempt to repair yourself.

SPECIFICATIONS

Feature	Detail
Brand	Better Homes & Gardens
Model Number	BHS23619315319R
Fan Type	Pedestal Fan / Floor Fan
Number of Speeds	12
Control Type	Control Panel, Remote Control
Special Features	Oscillating, 12-Hour Programmable Timer, Power-off Memory Function, Adjustable Height
Power Source	Corded Electric
Product Dimensions (L x W x H)	40.64 x 45.72 x 134.62 cm (16 x 18 x 53 inches)
Item Weight	8 kg (17.6 lbs)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product packaging or visit the official Better Homes & Gardens website. If you require technical support or have questions not covered in this manual, please contact the manufacturer's customer service department.