

## eKids PK-533

# eKids Pokemon Kids Camera Instruction Manual

Model: PK-533

## 1. INTRODUCTION

This manual provides comprehensive instructions for the eKids Pokemon Kids Camera (Model PK-533). This digital camera is designed for children, offering features such as photo capture, video recording, and interactive elements like digital stickers and built-in games. Please read this manual thoroughly before using the product to ensure proper operation and longevity.

### Package Contents:

- eKids Pokemon Kids Camera (Model PK-533)
- 512MB SD Card
- Wrist Strap
- Micro USB Cable



Image: Front and back view of the eKids Pokemon Kids Camera, along with the included 512MB SD card, micro USB cable, and wrist strap.

## 2. SETUP

---

### 2.1 Battery Installation

The camera requires 3 AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the camera.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

### 2.2 SD Card Insertion

The camera comes with a 512MB SD card. To insert it:

1. Locate the SD card slot, typically near the battery compartment or on the side of the camera.
2. Gently push the SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, push the card in again until it clicks, and it will spring out slightly.



Image: Detailed diagram of the camera's components, including the SD card slot and micro USB port.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Powering On/Off

Press and hold the **Power Button** (usually located on the top or side) to turn the camera on or off. The 2-inch full-color screen will illuminate.

#### 3.2 Taking Photos

1. Ensure the camera is in photo mode. Use the navigation buttons (Up/Down/Left/Right) to select the desired mode if necessary.
2. Aim the camera at your subject.
3. Press the **Camera Shutter / OK Button** to capture a photo.



Image: A child holding the eKids Pokemon Kids Camera and looking at the screen while taking a picture.

### 3.3 Recording Videos

1. Switch the camera to video recording mode using the navigation buttons.
2. Press the **Camera Shutter / OK Button** once to start recording. A timer will appear on the screen.
3. Press the **Camera Shutter / OK Button** again to stop recording.





Image: A child riding a bicycle, with a video recording interface overlay indicating 1080p resolution and recording time.

### 3.4 Viewing Media

Use the navigation buttons to scroll through your captured photos and videos on the 2-inch full-color screen. Press the **OK Button** to view a photo or play a video.

### 3.5 Digital Frames and Stickers

The camera includes over 25 built-in photo frames and stickers inspired by Pokemon characters. To apply them:

1. While in photo mode or viewing a captured photo, navigate to the editing options.
2. Select the 'Frames' or 'Stickers' option.
3. Use the navigation buttons to browse and select your desired frame or sticker.
4. Confirm your selection to apply it to the image.



Image: Examples of children's photos enhanced with various Pokemon-themed digital frames and stickers.

### 3.6 Built-in Games

The camera features 5 built-in games for entertainment. To access them:

1. Navigate to the 'Games' menu using the camera's controls.
2. Select the game you wish to play using the navigation buttons and confirm with the **OK Button**.





Image: The camera's screen displaying one of the built-in games, with icons representing the five available games.

### 3.7 Connecting to a Computer

To transfer photos and videos to a computer:

1. Connect the camera to your computer using the included micro USB cable.
2. The camera should appear as a removable storage device on your computer.
3. Locate the photo and video files and copy them to your computer.

## 4. MAINTENANCE

### 4.1 Cleaning

- Wipe the camera's exterior with a soft, dry cloth.
- For the screen, use a microfiber cloth designed for electronics.
- Do not use harsh chemicals or abrasive cleaners.

## 4.2 Storage

When not in use for extended periods, remove the batteries to prevent leakage and store the camera in a cool, dry place away from direct sunlight.

## 4.3 SD Card Management

Regularly transfer photos and videos from the SD card to a computer to free up space and prevent data loss. If the SD card becomes full, you may replace it with another compatible SD memory card (up to 32GB, sold separately).

# 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Batteries are dead or incorrectly installed.	Replace with fresh AA batteries, ensuring correct polarity.
Pictures are blurry.	Insufficient lighting, camera movement, or dirty lens.	Ensure adequate lighting. Hold the camera steady. Clean the camera lens with a soft cloth.
Short battery life.	Low quality batteries or heavy usage.	Use high-quality alkaline AA batteries. Reduce continuous video recording or frequent game playing.
Cannot save photos/videos.	SD card is full or not inserted correctly.	Transfer files to a computer and delete them from the SD card, or replace the SD card. Reinsert the SD card properly.
Camera freezes or is unresponsive.	Software glitch or low battery.	Remove and reinsert batteries to reset the camera. Ensure batteries are fresh.

# 6. SPECIFICATIONS

Feature	Detail
Model Name	Pokemon Digital Camera for Kids
Model Number	PK-533
Brand	eKids
Effective Still Resolution	2 MP
Video Resolution	720p



Feature	Detail
Screen Size	2 Inches
Display Type	Color LCD
Memory Storage Capacity	512 MB (SD Card included)
Expandable Memory	Yes, via SD card slot
Battery Type	3 AA batteries (not included)
Connectivity Technology	USB
Item Weight	4.97 ounces
Dimensions (W x D x H)	4.49" x 1.72" x 3.42"
Supported File Format	JPEG (images), MP4 (video)
Built-in Games	5

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

This product comes with a Limited Warranty. Please refer to the warranty card included in the original packaging for specific terms and conditions, or visit the eKids official website for details.





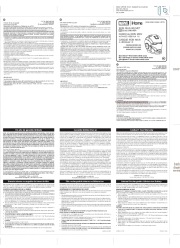
### 7.2 Customer Support

For further assistance, technical support, or inquiries regarding your eKids Pokemon Kids Camera, please visit the official eKids brand store or contact their customer service department. Contact information can typically be found on the product packaging or the eKids website.

[Visit the eKids Brand Store](#)

### Related Documents - PK-533

	<p><a href="#">Pokémon Walkie Talkies PK-207.EXv24 User Guide</a></p> <p>User guide for the Pokémon Walkie Talkies PK-207.EXv24, featuring static-free extended range and an easy push-to-talk button. Includes setup, battery installation, and FCC compliance information.</p>
--	--

	<p><a href="#"><u>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</u></a></p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p><a href="#"><u>eKids B50 Bluetooth Headphones User Manual and Guide</u></a></p> <p>Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.</p>
	<p><a href="#"><u>Shopkins Sing-Along Boombox SN-115 User Manual and Instructions</u></a></p> <p>Official user manual and instructions for the eKids Shopkins Sing-Along Boombox (Model SN-115), covering setup, operation, troubleshooting, and warranty information.</p>
	<p><a href="#"><u>eKids DE-072 MP3 Microphone User Manual and Instructions</u></a></p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>
	<p><a href="#"><u>eKids Iron Man Helmet 1:2 Scale Speaker User Manual and Safety Guide</u></a></p> <p>User manual and safety instructions for the eKids Iron Man Helmet 1:2 Scale Speaker, model Vi-B72IM. Learn how to charge, connect via Bluetooth, use speakerphone, and find important safety and warranty information.</p>