

Xilecam X2

Xilecam Action Camera X2 User Manual

Model: X200

1. INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your Xilecam Action Camera X2. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. The Xilecam X2 is designed for capturing high-definition video and photos in various environments, including underwater.

2. PRODUCT OVERVIEW

2.1 Key Features

- **High Resolution Video:** Captures Full HD 1080P video at 30 frames per second.
- **Waterproof Capability:** Operates safely up to 40 meters (131 feet) underwater with the included waterproof case.
- **Extended Battery Life:** Includes two 900mAh rechargeable batteries for prolonged use.
- **Versatile Use:** Suitable for various activities such as diving, surfing, cycling, and more, with multi-function accessories.
- **Compact Design:** Features a 2-inch HD screen for easy viewing and playback.

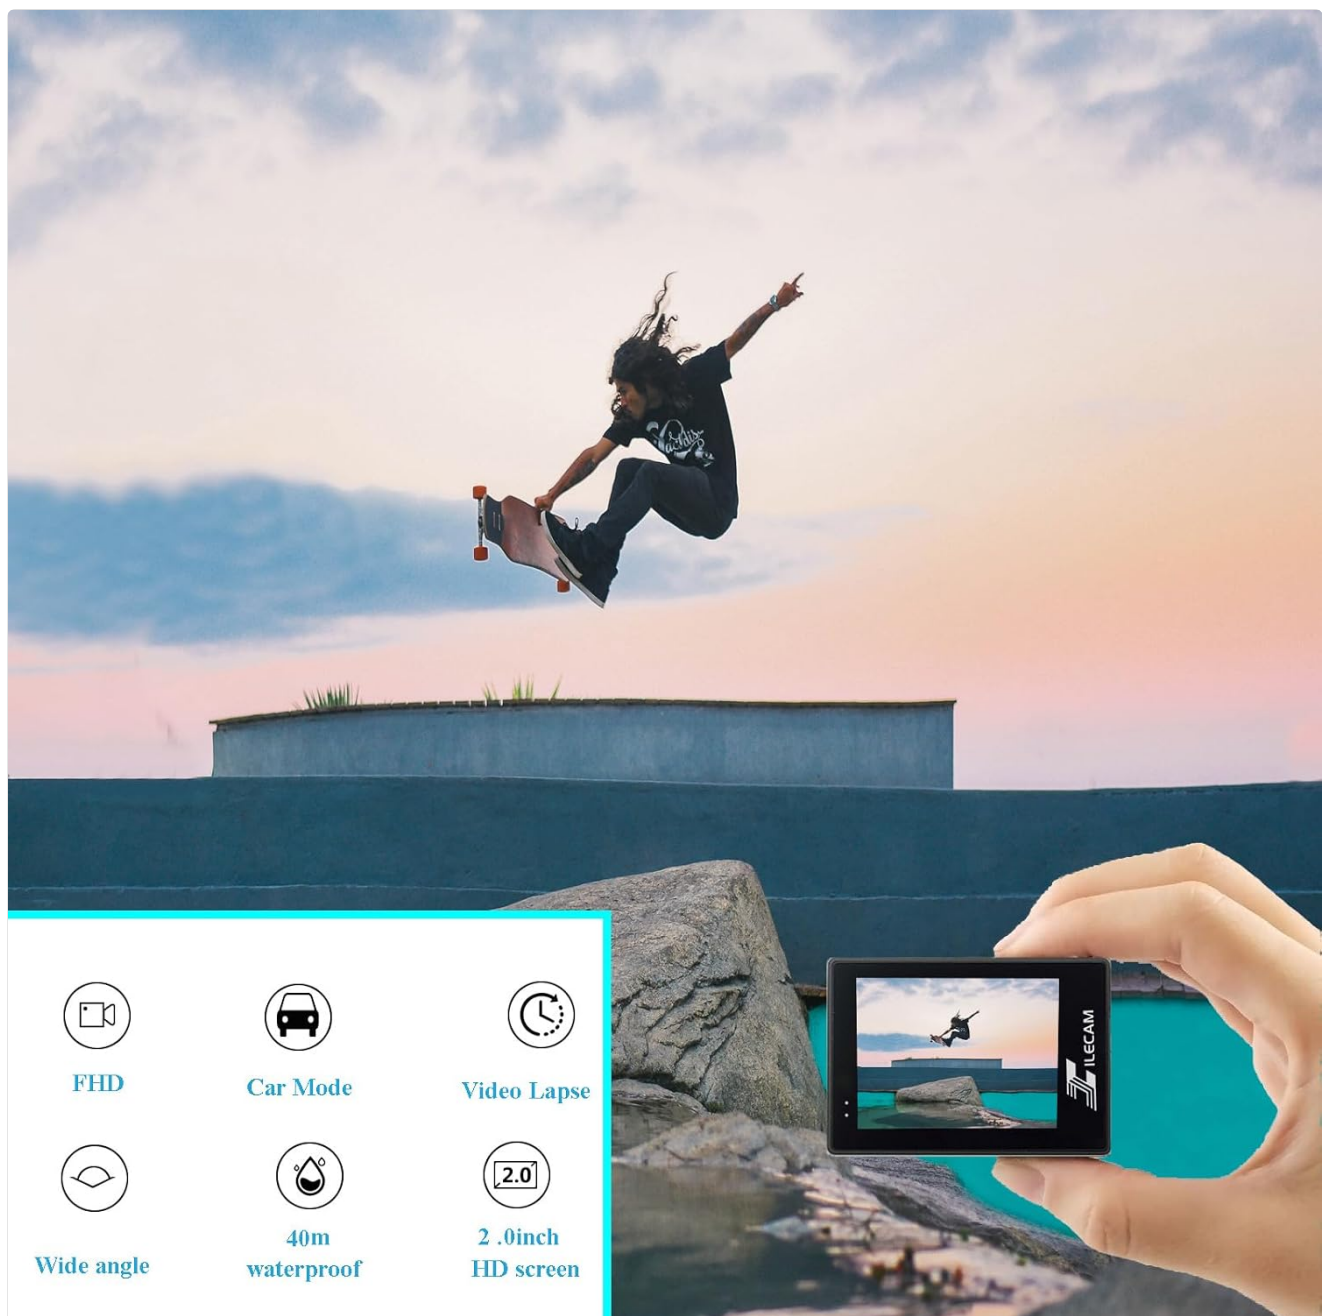


Image 2.1: Overview of Xilecam X2 features and display.

2.2 Package Contents

The Xilecam Action Camera X2 package includes the following items:

- Xilecam Action Camera X2 Unit
- Waterproof Case
- Two (2) 900mAh Rechargeable Batteries
- USB Charging Cable
- Various Mounts and Straps (e.g., helmet mount, bicycle mount, adhesive pads)
- Frame Mount
- User Manual (this document)



Image 2.2: Complete set of Xilecam X2 camera and accessories.

3. SETUP

3.1 Battery Installation and Charging

The camera comes with two 900mAh rechargeable batteries. To install a battery, open the battery compartment cover on the bottom of the camera and insert the battery according to the polarity indicators. To charge, connect the camera to a USB power source using the provided USB cable. The charging indicator light will illuminate during charging and turn off when fully charged.

Super long battery life

Two large-capacity batteries,
Let you have no anxiety about battery life
let you play happily



Image 3.1: Xilecam X2 highlighting battery life.

3.2 Memory Card Installation

A Micro SD card (not included) is required for storing photos and videos. The camera supports Micro SD cards with capacities between 8GB and 32GB. **Do not use memory cards with 64GB or higher capacity**, as they are not supported by this device. Insert the Micro SD card into the designated slot until it clicks into place.

3.3 Using the Waterproof Case

For underwater activities or protection against dust and impact, place the camera inside the waterproof case. Ensure the case is properly sealed before submerging. The waterproof case allows the camera to be used safely up to a depth of 40 meters (131 feet).



Image 3.2: Xilecam X2 in waterproof housing during a dive.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on the camera, press and hold the Power/Mode button located on the front or top of the camera. To power off, press and hold the same button again.

4.2 Mode Selection

Press the Power/Mode button briefly to cycle through different modes such as Video Recording, Photo Capture, Playback, and Settings. The current mode will be displayed on the 2-inch HD screen.

4.3 Video Recording

In Video Recording mode, press the OK/Shutter button to start recording. A red indicator light will typically blink, and a timer will appear on the screen. Press the OK/Shutter button again to stop recording.

4.4 Photo Capture

In Photo Capture mode, press the OK/Shutter button to take a photo. The screen may briefly flash to indicate a photo has been taken.

4.5 Menu Navigation

Use the Up/Down buttons (if available) to navigate through menu options in Settings mode. Press the OK/Shutter button to select an option.

5. MAINTENANCE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth to clean the camera lens and screen. Avoid abrasive materials or harsh chemicals.
- **Waterproof Case Care:** After each use in water, rinse the waterproof case with fresh water and allow it to air dry. Inspect the O-ring seal for any debris or damage before each use to ensure a watertight seal.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose batteries to extreme temperatures. Charge batteries fully before extended storage and periodically during storage to maintain their health.
- **Storage:** Store the camera and accessories in a clean, dry environment away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Camera does not power on	Low or depleted battery; battery not installed correctly.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Memory card error	Incompatible card; card not formatted; card full or damaged.	Use a Micro SD card between 8GB and 32GB. Format the card in the camera's settings. Replace damaged cards.
Waterproof case leaks	Improperly sealed; O-ring dirty or damaged.	Ensure the case is securely latched. Clean the O-ring and check for any cracks or debris. Perform a dry test before submerging with the camera.
Video playback issues	Incompatible video player; corrupted file.	Try playing videos with VLC Media Player. If files are corrupted, re-record.
Camera freezes	Software glitch; full memory card.	Remove and reinsert the battery to reset. Ensure memory card has sufficient space.

7. SPECIFICATIONS

Feature	Detail
Brand	Xilecam
Model Number	X200
Item Weight	1.59 ounces

Feature	Detail
Product Dimensions	3 x 2 x 1 inches
Batteries	2 x 900mAh (included)
Special Features	Speakers, Timer
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p
Maximum Focal Length	22 Millimeters
Maximum Aperture	2 f
Flash Memory Type	Micro SD (8-32GB recommended)
Video Capture Format	AVI
Supported Audio Format	AAC
Screen Size	2 Inches
Connectivity Technology	USB
Waterproof Depth	40m / 131ft (with waterproof case)



Image 7.1: Physical dimensions of the Xilecam X2 camera.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 Xilecam. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B52R3SMR>

More documents and user manuals: **<https://manuals.plus/>**