

## LONANDY HAC-001

# LONANDY Switch Kickstand Replacement & Thumb Grips

## INSTRUCTION MANUAL

[Overview](#)

[Contents](#)

[Installation](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

### 1. Product Overview

---

The LONANDY Switch Kickstand Replacement kit is designed to restore or enhance the functionality of your Nintendo Switch console. This package includes durable replacement kickstands and silicone thumb grips, providing improved stability for tabletop gaming and enhanced comfort and protection for your Joy-Con analog sticks. This manual provides detailed instructions for installation, operation, and maintenance to ensure optimal performance and longevity of your product.

### 2. Package Contents

---

Please verify that all items listed below are included in your package:

- **Switch Kickstand:** 2 units (one blue, one red)
- **Thumbstick Caps:** 4 units (various colors)
- **Plastic Storage Box:** 1 unit



An overview of the LONANDY Switch Kickstand Replacement kit, displaying two kickstands in blue and red, along with four silicone thumb grips in various colors.

### 3. Installation Guide


---

#### 3.1. Kickstand Installation

Replacing the kickstand on your Nintendo Switch is a straightforward process that does not require any special tools. Follow these steps carefully:

1. Locate the existing kickstand slot on the back of your Nintendo Switch console.
2. If a damaged kickstand is present, gently remove it by pulling it away from the console until it detaches from its hinges.
3. Take one of the new LONANDY replacement kickstands. Observe the two small convex points on the metal clip at the top of the kickstand.
4. Align these convex points with the circular recesses located at the upper end of the kickstand's card slot on the console.
5. Gently but firmly press the kickstand into place until you hear a distinct click, indicating that the metal clip has securely engaged with the recesses.
6. Test the kickstand by opening and closing it to ensure it moves smoothly and holds its position securely.

60mm

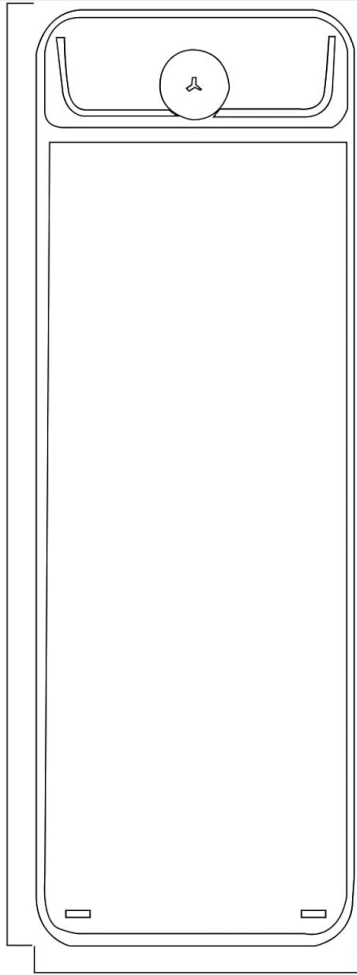

20mm



A close-up image demonstrating the simple installation process of the replacement kickstand onto the back of the Nintendo Switch console.



**Anti-slip design**



**Stainless steel**



**Perfect fit**



Detailed view highlighting the anti-slip texture of the kickstand, the durable stainless steel hinge mechanism, and how the kickstand seamlessly integrates with the Nintendo Switch console.

### **3.2. Thumb Grip Installation**

The silicone thumb grips are designed to easily slide onto the analog sticks of your Joy-Con controllers, providing added comfort and protection.

1. Ensure your Joy-Con controllers are clean and free of dust or debris.
2. Carefully align the thumb grip with the top of the analog stick.
3. Gently push the thumb grip down onto the analog stick, ensuring it fully covers the top and sides of the stick.
4. Adjust the grip to ensure it is centered and does not interfere with the movement of the analog stick.



Image displaying the silicone thumb grips installed on the analog sticks of the Nintendo Switch Joy-Con controllers, enhancing grip and protection.

## 4. Operating Instructions

---

### 4.1. Using the Kickstand

The kickstand allows you to prop up your Nintendo Switch console on a flat surface for tabletop mode, enabling hands-free gaming or media viewing.

- To deploy the kickstand, gently pull the kickstand outwards from the back of the console until it locks into its open position.
- Place the console on a stable, flat surface. Ensure the kickstand is fully extended and the console is balanced to prevent tipping.
- To retract the kickstand, gently push it back into its slot on the console until it clicks securely into place.



The Nintendo Switch console positioned upright using the installed kickstand, demonstrating its stable tabletop mode functionality.

#### 4.2. Benefits of Thumb Grips

The included thumb grips provide several benefits during gameplay:

- **Enhanced Grip:** The silicone material provides a better grip, reducing slippage during intense gaming sessions.
- **Increased Comfort:** Adds a soft, comfortable layer to the analog sticks, reducing finger fatigue during extended play.
- **Protection:** Shields the original analog sticks from wear and tear, scratches, and corrosion, prolonging their lifespan.

#### 5. Care and Maintenance

---

Proper care will extend the life of your LONANDY accessories:

- **Cleaning:** To clean the kickstand and thumb grips, wipe them gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the plastic and silicone.
- **Storage:** When not in use, store the kickstands and thumb grips in the provided plastic box or a clean, dry place away from direct sunlight and extreme temperatures.

- **Handling:** While the kickstands are designed for durability, avoid excessive force or bending to prevent damage to the hinge mechanism.

## HIGH-QUALITY PLASTIC WITH EXCELLENT TOUGHNESS



Close-up view of the blue and red kickstands, emphasizing their high-quality plastic construction designed for excellent toughness and durability.

### 6. Troubleshooting

If you encounter any issues with your LONANDY Switch Kickstand Replacement or Thumb Grips, please refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Kickstand does not snap into place securely.	Incorrect alignment during installation or debris in the slot.	Ensure the convex points on the kickstand's metal clip are perfectly aligned with the circular recesses on the console. Clean the slot if necessary.
Kickstand feels loose or wobbly after installation.	Not fully engaged or damaged hinge.	Press firmly until a click is heard. If still loose, inspect the hinge for any visible damage.
Thumb grips slide off easily or feel too loose.	Not fully seated on the analog stick.	Ensure the thumb grip is pushed all the way down and centered on the analog stick.

## 7. Product Specifications

Key specifications for the LONANDY Switch Kickstand Replacement:

Feature	Detail
Model Number	HAC-001
Compatible Devices	Nintendo Switch Gaming Consoles
Material (Kickstand)	Environmentally friendly hard plastic with metal buckle clip
Material (Thumb Grips)	High-quality silicone
Package Dimensions	2.64 x 1.93 x 0.67 inches
Item Weight	0.634 ounces
Color	Blue, Red (Kickstands); Various (Thumb Grips)



Technical diagram illustrating the dimensions of the replacement kickstand, showing its length of 60mm and width of 20mm.

## 8. Warranty and Support

LONANDY is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or assistance with your product, please contact our customer support team. We offer comprehensive and high-quality after-sales service 24/7.

For more information about LONANDY products and support, please visit the official LONANDY Store: [LONANDY Official Store on Amazon](#).