

[Manuals.plus](#) /

› [WNZQK](#) /

› WNZQK 6-Piece Laser Pointer & LED Flashlight Keychain User Manual

WNZQK 1919

WNZQK 6-Piece Laser Pointer & LED Flashlight Keychain User Manual

Model: 1919

1. INTRODUCTION

The WNZQK Laser Pointer and LED Flashlight Keychain is a versatile tool designed for interactive play with pets and as a convenient mini flashlight. This set includes six units, each featuring both a laser pointer and an LED flashlight, making it suitable for various indoor and outdoor activities. The compact keychain design ensures portability.



Image 1.1: The WNZQK 6-piece laser pointer and LED flashlight keychain set.

2. SETUP AND BATTERY INSTALLATION

Before initial use, it is essential to install or activate the batteries. The device requires 3 AG13 button cell batteries. A small plastic insulating disc is often placed between the batteries during shipping to prevent discharge. This disc must be removed for the device to function.

1. **Unscrew the end cap:** Locate the end cap of the keychain, typically where the keyring is attached. Carefully unscrew this cap. It may be tightly fitted.
2. **Remove the plastic insulator:** Once the cap is removed, you will see the batteries. There should be a small, often reddish or clear, plastic disc. Remove and discard this disc.
3. **Reassemble:** Ensure the batteries are correctly oriented (positive side up, if indicated) and screw the end cap back on securely.



Image 2.1: Disassembled view of the laser pointer, showing the battery compartment.



Image 2.2: Diagram showing battery placement and switch functions.

Video 2.1: This video demonstrates the process of removing the battery protector from the WNZQK laser pointer keychain to ensure proper operation.

3. OPERATING INSTRUCTIONS

The WNZQK keychain features two distinct functions: a laser pointer and an LED flashlight, each activated by its own button.

- **Laser Pointer Function:** Press the button labeled 'Laser button' or 'First Switch - Laser Pen' (refer to Image 2.2 and 3.1) to activate the red laser dot. Release the button to turn off the laser.
- **LED Flashlight Function:** Press the button labeled 'LED flashlight button' or 'Second Switch - LED Torch' (refer to Image 2.2 and 3.1) to turn on the white LED light. Release the button to turn off the flashlight.



Image 3.1: Close-up view of the laser pointer, indicating the laser and LED flashlight buttons.



Image 3.2: A cat engaging with the laser pointer.

Video 3.1: This video illustrates the WNZQK laser pointer keychain in action, showing a cat interacting with the laser dot.

4. SAFETY INFORMATION

This product emits a laser beam. Please observe the following safety precautions:

- **Avoid Direct Eye Exposure:** Never point the laser beam directly into the eyes of humans or animals. Direct exposure can cause temporary or permanent eye damage.
- **Supervise Pet Play:** Always supervise your pets when using the laser pointer to ensure they do not look directly into the beam or become frustrated by the inability to 'catch' the dot.
- **Keep Out of Reach of Children:** This product is not a toy for children. Keep it stored in a safe place away from children.
- **Do Not Modify:** Do not attempt to modify or disassemble the device beyond battery replacement. Modifications can lead to unsafe operation and void any potential warranty.

5. MAINTENANCE

To ensure the longevity and proper functioning of your WNZQK laser pointer keychain, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the keychain in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** When the laser or LED light appears dim, it is time to replace the batteries. Use three new AG13 button cell batteries, ensuring correct polarity during installation.

6. TROUBLESHOOTING

If you encounter issues with your WNZQK laser pointer keychain, refer to the following common solutions:

- **Device does not turn on:**
 - Check if the plastic insulating disc has been removed from the battery compartment (refer to Section 2: Setup and Battery Installation).
 - Ensure batteries are inserted with correct polarity.
 - Replace old batteries with new AG13 button cells.
- **Light is dim or flickers:**
 - The batteries may be low. Replace them with new AG13 button cells.

7. SPECIFICATIONS

Item Model Number	1919
Material Type	Metal
Red Wavelength	650NM
Battery Type	3 x AG13 Button Battery
Item Weight	0.05 Kilograms (approx. 1.76 oz)
Package Dimensions	6.06 x 3.39 x 0.51 inches

8. WARRANTY AND SUPPORT

For any questions or concerns regarding your WNZQK laser pointer keychain, please contact our customer support. We are committed to providing assistance and will respond to your inquiries within 12 hours.