

BUCK TAPE AS TOUGH AS A BUCK AT&T NOW REMOTE RC82V / R35602

## DirecTV AT&T TV Now RC82V Remote Control User Manual

Model: AT&T NOW REMOTE RC82V / R35602

### INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your DirecTV AT&T TV Now RC82V 2nd Generation Gemini Stream Voice Recognition Replacement Remote Control. This remote is designed for compatibility with C71KW-200 and C71KW-400 Osprey Receiver Set-Top Boxes.





Image: Front view of the RC82V remote control.

## SETUP

### Battery Installation

The RC82V remote control requires 2 AA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.



Image: Front and back view of the RC82V remote, illustrating the battery compartment location.

## Initial Pairing with Receiver

The RC82V remote control supports both Infrared (IR) and Radio Frequency (RF) modes. For advanced features like voice control and operation without direct line of sight, RF pairing is required.

1. Ensure your DirecTV Stream receiver (C71KW-200 or C71KW-400) is powered on.
2. Point the remote control towards the receiver.

3. Press and hold the **FAST FORWARD** and **REWIND** buttons simultaneously for a few seconds until the LED light on the remote blinks.
4. Follow any on-screen prompts on your TV to complete the pairing process.
5. Once paired, the remote will operate in RF mode, utilizing two-way communication and Bluetooth for enhanced functionality.

For basic functions, the remote can operate in Infrared (IR) mode without pairing, requiring a direct line of sight to the device.

## OPERATING INSTRUCTIONS

### Basic Navigation

The remote features a directional pad for intuitive menu navigation.

- **Directional Pad (Up, Down, Left, Right):** Use these buttons to move through menus and select options on your screen.
- **OK Button:** Press to confirm a selection or enter a menu item.
- **BACK Button:** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu and returns to the previously viewed channel or content.



Image: User interacting with the RC82V remote control to navigate the DirecTV interface.

## Voice Recognition

The RC82V remote supports voice commands for easy content search and control. This feature requires the remote to be paired in RF mode.

- **Microphone Button:** Press and hold the microphone button (located below the directional pad) to activate voice search. Speak your command clearly into the remote.
- Release the button when you have finished speaking.
- Examples of voice commands include: "Turn on TV", "Lower the Volume", "Previous Menu", or searching for specific shows or movies.



Image: Illustration of the voice recognition feature on the RC82V remote.

## Key Functions

- **ON/OFF:** Turns both the TV and AT&T TV device on or off.
- **INPUT:** Selects the equipment connected to your TV.
- **GUIDE:** Displays the program guide screen.
- **HOME:** Displays the home screen.
- **LIST:** Displays your DVR recordings or library.

- **RECORD:** Records content currently playing or highlighted in the on-screen guide.
- **VOL UP/DOWN:** Increases or decreases the volume level.
- **MUTE:** Mutes the sound.
- **CH UP/DOWN:** Changes the channel up or down.
- **PREV:** Tunes to the previous channel.
- **REWIND/PLAY/PAUSE/FAST-FORWARD:** Standard media playback controls.
- **DASH (-):** Used when unpairing the remote.
- **DIAMOND (◊):** Opens the APPS menu.
- **Numeric Keypad (0-9):** For direct channel entry.



Image: Labeled diagram of the RC82V remote control buttons and their functions.

## MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the receiver/TV, especially if operating in IR mode.
- Re-pair the remote with your receiver (refer to "Initial Pairing with Receiver" section).

- **Voice commands not working:**

- Confirm the remote is successfully paired in RF mode.
- Ensure you are pressing and holding the microphone button while speaking.
- Speak clearly and at a normal volume.

- **Remote feels sticky/tacky:**

- This can sometimes occur due to material degradation. Clean the surface with a mild, non-abrasive cleaner and a soft cloth. Avoid harsh chemicals.

## SPECIFICATIONS

---

Feature	Detail
Model Number	AT&T NOW REMOTE RC82V / R35602
Compatible Devices	DirecTV Stream Receiver (C71KW-200, C71KW-400), Home Theater, Set Top Box, Stereo System, Television
Connectivity	Infrared (IR), Radio Frequency (RF), Bluetooth (for C71KW)
Special Features	Backlit, Directv Gemini Remote, Ergonomic Design, Voice Search
Power Source	2 AA Batteries (not included)
Color	Black
Product Dimensions	9 x 2 x 1 inches
Item Weight	3.06 ounces
Max Supported Devices	5
Manufacturer	Tradex Global USA

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your original DirecTV Stream receiver or contact the manufacturer, Tradex Global USA, directly. This remote is designed as an authentic replacement and should integrate seamlessly with compatible DirecTV Stream systems.

For additional assistance, you may also visit the [BUCK TAPE AS TOUGH AS A BUCK Store on Amazon](#)

© 2025 BUCK TAPE AS TOUGH AS A BUCK. All rights reserved.