

[Manuals.plus](#) /

› [AKIRES](#) /

› AKIRES Tower Fan User Manual

AKIRES B0B55Z4SRG

AKIRES Tower Fan User Manual

Model: B0B55Z4SRG

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Keep children and pets away from the fan during operation.
- Ensure the fan is placed on a stable, level surface.
- Do not block air inlets or outlets.
- Use only as described in this manual.

PRODUCT OVERVIEW

The AKIRES Tower Fan is an evaporative air cooler designed to provide cooling and air circulation for various indoor spaces. It features a 100° oscillation, adjustable shutters, a large water tank, multiple speed and mode settings, and convenient remote control operation.



Image: The AKIRES Tower Fan, showcasing its sleek design, the remote control, and the included ice boxes. The image highlights the 4.23-gallon water tank capacity.

Key Components:

- Control Panel (LED Display)
- Air Outlet (with adjustable shutters)
- Water Tank (4.2-gallon capacity, dual top and bottom access)
- Air Inlet / Filter
- Remote Control
- Casters (4 x 360° wheels)
- Built-in Carrying Handle
- Ice Boxes (2 included)

Product Details



Image: A detailed diagram illustrating the various components of the AKIRES Tower Fan, including the remote control, smart touch control panel, 4.2-gallon water tank, manually adjustable wind direction, filter, water level indicator, built-in handle, and 4x 360° rollers.

SETUP

1. **Unpacking:** Carefully remove the unit from its packaging. Retain packaging for future storage or transport.
2. **Wheel Installation:** Attach the four 360° wheels to the base of the unit. Ensure they are securely fastened for stability and easy movement.
3. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the unit for proper airflow. Avoid placing it directly against walls or furniture that might obstruct air intake or output.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the voltage matches the specifications of the unit.

No installation needed

Plug in and enjoy the cool breeze



Image: The AKIRES Tower Fan positioned in a room, plugged into a wall outlet, illustrating that no complex installation or window venting is required for operation.

OPERATING INSTRUCTIONS

Control Panel and Remote Control:

The fan can be operated using either the touch control panel on top of the unit or the included remote control. Both offer similar functionalities.

Adding Water and Ice Boxes:

1. **Fill Water Tank:** The unit features a 4.2-gallon water tank with dual top and bottom access. For convenience, water can be added from the top without bending over. Fill the tank with clean water. Do not exceed the maximum fill line.
2. **Prepare Ice Boxes:** Place the two included ice boxes in a freezer until completely frozen.

3. **Insert Ice Boxes:** Once frozen, place the ice boxes into the designated compartment within the water tank. This enhances the cooling effect.



Image: A visual guide demonstrating the process of preparing and inserting the ice boxes and filling the water tank for enhanced cooling performance.

Basic Operation:

- **Power On/Off:** Press the **Power** button to turn the unit on or off.
- **Oscillation:** Press the **Swing** button to activate the 100° oscillation feature, distributing air across a wider area. Press again to stop oscillation.
- **Speed Adjustment:** Press the **Speed** button to cycle through 3 wind speeds: Low, Medium, and High.
- **Mode Selection:** Press the **Mode** button to select from 3 wind modes: Normal, Natural, and Sleep.
- **Cooling Mode:** Press the **Cooling** button to activate the evaporative cooling function. Ensure the water tank is filled.
- **Timer:** Press the **Timer** button to set the operating time up to 12 hours. Each press increases the timer setting.
- **Adjustable Shutters:** Manually adjust the vertical angle of the air outlet shutters up or down by 95° to

direct airflow as desired.

Energy-Saving & Healthy Choice

Increase air flow, bring you fresh and healthy air



*Freon is harmful
to the environment*



12H Timer

130W



Image: The AKIRES Tower Fan demonstrating its three wind modes (Normal, Natural, Sleep) and three wind speeds (Low, Medium, High), illustrating how users can customize their airflow experience.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your AKIRES Tower Fan.

Cleaning the Exterior:

- Always unplug the unit before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal components.

Cleaning the Water Tank:

- Empty the water tank regularly, especially if the unit will not be used for an extended period.
- Clean the water tank with a mild detergent and rinse thoroughly with clean water.
- Allow the tank to air dry completely before reassembling or storing.

Filter Cleaning:

- The unit includes a filter to prevent dust from entering. Periodically remove and clean the filter.
- Rinse the filter under running water. For stubborn dirt, use a soft brush.
- Ensure the filter is completely dry before placing it back into the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; Power cord not securely plugged in.	Check if the unit is plugged into a working outlet. Ensure the power cord is firmly connected.
Weak airflow.	Air inlets/outlets blocked; Filter is dirty.	Ensure nothing is obstructing the air inlets or outlets. Clean the air filter as per maintenance instructions.
No cooling effect.	Water tank is empty; Cooling mode not activated; Ice boxes not frozen/inserted.	Fill the water tank. Press the "Cooling" button. Ensure ice boxes are frozen and placed in the tank.
Remote control not working.	Batteries are dead or incorrectly inserted; Obstruction between remote and unit.	Replace batteries with new ones, ensuring correct polarity. Remove any obstructions. Point remote directly at the unit's sensor.

SPECIFICATIONS

- **Model:** B0B55Z4SRG
- **Brand:** AKIRES
- **Product Dimensions:** 32.51 x 32 x 78.99 cm (12.6 x 12.8 x 31.1 inches)
- **Color:** White
- **Power Source:** Electric
- **Wattage:** 65 watts

- **Water Tank Capacity:** 4.2 Gallons
- **Oscillation:** 100°
- **Shutter Adjustment:** 95° (manual up/down)
- **Speeds:** 3 (High/Medium/Low)
- **Modes:** 3 (Normal/Natural/Sleep)
- **Timer:** Up to 12 hours
- **Control Type:** Remote Control, Digital Touch Panel
- **Included Components:** Air cooler unit, Remote Control, 4 x 360° wheels, 2 x Ice boxes, User Manual



Image: The AKIRES Tower Fan highlighting its energy efficiency with a 130W power consumption, contrasting it with a typical 1200W air conditioner and emphasizing its environmental benefits.

WARRANTY AND SUPPORT

AKIRES provides customers with **2 years of product support** for this tower fan.

If you encounter any problems or have questions regarding your AKIRES Tower Fan, please contact our customer support team. We aim to reply to all inquiries within 24 hours.

For support, please refer to the contact information provided on the product packaging or the official AKIRES website.