

manuals.plus /

- > [LG](#) /
- > [LG 32LQ636BPSA 32-inch WebOS Smart LED HD TV User Manual](#)

## LG 32LQ636BPSA

# LG 32LQ636BPSA 32-inch WebOS Smart LED HD TV User Manual

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your LG 32LQ636BPSA 32-inch WebOS Smart LED HD TV. Please read it thoroughly before operating the television and retain it for future reference. This guide covers installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Details shown on product images may vary by region, country, or model.

Figure 1.1: Front angle view of the LG 32LQ636BPSA 32-inch WebOS Smart LED HD TV.

## 2. SAFETY INFORMATION

Always follow these basic safety precautions to reduce the risk of fire, electric shock, or injury:

- **Power Source:** Connect the TV only to an AC power supply as indicated on the label.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Children:** Supervise children to prevent them from climbing on or playing with the TV.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

Verify that all items are present in the box:

- LG 32LQ636BPSA 32-inch WebOS Smart LED HD TV
- Magic Remote Control with Batteries
- Power Cord
- Stand Base and Screws
- User Manual (this document)
- Warranty Card

## 4. PHYSICAL OVERVIEW

Familiarize yourself with the TV's rear panel and connection ports.



Figure 4.1: Rear panel connections of the LG 32LQ636BPSA TV.

### Rear Panel Connections:

- **HDMI Ports:** For connecting high-definition devices such as Blu-ray players, gaming consoles, or set-top boxes.
- **USB Ports:** For connecting USB storage devices to play media files or for software updates.
- **Ethernet (LAN) Port:** For a wired internet connection.
- **Antenna/Cable Input:** For connecting an antenna or cable TV signal.
- **Optical Digital Audio Out:** For connecting to an external audio system or soundbar.
- **Power Input:** For connecting the power cord.

## 5. SETUP

### 5.1 Stand Assembly

If you are not wall-mounting the TV, attach the stand base as follows:

1. Carefully place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the stand base with the mounting holes on the bottom of the TV.
3. Secure the stand base using the provided screws. Ensure all screws are tightened firmly.



Figure 5.1: TV with stand assembly.

## 5.2 Wall Mounting (Optional)

For wall mounting, use a VESA-compliant wall mount kit (sold separately). Refer to the wall mount kit's instructions for proper installation. Ensure the wall can support the weight of the TV and the mount.

## 5.3 Connecting Devices

- **Power:** Connect the power cord to the TV's power input and then to a wall outlet.
- **HDMI:** Connect HDMI cables from your external devices (e.g., cable box, game console) to the HDMI ports on the TV.
- **USB:** Insert USB storage devices into the USB ports for media playback.
- **Network:** For a wired internet connection, connect an Ethernet cable from your router to the TV's LAN port. For wireless, you will configure Wi-Fi during initial setup.

# 6. OPERATING THE TV

## 6.1 Power On/Off

Press the Power button on the Magic Remote or on the TV itself to turn the TV on or off.

## 6.2 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process. This includes:

- Language selection

- Country/Region selection
- Network connection (Wi-Fi or wired)
- Channel tuning (if connecting an antenna/cable)
- Accepting terms and conditions

## 6.3 Using the Magic Remote

The LG Magic Remote allows for intuitive control using pointing, clicking, scrolling, and voice commands. Point the remote at the TV and move it to control the on-screen pointer. Use the scroll wheel for navigation and the voice button for voice commands.

## 6.4 WebOS Smart Features

Your TV runs on the WebOS platform, providing access to a variety of smart features:

- **Launcher Bar:** Access your favorite apps, inputs, and settings quickly from the customizable launcher bar at the bottom of the screen.
- **App Store:** Download and install additional applications from the LG Content Store.
- **Web Browser:** Browse the internet directly on your TV.
- **AI Sound:** The TV features AI Sound technology for optimized audio based on content.
- **Game Mode:** Optimize settings for gaming to reduce input lag.

## 6.5 Picture and Sound Settings

Access the settings menu to adjust picture modes (e.g., Vivid, Standard, Cinema), brightness, contrast, color, and sound modes (e.g., Standard, Clear Voice, Music).

# 7. MAINTENANCE

## 7.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly on the screen).
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth.
- **Remote Control:** Clean the remote control with a soft, dry cloth.

Always unplug the TV from the power outlet before cleaning.

## 7.2 Software Updates

Periodically check for software updates through the TV's settings menu to ensure optimal performance and access to the latest features. Updates can be performed via Wi-Fi or Ethernet.

# 8. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely connected to the TV and the wall outlet. Check if the outlet is working by plugging in another device.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly. Try a different HDMI cable.
No sound, but picture is present	Check the volume level and mute status. Verify audio output settings in the TV menu. Ensure external audio systems are connected and functioning.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV. Re-pair the Magic Remote if necessary (refer to TV's on-screen guide).
Cannot connect to Wi-Fi	Check your router and modem. Ensure the Wi-Fi password is entered correctly. Try restarting the TV and your router.

If the problem persists after trying these solutions, contact LG customer support.

## 9. SPECIFICATIONS

Technical specifications for the LG 32LQ636BPSA TV:

Feature	Specification
Brand	LG
Model Name	32LQ636BPSA
Model Year	2022
Screen Size	32 Inches (81.28 cm)
Display Technology	LED
Screen Resolution	1366 x 768 (HD)
Operating System	WebOS
Special Features	AI Sound, Game Mode
Connectivity Technology	Ethernet, Wi-Fi
Hardware Interface	USB, HDMI
Tuner Technology	DVB-T, DVB-T2
Audio Output Mode	Surround
Speaker Surround Sound Channel Configuration	5.1
Power Source	AC
Mounting Type	Wall Mount, Table Mount

Feature	Specification
Product Dimensions (LxWxH)	187.2 x 37.8 x 121.2 cm
Item Weight	9 kg
Viewing Angle	178 Degrees
Supported Internet Services	Browser

## 10. WARRANTY AND SUPPORT

Your LG 32LQ636BPSA TV comes with a brand warranty. To avail of warranty services, please retain your purchase invoice. For detailed warranty terms and conditions, refer to the warranty card included in your package or visit the official LG India website.

For technical support, service requests, or further assistance, please contact LG customer support through their official channels. You can often find contact information on the LG website or in the warranty documentation.