

Nyeekey 0983

Nyeekey 3-in-1 Toddler Slide and Basketball Hoop Instruction Manual

Model: 0983 | Brand: Nyeekey

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Nyeekey 3-in-1 Toddler Slide. Please read all instructions carefully before use to ensure the safety of your child and the longevity of the product. Retain this manual for future reference.

Safety Note: Adult supervision is required at all times when children are using the slide.

PRODUCT FEATURES

- **3-in-1 Design:** Includes a slide, climbing stairs, and a basketball hoop for varied play.
- **Durable Construction:** Made from non-toxic Polyethylene and Polypropylene plastic.
- **Safety-Focused Design:** Features rounded corners, smooth surfaces, raised handrails, and a bottom buffer zone for enhanced safety.
- **Non-Slip Steps:** Textured steps designed to prevent slipping during climbing.
- **Foldable Design:** Allows for easy storage and portability, suitable for both indoor and outdoor use.
- **Easy Assembly:** Tool-free assembly can be completed in minutes by one adult.



Image: Key features of the Nyeekoy 3-in-1 Toddler Slide, including the basketball hoop, safety handrail, slide, and non-slip steps.



Image: A child demonstrating the multi-functional aspects of the slide, including sliding, climbing, and shooting hoops.

PACKAGE CONTENTS

Please ensure all components are present and undamaged before proceeding with assembly. If any parts are missing or damaged, please contact customer support.

- Slide Body (Red)
- Side Panels (Blue, Dinosaur Design) x 2
- Stair Steps (Gray) x 2
- Basketball Hoop (White)
- Inflated Ball (Yellow)
- Fasteners/Connectors (Gray, large screw-like) x 6
- Small Connectors (Red) x 2

ASSEMBLY INSTRUCTIONS

Assembly is quick and requires no tools. Follow these steps:

1. Lay the main slide body (red) flat on the floor.
2. Attach the blue side panels (dinosaur design) to the sides of the slide body. Ensure the designated slots align and click into place.
3. Insert the gray stair steps into the corresponding slots on the side panels.
4. Secure all connections using the large gray screw-like fasteners. Twist them until snug.
5. Attach the basketball hoop to the designated area on one of the blue side panels.
6. Place the inflated ball near the hoop for immediate play.

Important: Ensure all connections are securely fastened before allowing children to use the slide.

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating the assembly process of the Nyeekoy 3-in-1 Toddler Slide.

OPERATING INSTRUCTIONS

Using the Slide

1. Ensure the slide is placed on a flat, stable surface, either indoors or outdoors.
2. Children should climb the steps one at a time, holding onto the handrails for support.
3. At the top, children should sit down facing forward, with their feet first on the slide surface.
4. Slide down feet first.
5. Clear the landing area promptly after sliding to allow others to use the slide safely.

Using the Basketball Hoop

1. Use the provided inflated ball or other soft, lightweight balls suitable for the hoop.
2. Encourage children to practice throwing and aiming for the hoop.

Your browser does not support the video tag.

Video: An overview of the Nyeekoy 3-in-1 Toddler Slide in use, showcasing children playing on the slide and with the basketball hoop.

MAINTENANCE

Cleaning

- Wipe down the slide and all components regularly with a damp cloth and mild soap.
- Rinse thoroughly with water and dry completely to prevent water spots or residue.
- Avoid using abrasive cleaners or solvents, as these can damage the plastic.

Storage

- The slide features a foldable design for easy storage. Loosen the fasteners, pull up the slide, and fold the unit flat.
- Store in a cool, dry place away from direct sunlight when not in use for extended periods to prolong product life.

Foldable Design

Easy to Store & Save Space



Image: Visual guide on folding the slide for compact storage.

SAFETY GUIDELINES

- **Adult Supervision:** Always supervise children when they are using the slide.
- **Age and Weight Limit:** Designed for toddlers within 3 years old, with a maximum weight capacity of 88.25 lbs.
- **Stable Surface:** Place the slide on a level, stable surface to prevent tipping.
- **Clear Area:** Ensure the area around the slide, especially the landing zone, is clear of obstacles.
- **Proper Use:** Children should always slide feet first and one at a time. Do not allow climbing on the outside of the slide or standing on the slide surface.
- **Regular Inspection:** Periodically check all fasteners and connections to ensure they are secure.
- **Indoor/Outdoor Use:** Suitable for both environments, but protect from extreme weather conditions.

Rounded corners avoid injury from bumps

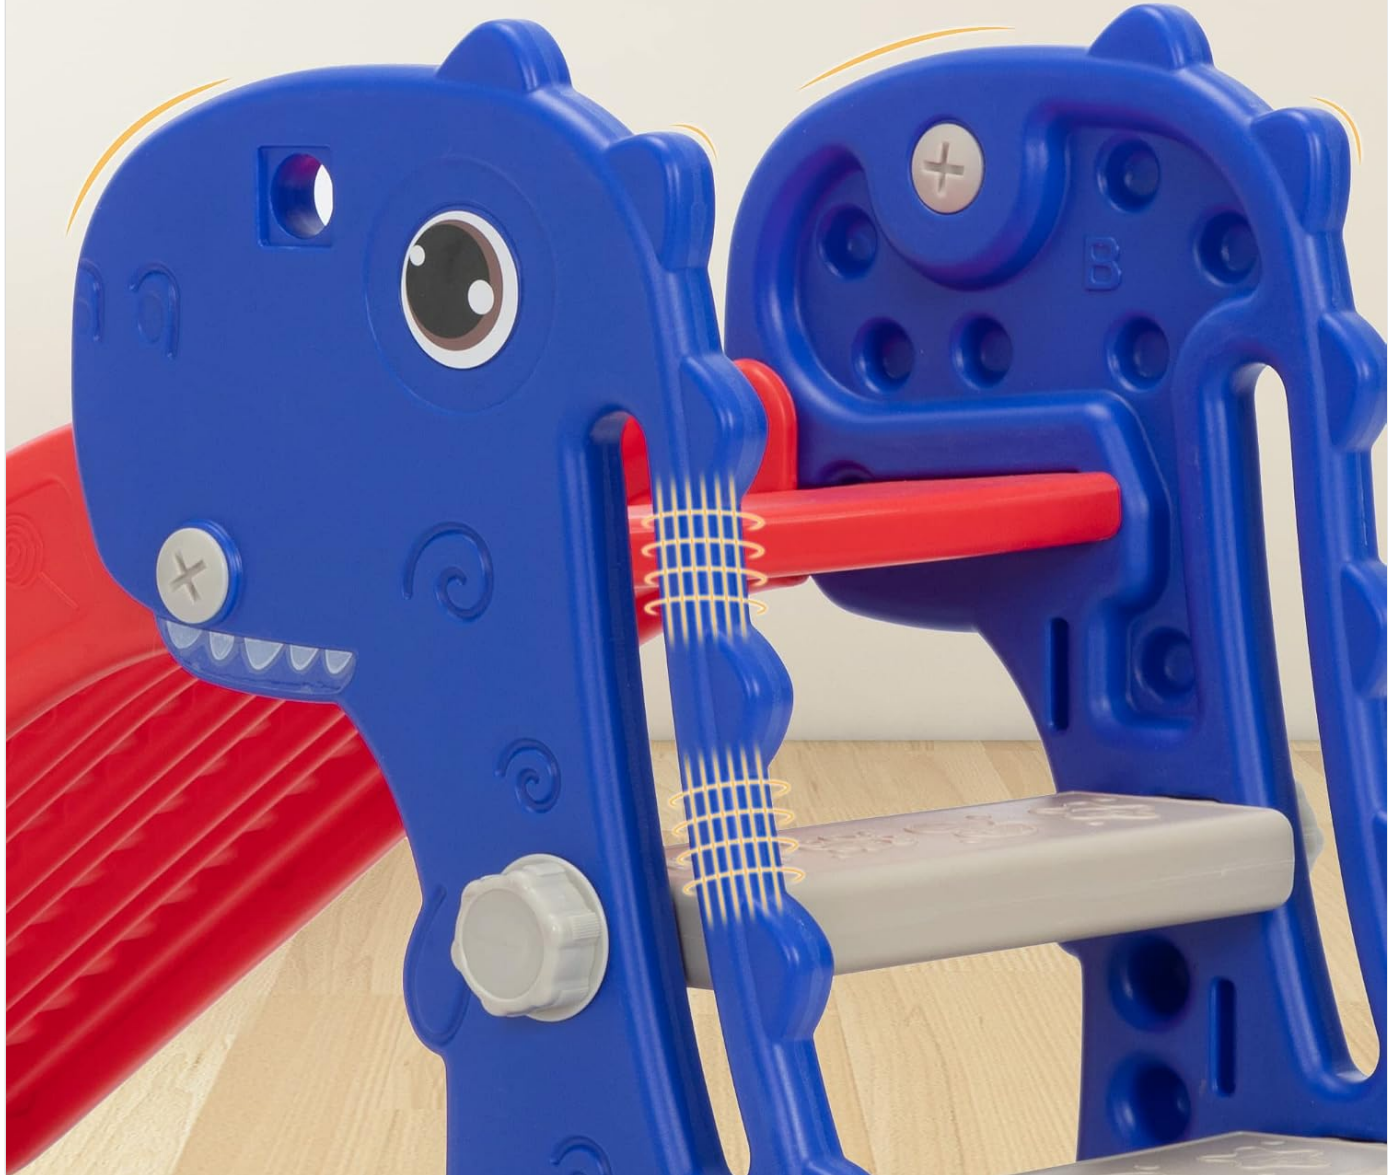


Image: Detail of the rounded corners on the slide, emphasizing safety features.

TROUBLESHOOTING

- **Slide feels unstable:** Check all fasteners to ensure they are tightly secured. Relocate the slide to a completely flat surface.
- **Parts do not fit:** Verify that you are using the correct parts for each step as indicated in the assembly instructions. Ensure parts are oriented correctly.
- **Difficulty folding:** Ensure all large screw-like fasteners are sufficiently loosened before attempting to fold the slide.

SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	0983
Material	Polyethylene, Polypropylene
Product Dimensions (L x W x H)	48" x 21.75" x 20.5"
Maximum Weight Recommendation	88.25 Pounds
Age Range	Toddler; Baby (within 3 years old)
Assembly Required	Yes

for kids under 3 years old

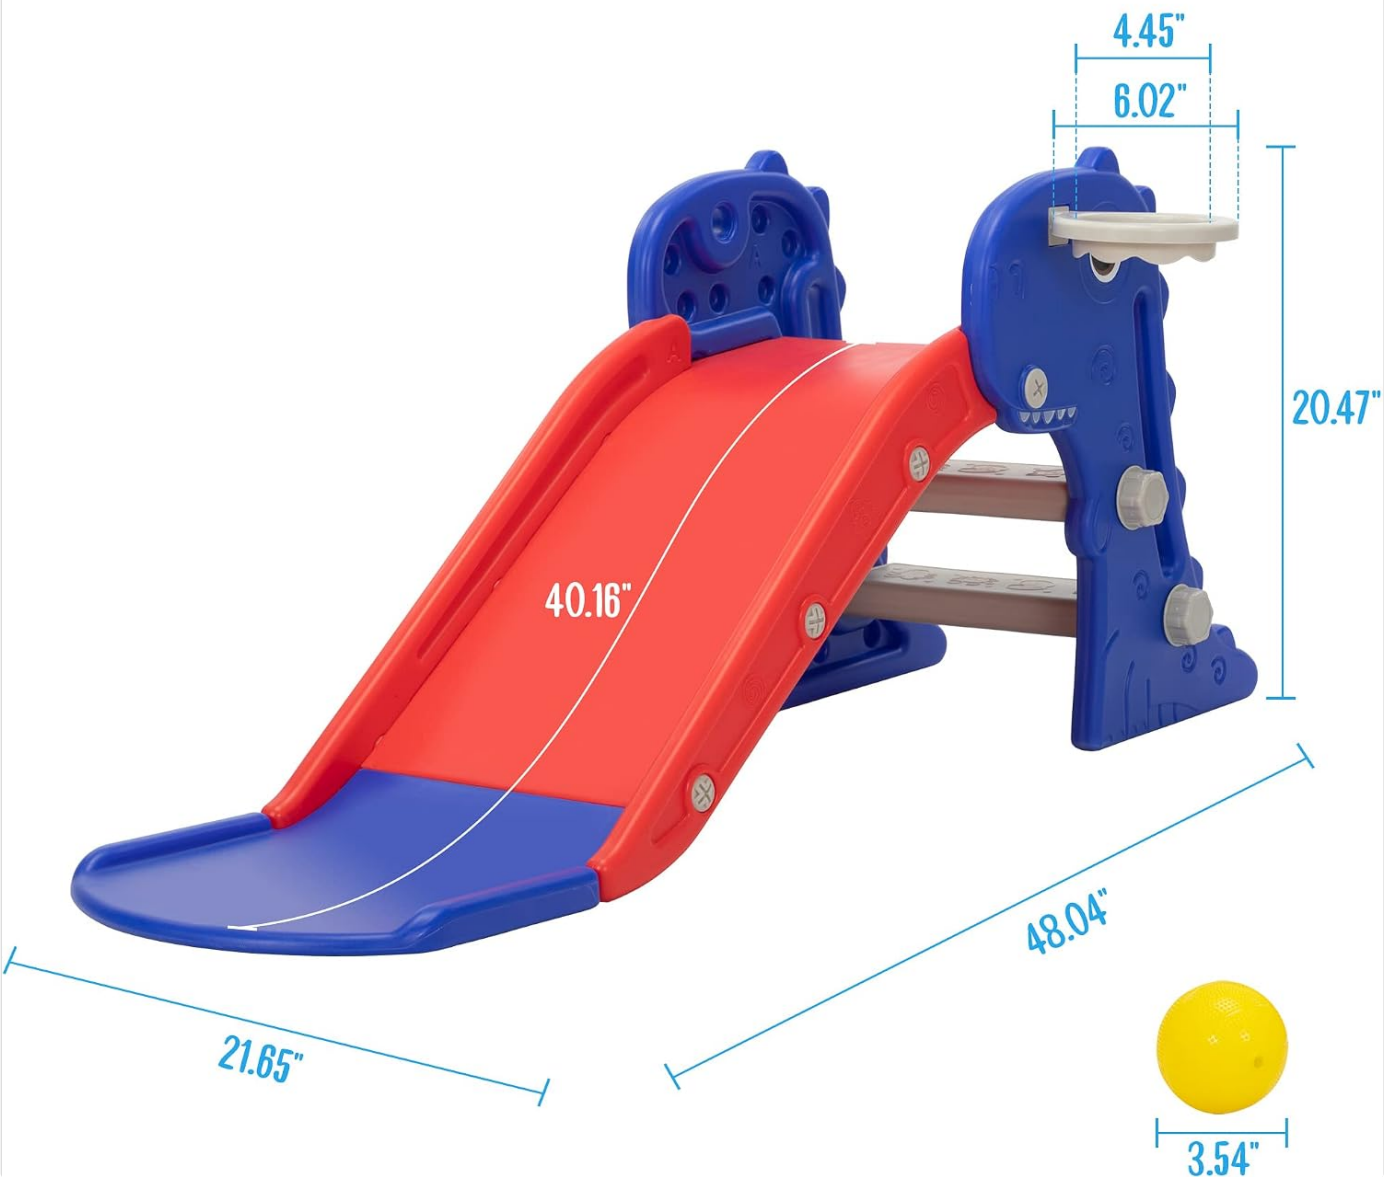


Image: Detailed dimensions of the assembled slide.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided at the point of purchase or visit the official Nyeekoy website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question