

TASVAC S8

TASVAC Cordless Vacuum Cleaner User Manual

Model: S8

INTRODUCTION

Thank you for choosing the TASVAC S8 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.



TASVAC

**28Kpa Aspirateur
Balai sans Fil**

 Nettoyage sans Fil	 Filtre à Cinq Niveaux	 Lumière Frontale LED
 50 Minutes Durée Maximale	 Tête d'aspiration Multiple	
 LED Affichage de la Batterie	 2200mAh Capacité	

The TASVAC S8 Cordless Vacuum Cleaner offers powerful 28KPa suction, a five-level filtration system, LED front lighting, up to 50 minutes of runtime, multiple cleaning heads, a battery level display, and a 2200mAh capacity battery.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance or the battery pack.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter
- Battery Pack
- User Manual



An overview of the TASVAC S8 Cordless Vacuum Cleaner and its included accessories, such as the main unit, extension wand, floor brush, various tools, and charging components.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your TASVAC S8 vacuum cleaner:



The TASVAC S8 vacuum cleaner shown with its main body, extension tube, motorized brush head, crevice tool, and 2-in-1 brush tool, alongside its digital display unit.

LED Display Indicators

The intelligent LED display provides real-time information about the vacuum's status:



The LED display indicates battery power, filter cleaning reminder, low power reminder, brush roll blockage reminder, power indicator, and speed control button.

- **Battery Power Indication:** Shows remaining battery percentage.
- **Filter Cleaning Reminder:** Alerts when the filter needs cleaning.
- **Low Power Reminder:** Indicates when the battery is low and needs charging.
- **Brush Roll Blockage Reminder:** Notifies if the brush roll is obstructed.
- **Power Indicator:** Displays the current power level (three levels).
- **Speed Control Button:** Allows switching between power modes.

SETUP

Assembly

1. Insert the extension wand into the main motor unit until it clicks into place.
2. Attach the motorized floor brush to the other end of the extension wand until it clicks.
3. For handheld use, attach the desired accessory (crevice tool or 2-in-1 brush tool) directly to the main motor unit.

Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

1. Connect the power adapter to the charging port on the battery pack or the main unit.
2. Plug the power adapter into a wall outlet.
3. The LED display will show charging progress. A full charge typically takes 4-5 hours.



The vacuum can be charged while mounted on the wall, or the battery can be removed and charged independently.

OPERATING INSTRUCTIONS

Powering On/Off and Mode Selection

1. Press the power button to turn the vacuum on. It will start in the default power mode.
2. Press the speed control button on the LED display to cycle through the three available power levels (low, medium, high) to suit your cleaning needs.
3. Press the power button again to turn the vacuum off.

Using Different Configurations

The TASVAC S8 can be used in various configurations for versatile cleaning:



The vacuum can be configured as a full-size stick vacuum, a compact stick vacuum, or a handheld vacuum for various cleaning tasks.

- **Stick Vacuum:** Use with the extension wand and motorized floor brush for cleaning floors and carpets. The

front LED lights illuminate dust in dark areas.

- **Handheld Vacuum:** Detach the extension wand and attach the crevice tool or 2-in-1 brush tool directly to the main unit for cleaning furniture, car interiors, stairs, and tight spaces.
- **Extended Reach:** Use the extension wand with a smaller attachment for cleaning high ceilings, curtains, or hard-to-reach areas.




Effective for cleaning upholstery.



Reaches high places easily.

Surface Compatibility

The TASVAC S8 is designed for various floor types:

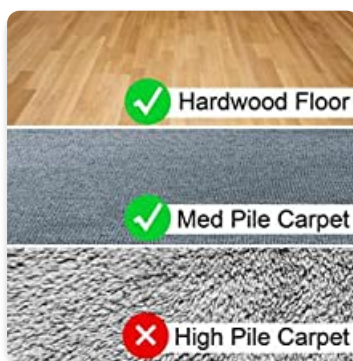


The vacuum is suitable for hardwood floors and medium pile carpets, but not recommended for high pile carpets.

- **Hardwood Floors:** Excellent for hard surfaces. The LED lights help spot dust.
- **Medium Pile Carpet:** Suitable for most carpets with medium pile.
- **High Pile Carpet:** Not recommended for high pile carpets as it may reduce efficiency or cause brush roll entanglement.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

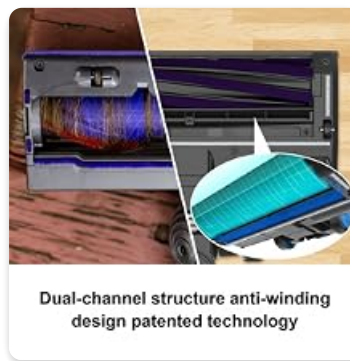

Visual guide for emptying the dustbin, cleaning the filter, and removing debris from the brush roll.

Emptying the Dustbin

Empty the dustbin when the 'Filter Cleaning Reminder' appears on the LED display or when the MAX line is reached.

1. Hold the main unit over a trash can.
2. Press the dustbin release button to open the bottom flap and empty the contents.
3. Close the dustbin flap securely until it clicks.

Cleaning the Filter

The filter should be cleaned regularly, especially when the 'Filter Cleaning Reminder' is active.

1. Twist and remove the dustbin from the main unit.
2. Remove the filter assembly from the dustbin.
3. Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under running water.
4. Ensure the filter is completely dry before reassembling. Allow at least 24 hours for air drying.

Cleaning the Brush Roll

Check the brush roll regularly for tangled hair or debris.

1. Turn off the vacuum and detach the motorized floor brush.
2. Locate the brush roll release tab/lock on the side of the brush head and open it.
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure the lock.

TROUBLESHOOTING

If you encounter issues with your TASVAC S8, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power.	Dustbin is full, filter is clogged, or blockage in hose/brush.	Empty dustbin, clean filter, check for and remove blockages.
Brush roll not spinning.	Brush roll is tangled with hair/debris or blocked.	Clean the brush roll, remove any obstructions.
LED display shows 'Low Power Reminder'.	Battery is low.	Recharge the battery.
LED display shows 'Filter Cleaning Reminder'.	Filter is dirty.	Clean the filter thoroughly.
LED display shows 'Brush Roll Blockage Reminder'.	Brush roll is obstructed.	Inspect and clear any blockages from the brush roll.

SPECIFICATIONS

Feature	Specification
Brand	TASVAC
Model Number	S8
Color	Blue
Voltage	120 Volts
Special Feature	Bagless
Item Weight	3.65 Kilograms
Power Source	Battery Powered
Form Factor	Stick
Recommended Surface	Carpet, Hard Floor
Package Dimensions	42.29 x 31.3 x 18.5 cm

WARRANTY AND SUPPORT

TASVAC products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or the official TASVAC website. Please retain your proof of purchase for warranty claims.

© 2024 TASVAC. All rights reserved.