

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ELEHOT-Store](#) /

› [ELEHOT-STORE Professional Hair Clipper User Manual](#)

ELEHOT-Store HC-5380-Nr02-B

ELEHOT-STORE Professional Hair Clipper User Manual

Model: HC-5380-Nr02-B

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your ELEHOT-STORE Professional Hair Clipper. Please read this manual thoroughly before first use and keep it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your device.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance immediately after use and before cleaning.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF position, then remove plug from outlet.
- The appliance is designed for hair cutting only. Do not use it for other purposes.

PACKAGE CONTENTS



The image displays the complete package contents, including the hair clipper, its charging stand, various guide combs, a pair of scissors, a cleaning brush, and a comb. This provides a visual representation of all items you should find in the box.

- ELEHOT-STORE Professional Hair Clipper
- 8 Guide Combs (lengths: 4-6mm, 7-9mm, 10-12mm, 13-15mm, 16-18mm, 22-24mm, Left Taper, Right Taper)
- Charging Stand
- Power Adapter with USB Cable
- Cleaning Brush
- Comb
- Scissors
- User Manual (this document)

PRODUCT FEATURES

- **Ceramic Blades:** Equipped with durable and wear-resistant ceramic blades, offering precise cutting. Blade configurations include 1 mm, 1.3 mm, 1.6 mm, and 1.9 mm. Self-sharpening technology ensures long-term durability.



This image illustrates the four adjustable blade lengths (1.0mm, 1.3mm, 1.6mm, 1.9mm) and the various guide comb attachments, demonstrating the versatility of the clipper for different hair lengths.

- **8 Guide Combs:** A comprehensive set of combs for various cutting lengths, including 4-6mm, 7-9mm, 10-12mm, 13-15mm, 16-18mm, 22-24mm, and specialized Left and Right taper combs.
- **LCD Display:** Provides real-time information such as battery percentage, low battery warning, and key lock status.



The image shows the various icons displayed on the clipper's LCD screen, indicating features like ceramic blades, full charge, adjustable length, remaining battery, power switch, low battery warning, and the lock function.

- **Long Battery Life & Quick Charge:** The built-in 2000 mAh Li-ion battery provides approximately 150 minutes of cordless operation after a 2.5-hour charge. The clipper can also be used while connected to power.



This image highlights the charging capabilities of the hair clipper, detailing its 2000 mAh Li-ion battery, 2.5-hour charging time, and over 150 minutes of runtime, along with its USB charging compatibility.

- **IPX6 Waterproof & Washable Head:** The blade head is removable and can be washed directly under water for easy cleaning.



The image demonstrates the IPX6 waterproof rating of the hair clipper, showing the blade head being rinsed under running water, indicating easy and safe cleaning.

- **Quiet Operation:** Designed for a satisfying haircut experience with reduced noise.



This image visually represents the quiet operation mode of the hair clipper, suggesting a comfortable and less noisy grooming experience.

SETUP

- Initial Charging:** Before first use, fully charge the hair clipper. Connect the USB cable to the charging stand and plug the adapter into a power outlet. Place the clipper onto the charging stand. The LCD display will show the charging progress. A full charge takes approximately 2.5 hours.
- Attaching Guide Combs:** Select the desired guide comb based on the hair length you wish to achieve. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely attached before use.
- Detaching Guide Combs:** To remove a guide comb, gently pull it upwards from the clipper blade.

OPERATING INSTRUCTIONS

- Turning On/Off:** Press the Power button to turn the clipper on. Press it again to turn it off.
- Adjusting Blade Length:** The clipper features four adjustable blade lengths (1.0mm, 1.3mm, 1.6mm, 1.9mm). Use the adjustment lever or button on the clipper body to select the desired length.
- Hair Cutting:**
 - Ensure hair is clean and dry before cutting.
 - For best results, comb the hair in the direction of growth.
 - Start with a longer guide comb than you think you need, and gradually switch to shorter combs if desired.
 - Hold the clipper with the blade flat against the head and move it slowly against the direction of hair growth.
 - Overlap strokes to ensure an even cut.



This image demonstrates the versatility of the hair clipper for various grooming tasks, including trimming beards and cutting hair on different parts of the head, showcasing its practical application.

MAINTENANCE AND CLEANING

- Cleaning the Blade:** After each use, turn off and unplug the clipper. Remove the guide comb. The blade head is removable and can be rinsed directly under running water. Use the included cleaning brush to remove any trapped hair or debris from the blades.



This image shows the detachable blade head of the hair clipper being cleaned under running water, emphasizing its IPX6 waterproof design for easy maintenance.

- Drying:** After rinsing, shake off excess water and allow the blade to air dry completely before reattaching it to the clipper body or storing.
- Lubrication:** Periodically, apply a few drops of clipper oil (not included, but generally recommended for clippers) to the blades to ensure smooth operation and prevent rust. Turn the clipper on for a few seconds to distribute the oil.
- Storage:** Store the clipper and its accessories in a dry, cool place, away from direct sunlight and moisture.

Important: When cleaning, ensure water does not contact the charging port to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully. Ensure the charging stand and adapter are properly connected.
Poor cutting performance or pulling hair.	Blades are dirty or dull. Hair buildup.	Clean the blades thoroughly. Lubricate the blades. If issues persist, consider professional sharpening or blade replacement (if available).
Clipper makes unusual noise.	Lack of lubrication. Debris in motor.	Apply clipper oil to the blades. Ensure no hair or debris is obstructing the motor area.
LCD display not working.	Battery issue or internal fault.	Ensure the clipper is charged. If the problem persists, contact customer support.

SPECIFICATIONS

Model Number	HC-5380-Nr02-B
Blade Material	Ceramic
Power Source	Battery Powered
Battery Type	Rechargeable Li-ion (2000 mAh)
Charging Time	Approx. 2.5 Hours
Operating Time	Approx. 150 Minutes (cordless)
Waterproof Rating	IPX6
Included Components	Hair Clipper, 8 Combs, Scissor, Comb, Cleaning Brush
Dimensions	22.4 x 21.4 x 7.6 cm (Package)
Weight	630 g (Package)

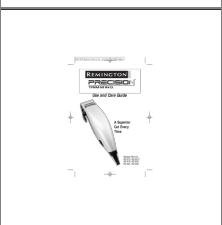
WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official ELEHOT-Store website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact ELEHOT-Store customer service for assistance.

© 2024 ELEHOT-Store. All rights reserved.

Related Documents - HC-5380-Nr02-B

 ELEHOT-Store MGS-8801 Kneading Shoulder Massager User manual for the ELEHOT-Store MGS-8801 Kneading Shoulder Massager, providing safety warnings, operating instructions, parts list, technical data, and troubleshooting.	<u>ELEHOT-Store MGS-8801 Kneading Shoulder Massager User Manual</u> User manual for the ELEHOT-Store MGS-8801 Kneading Shoulder Massager, providing safety warnings, operating instructions, parts list, technical data, and troubleshooting.
 Remington Precision Trimming Hair Clipper Use and Care Guide Comprehensive use and care guide for Remington Precision Trimming hair clippers (models HC-810, HC-815, HC-8017, HC-912, HC-920, HC-921, HC-930). Includes safety instructions, product features, how-to guides for haircuts, beard trimming, maintenance, disposal, and warranty information.	<u>Remington Precision Trimming Hair Clipper Use and Care Guide</u> Comprehensive use and care guide for Remington Precision Trimming hair clippers (models HC-810, HC-815, HC-8017, HC-912, HC-920, HC-921, HC-930). Includes safety instructions, product features, how-to guides for haircuts, beard trimming, maintenance, disposal, and warranty information.

	<p><u>Glaker HC-2022 Household Hair Clipper User Manual</u></p> <p>User manual for the Glaker HC-2022 Household Hair Clipper, detailing safety instructions, components, operation, charging, maintenance, and warranty information.</p>
	<p><u>Braun Hair Clipper HC 5090 User Manual and Safety Guide</u></p> <p>Comprehensive guide for the Braun Hair Clipper models HC 5090, HC 5050, HC 5030, and HC 5010, covering safety instructions, product description, charging, hair cutting techniques, cleaning, maintenance, and warranty information.</p>
	<p><u>Remington HC-1000, HC-1050, HC-2000 Hair Clipper Use and Care Guide</u></p> <p>Comprehensive guide for Remington HC-1000, HC-1050, and HC-2000 hair clippers, covering important safety instructions, product features, usage tips, maintenance, and warranty information.</p>
	<p><u>Braun Series Hair perfect Hair Clipper HC 50N-R HC 20N-R User Manual</u></p> <p>Comprehensive user manual for the Braun Series Hair perfect hair clipper (models HC 50N-R and HC 20N-R), covering safety instructions, parts description, charging, usage, maintenance, and warranty information.</p>