

AREYZIN CBG-BG220

AREYZIN Body Hair Trimmer User Manual

Model: CBG-BG220

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your AREYZIN Body Hair Trimmer. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

Important Safeguards

- Caution: Be careful while handling the blades.
- Do not submerge the entire device in water, only the washable head.
- Keep out of reach of children.
- Do not use if the device or charging cable is damaged.

3. PACKAGE CONTENTS

Your AREYZIN Body Hair Trimmer package should include:

- 1 x Body Hair Trimmer
- 1 x Detail Cutlass Trimmer head
- 1 x 2mm Guide Comb
- 1 x 3-6mm Guide Comb
- 1 x 9-12mm Guide Comb
- 1 x USB-B Charging Cable
- 1 x Cleaning Brush
- User Manual (this document)

Pack List



2mm comb, 1pcs
3-6mm comb, 1pcs
9-12mm comb, 1pcs
Body hair trimmer, 1pcs
Detail Cutlass trimmer, 1pcs
USB-B Cable, 1pcs, Cleaning Brush, 1pcs

Image: Contents of the AREYZIN Body Hair Trimmer package, showing the main trimmer unit, interchangeable heads, various guide combs, USB charging cable, and a small cleaning brush.

4. PRODUCT OVERVIEW AND FEATURES

The AREYZIN Body Hair Trimmer is designed for effective and comfortable hair removal across various body areas.

Key Features:

- **Powerful and Fast:** 6500 RPM high-power motor for efficient trimming.
- **Safe and Smooth Shave:** R-angle design with rust-proof ceramic snap-in blades, BPA-free, to prevent cuts and irritation.
- **All-in-One Trimmer:** Features 2 wide blades (20mm/32mm) and 3 length guide combs for customized shaving on armpits, legs, arms, back, shoulders, or bikini area.
- **USB Rechargeable & Quiet:** Up to 90 minutes of battery life on a full charge, with a low-noise design.
- **Wet & Dry Use:** IPX7 waterproof design allows for use in wet or dry conditions. Washable and removable ceramic head for easy cleaning.
- **Compact and Portable:** Lightweight and space-saving design, suitable for home, business, and travel.



Image: The AREYZIN Body Hair Trimmer in gray and gold, demonstrating its waterproof feature with water splashes, alongside its various guide combs and a detail trimmer head.

SPECIAL DESIGN FOR SAFE



R-angle design



Steel blade



Ceramic blade



BPA Free

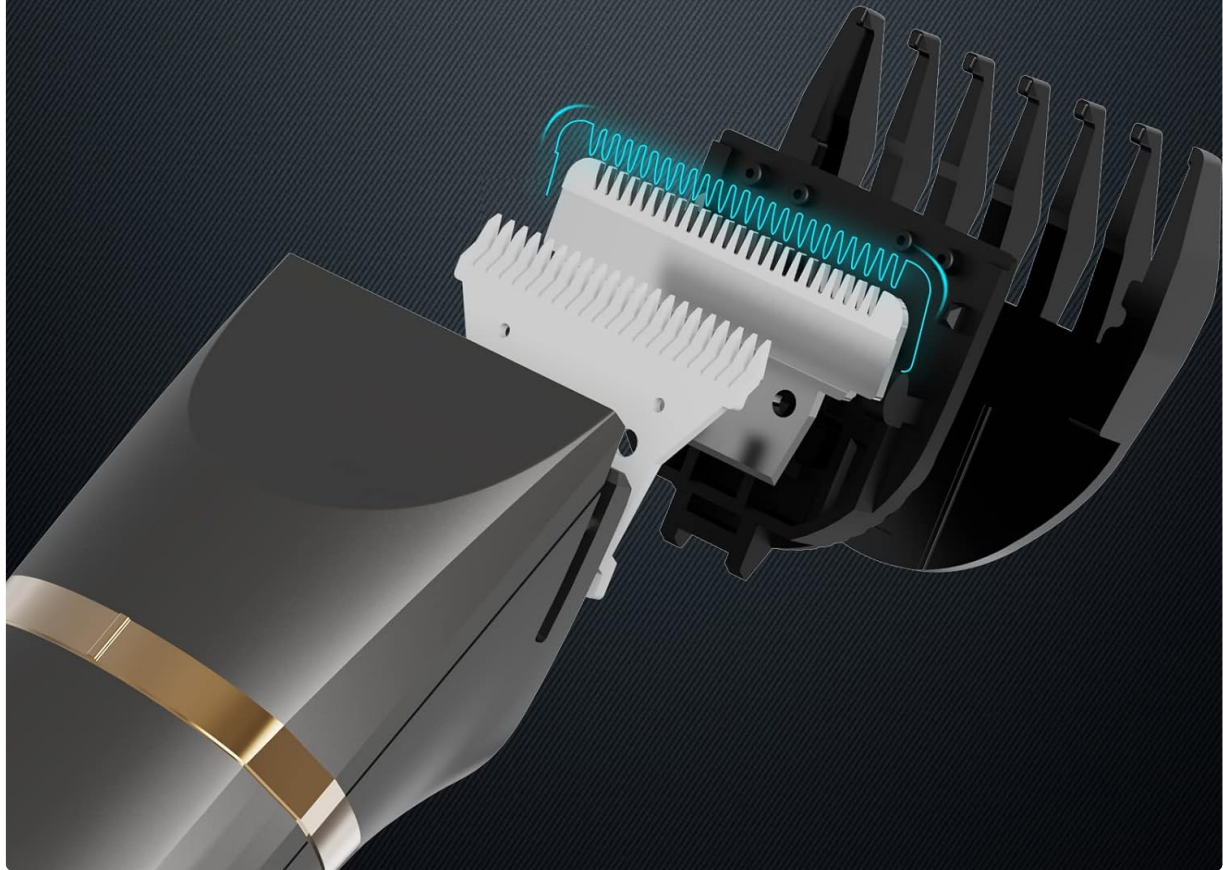


Image: A close-up view of the trimmer head, highlighting its R-angle design, steel blade, ceramic blade, and BPA-free construction for safe and smooth trimming.

5. SETUP

5.1 Charging the Trimmer

Before first use, fully charge the device.

1. Connect the USB-B charging cable to the trimmer's charging port.
2. Plug the USB end into a compatible USB power source (e.g., computer, adapter, power bank, car charger).
3. The indicator light will show charging status. A full charge provides up to 90 minutes of use.

RECHARGEABLE 2-IN-1 TRIMMER



Computer



Adapter



Power Bank



Car charger



Image: The trimmer connected to its USB charging cable, illustrating different compatible charging methods such as computer, adapter, power bank, and car charger.

5.2 Attaching/Changing Trimmer Heads and Guide Combs

The trimmer comes with interchangeable snap-in heads and guide combs for different trimming needs.

1. To remove a head: Gently pull the current head upwards from the main body.
2. To attach a head: Align the desired head with the main body and push down until it snaps securely into place.
3. To attach a guide comb: Select the desired length comb (2mm, 3-6mm, or 9-12mm). Snap the comb onto the trimmer head until it clicks.
4. To remove a guide comb: Gently pull the comb away from the trimmer head.

WASHABLE BLADE & SPLASHPROOF



IPX7
Splashproof



Image: A visual representation of the trimmer's versatility, displaying the main unit, two different trimmer heads (20mm and 32mm), and three guide combs (2mm, 3-6mm, 9-12mm) for multi-purpose body grooming.

6. OPERATING INSTRUCTIONS

6.1 Basic Trimming

1. Ensure the trimmer is charged and the desired head/comb is attached.
2. Press the power button to turn on the device.
3. For best results, hold the device at a 90-degree angle to the skin.
4. Move the device slowly and steadily against the direction of hair growth with light pressure.
5. For sensitive areas, stretch your skin taut with your free hand to ensure a smooth pass.

6.2 Wet & Dry Use

The AREYZIN Body Hair Trimmer is designed for both wet and dry use due to its IPX7 waterproof rating.

- **Dry Use:** Ideal for quick touch-ups or when water is not readily available.
- **Wet Use:** Can be used in the shower or with shaving cream/gel for a smoother experience.

MULTIPURSE FOR AREAS OF BODY



Image: The trimmer covered in water droplets, illustrating its IPX7 waterproof and splashproof capabilities, suitable for both wet and dry grooming.

6.3 Trimming Tips

- Always ensure the blade direction is correct for safe trimming. Refer to product images for visual guidance.
- For a closer shave, use the trimmer without a guide comb.
- Clean the trimmer head regularly during use to prevent hair buildup and maintain performance.

Official Product Video: Body hair trimmer for men bikini trimmer for women

Your browser does not support the video tag.

Video: An official product video demonstrating the use of the AREYZIN body hair trimmer for both men and women, highlighting its versatility and ease of use for various body areas.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. Turn off the trimmer before cleaning.

2. Remove the trimmer head by pushing the top of the blade with your thumb and pushing forward.
3. Use the provided cleaning brush to remove any trapped hair from the blades and inside the trimmer body.
4. The ceramic head is washable. Rinse it under running water.
5. **Important:** Do not flush the main body of the trimmer with water. Ensure no water enters the internal components.
6. Allow all parts to air dry completely before reattaching the head and storing.

8. TROUBLESHOOTING

If you encounter any issues with your trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the device is fully charged. Connect it to the charger and wait for the indicator light.
- **Reduced trimming performance:** Clean the blades and guide combs thoroughly to remove any hair buildup. Ensure the blades are properly attached.
- **Irritation or pulling:** Ensure the blades are clean and properly aligned. Move the trimmer slowly and gently against the direction of hair growth. If irritation persists, ensure the guide comb is appropriate for your hair type and skin sensitivity.
- **Unusual noise:** Turn off the trimmer and check for any obstructions in the blade area. Clean thoroughly. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Specification
Model Number	CBG-BG220
Product Dimensions	5.8 x 1.3 x 1 inches
Item Weight	7.05 ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Waterproof Rating	IPX7
Blade Material	Ceramic
Motor Speed	6500 RPM
Battery Life	Up to 90 minutes

10. WARRANTY AND SUPPORT

AREYZIN products are designed for quality and durability. For any warranty claims, technical support, or product inquiries, please contact AREYZIN customer service through the retailer where you purchased the product or visit the official AREYZIN website. Please retain your proof of purchase.

11. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

