

[Manuals.plus](#) /

> [USHINING](#) /

> USHINING 4G Senior Flip Phone T330D User Manual

USHINING T330D

USHINING 4G Senior Flip Phone T330D User Manual

Model: T330D

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your USHINING 4G Senior Flip Phone T330D. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: The USHINING T330D flip phone shown both open and closed, illustrating its compact design and key features such as dual SIM capability, built-in torch, camera, FM radio, calendar, alarm clock, MP3 player, and extended battery life.

2. SAFETY INFORMATION

- Do not expose the phone to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the phone to severe impact.
- Use only manufacturer-approved batteries and charging accessories.
- Keep the phone away from medical devices, as it may interfere with their operation.
- Do not attempt to disassemble or modify the phone.

3. PACKAGE CONTENTS

Verify that all items are present in the package:



Image: An illustration showing the complete package contents, including the 4G senior cell phone, charging dock, charging cord, user manual, and the long-lasting battery.

- USHINING 4G Senior Flip Phone T330D
- Charging Dock
- Charging Cord (USB cable and power adapter)
- User Manual
- Rechargeable Battery

4. PHONE OVERVIEW

The USHINING T330D features a user-friendly design with a main internal display and a smaller external display for quick information.

2.4"/1.77" DUAL TFT DISPLAY SCREEN



Image: The USHINING T330D flip phone displaying its 2.4-inch main TFT screen when open and its 1.77-inch external TFT screen when closed, showing time and date.

Key Features:

- **Dual TFT Displays:** 2.4-inch internal screen and 1.77-inch external screen.
- **Large Buttons:** Easy to press and navigate.
- **SOS Emergency Button:** Located on the back for quick access.
- **Dual SIM Support:** Allows for two SIM cards.
- **Integrated Torch:** For illumination in dark environments.
- **FM Radio & MP3 Player:** For entertainment.
- **Camera:** For basic photo capture.
- **Charging Dock:** Convenient charging solution.

5. SETUP

5.1. SIM Card and Battery Installation

Before using your phone, you must install the SIM card(s) and battery.

1. **Remove the Back Cover:** Gently pry open the back cover of the phone.

2. **Insert SIM Card(s):** Locate the SIM card slots. This phone supports Dual SIM. Carefully slide your activated SIM card(s) into the designated slots with the gold contacts facing down. Ensure they are securely in place.
3. **Insert MicroSD Card (Optional):** If you wish to expand storage for photos or MP3s, insert a MicroSD card into its dedicated slot.
4. **Insert Battery:** Align the battery contacts with the phone's contacts and gently press the battery into the compartment.
5. **Replace Back Cover:** Snap the back cover firmly into place.



Image: The rear view of the USHINING T330D phone with the battery compartment open, clearly showing the two SIM card slots and the MicroSD card slot for memory expansion.

5.2. Charging the Phone

For initial use, fully charge the phone's battery.

1. **Using the Charging Dock:** Place the phone into the charging dock, ensuring the charging contacts align. Connect the charging cord to the dock and then to a power outlet.
2. **Direct Charging:** Alternatively, connect the charging cord directly to the phone's charging port and then to a power outlet.

The charging indicator will illuminate. A full charge typically takes approximately 3 hours. The phone features a 1000mAh battery for long standby time.



Image: The USHINING T330D phone resting in its dedicated charging dock, with an icon indicating its 1000mAh battery capacity and emphasizing its long standby time.

5.3. Powering On/Off

- **To Power On:** Press and hold the **Power/End Call** button until the screen lights up.
- **To Power Off:** Press and hold the **Power/End Call** button until the power-off options appear, then select 'Power Off'.

5.4. SIM Card Compatibility Note

This phone is designed to work with specific 4G GSM carriers. If you are activating a new SIM card, it is recommended to provide the IMEI number of an older phone or a smartphone to your carrier for activation. Then, insert the activated SIM card into this phone. Compatible carriers include T-Mobile (Prepaid plan), Metro by T-Mobile, Tello Mobile, Ultra Mobile, SpeedTalk, and Mint Mobile. This phone is **not compatible** with AT&T or its MVNOs (e.g., Cricket, Pure TalkUSA, Consumer Cellular, H2O), nor with any CDMA network carriers like Verizon, Sprint, Boost, PagePlus, or U.S. Cellular.

6. OPERATING INSTRUCTIONS

6.1. Basic Call Functions

- **Making a Call:** Dial the number using the keypad and press the **Call** button.
- **Answering a Call:** When the phone rings, open the flip or press the **Call** button.
- **Ending a Call:** Close the flip or press the **End Call** button.
- **Adjusting Call Volume:** Use the volume buttons on the side of the phone during a call.

6.2. SOS Emergency Calls

The SOS button allows for quick emergency contact. Up to 5 family numbers can be programmed.

1. **Setting SOS Numbers:** Navigate to the SOS settings in the phone menu to add up to 5 emergency contacts.
2. **Initiating SOS Call:** Press and hold the **SOS** button on the back of the phone for a few seconds. The phone will automatically call the programmed emergency contacts in sequence until one answers. It will also send an emergency SMS to these contacts.



Image: A visual representation of the SOS emergency call function, demonstrating how pressing the SOS button can alert up to five pre-set family members or emergency contacts.



Image: This graphic illustrates the dual protection features for users, including the SOS emergency call system for contacting family and a blacklist function to block unwanted calls.

6.3. Speed Dial

Assign frequently called numbers to speed dial buttons (M1, M2, M3, and numbers 2-9).

1. **Setting Speed Dial:** Go to the phonebook or speed dial settings in the menu. Select a number key (M1, M2, M3, or 2-9) and assign a contact from your phonebook or enter a new number.
2. **Using Speed Dial:** Press and hold the assigned speed dial button to call the corresponding contact.



Image: An elderly person holding the USHINING T330D, with an overlay illustrating the 8 speed dial buttons (M1, M2, M3, and 2-9) that can be programmed for quick access to important contacts.

6.4. Other Features

The USHINING T330D includes several practical features:



Image: A visual guide to the practical features of the USHINING T330D, including FM Radio, Camera, MP3 Player, Calendar, Alarm Clock, SMS messaging, Bluetooth connectivity, 4G LTE support, Speed Dial, Flashlight, and large, easy-to-use buttons.

- **FM Radio:** Access the FM radio application from the menu. Ensure headphones are connected to act as an antenna.
- **Camera:** Open the camera application to take photos. Photos are saved to the phone's internal memory or an inserted MicroSD card.
- **MP3 Player:** Transfer MP3 files to a MicroSD card and use the MP3 player application to listen to music.
- **Calendar & Alarm Clock:** Set reminders and alarms through the respective applications.
- **Flashlight:** Activate the built-in torch from the shortcuts or menu.
- **Bluetooth:** Pair with Bluetooth headsets or other devices via the Bluetooth settings.
- **SMS Messaging:** Compose and send text messages using the messaging application.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:** Do not overcharge the battery. If the phone will not be used for an extended period, charge it to about 50% and store it in a cool, dry place.
- **Storage:** Store the phone in a safe place, away from dust and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Solution
Phone does not power on	Ensure the battery is correctly installed and charged. Connect to the charger and try again.

Problem	Possible Solution
Cannot make or receive calls	Check if the SIM card is properly inserted and activated. Verify network signal strength. Ensure the phone is not in airplane mode.
Poor call quality	Move to an area with better network coverage. Check for obstructions around the speaker/microphone.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background data usage.
SOS button not working	Ensure emergency numbers are correctly programmed in the SOS settings. Test the function in a non-emergency situation.

9. SPECIFICATIONS

Feature	Detail
Model	T330D
Cellular Technology	4G LTE
Wireless Carrier	Unlocked (GSM)
Main Screen Size	2.4 Inches
External Screen Size	1.77 Inches
Resolution	240 x 320
RAM Memory Installed Size	64 MB
Battery Capacity	1000 Milliamp Hours (mAh)
Charging Time	Approximately 3 hours
Connectivity Technology	Bluetooth
SIM Card Slot Count	Dual SIM
Form Factor	Flip
Item Weight	6.7 ounces
Package Dimensions	5.16 x 4.41 x 2.44 inches

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or contact USHINING customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

