

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BERTSCHAT](#) /

› [BERTSCHAT® Rechargeable Heated Insoles Instruction Manual](#)

BERTSCHAT Rechargeable Heated Insoles

BERTSCHAT® Rechargeable Heated Insoles Instruction Manual

INTRODUCTION

Thank you for choosing BERTSCHAT® Rechargeable Heated Insoles. These insoles are designed to provide warmth and comfort for your feet in various conditions, from outdoor activities to daily wear. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your heated insoles.

PRODUCT OVERVIEW

The BERTSCHAT® Rechargeable Heated Insoles system includes the following components:

- 1 pair of BERTSCHAT® Heated Insoles
- 1 Remote Control
- 1 USB Charging Cable
- 2 Power Banks (integrated into insoles)



An image showing a pair of BERTSCHAT rechargeable heated insoles and their accompanying remote control. The insoles are black with a grey and orange design, featuring the 'BERTSCHAT' logo. The remote control is black with four orange buttons: power, H (High), M (Medium), and L (Low).

SETUP

- 1. Initial Charging:** Before first use, fully charge both insoles. Connect the USB charging cable to the charging port on each insole and to a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge typically takes several hours.
- 2. Insole Placement:** Insert the heated insoles into your shoes. Ensure they fit comfortably and do not cause any pressure points. If necessary, you may trim the insoles to fit your shoe size using the guide lines on the underside (trimming should only be done at the toe end and carefully to avoid damaging heating elements).
- 3. Remote Control:** The remote control is pre-paired with the insoles. Ensure the remote has a working battery.

CHARGING

The BERTSCHAT® Heated Insoles feature integrated power banks that are rechargeable via the provided USB cable.

- Locate the charging port on each insole.
- Connect the USB charging cable to the insole's charging port.
- Connect the other end of the USB cable to a standard USB power source (e.g., wall adapter, computer USB port, power bank).
- The indicator light on the insole will illuminate during charging and change color or turn off when fully charged.
- Charging time may vary depending on the power source and remaining battery level.

OPERATION

Your BERTSCHAT® Heated Insoles are operated using the wireless remote control.

- 1. Power On/Off:** Press the power button () on the remote control to turn the insoles on or off. The insoles will typically indicate power status with a light.
- 2. Adjusting Heat Levels:** Use the 'H', 'M', and 'L' buttons on the remote to select your desired heat level:
 - **H (High):** Provides maximum heat, up to 68°C. Ideal for extremely cold conditions.
 - **M (Medium):** Provides moderate heat for sustained comfort.
 - **L (Low):** Provides gentle warmth for extended use.
- 3. Temperature Sensor:** The integrated temperature sensor helps maintain an optimal foot climate and manages battery power efficiently.

MAINTENANCE

- **Cleaning:** Clean the insoles with a damp cloth. Do not submerge them in water or machine wash. Ensure they are completely dry before recharging or storing.
- **Storage:** Store the insoles in a cool, dry place when not in use. For long-term storage, it is recommended to charge the insoles to about 50% capacity every few months to preserve battery life.
- **Remote Control Battery:** Replace the remote control battery as needed. Refer to the remote control's specific instructions for battery type and replacement procedure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Insoles not heating	Low battery; Insoles not turned on; Remote control issue.	Charge insoles fully. Press power button on remote. Check remote battery.
Remote control not working	Remote battery depleted; Remote out of range; Pairing issue.	Replace remote battery. Ensure remote is close to insoles. Re-pair if necessary (refer to specific pairing instructions if provided with product).
Short heating duration	Insoles not fully charged; High heat setting used continuously; Extreme cold environment.	Ensure full charge. Use lower heat settings for longer duration.

SPECIFICATIONS

- **Material:** 70% plastic, 20% polyester, 10% rubber
- **Heating Duration:** Up to 12 hours (depending on heat setting and environmental conditions)
- **Maximum Temperature:** Up to 68°C
- **Power Source:** Integrated rechargeable battery (USB cable provided)
- **Control:** Wireless Remote Control

SAFETY INFORMATION

- Do not puncture, cut, or modify the insoles.

- Keep away from open flames and extreme heat.
- Do not use if the insoles appear damaged.
- Consult a physician before use if you have circulatory problems, diabetes, or are pregnant.
- Do not use while sleeping.
- Keep out of reach of children.
- Only use the provided charging cable.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact BERTSCHAT@ customer service directly. Keep your proof of purchase for warranty claims.