

[Manuals.plus](#) /

› [VIJIM](#) /

› Ulanzi ZERO Y Carbon Fiber Tripod Instruction Manual

VIJIM ZERO Y-J6

Ulanzi ZERO Y Carbon Fiber Tripod Instruction Manual

Model: ZERO Y-J6 | Brand: VIJIM

INTRODUCTION

The Ulanzi ZERO Y Carbon Fiber Tripod is designed for photographers and videographers seeking a lightweight, stable, and versatile support system. Constructed from full carbon fiber and aviation-grade aluminum alloy with CNC precision, it offers exceptional durability and stability. This tripod features a unique triangular tube center pole design for compact storage and a high-performance ball head for precise camera positioning.



The Ulanzi ZERO Y Carbon Fiber Tripod in use, showcasing its compact and stable design in an outdoor environment.

PRODUCT COMPONENTS

The Ulanzi ZERO Y Tripod consists of the following main components:

- **Tripod Legs:** Five-section carbon fiber legs with adjustable angle locks.

- **Center Column:** Two-stage detachable triangular tube center column.
- **Ball Head:** High-performance ball head with Arca-Swiss quick release plate, spirit level, and 360° panorama scale.
- **Quick Release Plate:** For quick attachment and detachment of cameras.
- **Hook:** Located at the bottom of the center column for adding counterweights.
- **Carry Case:** For convenient transport and storage.



Main components of the Ulanzi ZERO Y Carbon Fiber Tripod, including the ball head and carbon fiber legs.

SETUP INSTRUCTIONS

1. **Unfold the Tripod Legs:** Release the leg locks and extend the legs to your desired spread. The legs have three

adjustable angles: 20°, 55°, and 75°. Secure the leg angle locks.

2. **Extend Leg Sections:** Unlock the twist locks on each leg section and extend them to the desired height. Rotate the twist locks clockwise to secure them.
3. **Attach Camera to Quick Release Plate:** Screw your camera onto the Arca-Swiss quick release plate. Ensure it is securely tightened.
4. **Mount Quick Release Plate:** Insert the quick release plate with your camera into the ball head clamp. Tighten the clamp knob to secure the camera.
5. **Adjust Center Column (Optional):**
 - **For increased height:** Loosen the center column locking knob and extend the center column upwards. Tighten the knob to secure.
 - **For low-angle shooting:** The center column is detachable. Loosen the hook screw at the bottom of the center column, then remove the center column. The ball head can then be mounted directly onto the tripod base for a minimum height of 15.3 cm.



Detailed steps for detaching the center pole to achieve ultra-low angle photography, and examples of the tripod's height versatility.

OPERATING INSTRUCTIONS

Ball Head Operation

- **Adjusting Camera Angle:** Loosen the main locking knob on the ball head to adjust the camera's tilt and pan. Tighten the knob to secure the desired angle. The ball head allows for 20° fine adjustment.
- **360° Panning:** The ball head features a 360° panorama scale. Loosen the panning lock knob (usually located at the base of the ball head) to rotate the camera horizontally. Tighten to lock.
- **Horizontal and Vertical Shooting:** The ball head allows for quick switching between horizontal and vertical shooting orientations. Slightly raise the center axis to enable 360° adjustment.
- **Spirit Level:** Use the integrated spirit level on the ball head to ensure your camera is perfectly level.

Leg Angle and Height Adjustment

- **Leg Angle Adjustment:** Each leg has a lock mechanism that allows you to set the leg spread to 20°, 55°, or 75° for stability on various terrains or for low-angle shots.
- **Height Adjustment:** Extend or retract the 5-stage leg sections by twisting the leg locks. Ensure all sections are securely locked before use. The tripod can extend up to 156cm and collapse to 39cm.

高性能な自由雲台

0 15 30 45 60 75 90 105 120 135 150 165 180 195 210 225 240 255 270 285 300 315 330 345



Features of the high-performance ball head, including Arca-Swiss quick release and spirit level for precise camera positioning.

5段階調整可能



Illustration of the tripod's 5-stage height adjustment capabilities, ranging from compact to fully extended.

MAINTENANCE

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use. If used in sandy or dusty environments, carefully clean the leg sections and twist locks to prevent grit from affecting their operation.
- **Lubrication:** Moving parts, such as the ball head mechanism and leg locks, may benefit from occasional light lubrication with a silicone-based lubricant. Avoid using oil-based lubricants that can attract dust.
- **Storage:** Store the tripod in its provided carry case in a dry, cool place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, knobs, and leg locks for tightness. Ensure the quick release plate mechanism functions smoothly.

TROUBLESHOOTING

Issue: Tripod feels unstable or wobbly.

Solution:

- Ensure all leg sections are fully extended and their twist locks are securely tightened.
- Verify that the leg angle locks are engaged at one of the three set positions (20°, 55°, or 75°).
- If using the center column, ensure its locking knob is fully tightened.
- For added stability, especially in windy conditions, hang a weight (e.g., a camera bag) from the hook at the bottom of the center column.

Issue: Ball head movement is stiff or jerky.

Solution:

- Ensure the main locking knob for the ball head is sufficiently loosened.
- Clean any dust or debris from the ball head mechanism. A small amount of silicone lubricant can be applied if necessary.

Issue: Leg twist locks are difficult to operate.

Solution:

- Clean the leg sections and twist lock mechanisms to remove any accumulated dirt or sand.
- Avoid overtightening the locks, as this can make them difficult to loosen later.

SPECIFICATIONS

Brand	VIJIM
Model Name	ZERO Y-J6
Material	Aluminum, Carbon Fiber, Brass, Metal
Maximum Height	1560 mm (156 cm)
Minimum Height	15.3 cm
Folded Length	39 cm
Item Weight	1 kg
Maximum Load Capacity	10 kg (Ball Head: 5 kg)
Leg Sections	5
Leg Angle Adjustments	20°, 55°, 75°
Tripod Head Type	Pan Handle Head, Ball Head
Compatible Devices	Cameras, Smartphones

取り外し可能なセンターポール



ノブを緩める



ロック解除



取り外し

The Ulanzi ZERO Y Tripod supporting a camera in diverse environments, demonstrating its robust design and versatility.

WARRANTY AND SUPPORT

The Ulanzi ZERO Y Carbon Fiber Tripod comes with a reliable long-term product warranty. For any malfunctions, questions, or support needs, please do not hesitate to contact our customer service team. We are committed to providing full support to ensure your satisfaction.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question